



⑩	DOME Cover	1
⑨	Lens	1
⑧	DOME Cover Screw Hole	3
⑦	Network Connector	1
⑥	Screw Hole	3
⑤	SDHC/SD Memory Card Slot	1
④	Link Indicator	1
③	Access Indicator	1
②	SDHC/SD Memory Card error Indicator	1
①	INITIAL SET Button	1
No.	PARTS NAME	QTY.