			08.11.
еобходимость о	бновления прошивки		
обавление режи	има "Firmware Update Mode" для з	загрузки прошивок болы	шого размера
	Setup		
Network	Maintenance		
System	System Name NetCamera		
Maintenance	Lawrence Li		
Information	System Reboot OK		
	Factory Default OK		
	Firmware Update Mode CHANGE		
	Firmware Updates	찾아보기	
	UN		
ак обновить про	шивку		
Если у Вашой и		105	
. ссли у Вашеи к			01/
B none Firmware	ороаtes -> выберите прошивку м	/eb-51110.2.2000.100 ->	нажмите кнопку ОК
	Live Setup	WEB Remote V	iewer
Analog Output     Video	Live Setup	WEB Remote V	iewer
Analog Output Video Audio	Live Setup Isintenance System Name NetCamera	WEB Remote V	lewer
Analog Output Video Audio Live TD	Live Setup Iaintenance System Name NetCamera	WEB Remote V	iewer
Analog Output Video Audio Live FTP Event	Live Setup Isintenance System Name NetCamera System Reboot OK	WEB Remote V	iewer
Analog Output Video Audio Live FTP Event Network	Live Setup Iaintenance System Name NetCamera System Reboot OK Factory Default OK	WEB Remote V	iewer
Analog Output Video Audio Live FTP Event Network System User	Live Setup Iaintenance System Name NetCamera System Reboot OK Factory Default OK	WEB Remote V	iewer
Analog Output Video Audio Live FTP Event Network System User Date / Time	Live Setup Iaintenance System Name NetCamera System Reboot OK Factory Default OK Firmware Updates	WEB Remote V	iewer
Analog Output Video Audio Live FTP Event Network System User Date / Time Maintenance	Live Setup Iaintenance System Name NetCamera System Reboot OK Factory Default OK Firmware UpdatesOK	WEB Remote V	iewer
Analog Output Video Audio Live FTP Event Network System User Date / Time Information	Live Setup Iaintenance System Name NetCamera System Reboot OK Factory Default OK Firmware Updates OK	WEB Remote V	lewer
Analog Output Video Audio Live FTP Event Network System User Date / Time Maintenance Information	Live Setup Iaintenance System Name NetCamera System Reboot OK Factory Default OK Firmware Updates 页 近日之一	WEB Remote V	iewer
Analog Output Video Audio Live FTP Event Network System User Date / Time Maintenance Information ДОждитесь завер	Live Setup Islantenance System Name NetCamera System Reboot ОК Factory Default ОК Firmware Updates ОК	WEB Remote V	iewer
Analog Output Video Audio Live FTP Event Network System User Date / Time Maintenance Information	Live Setup Islantenance System Name NetCamera System Reboot OK Factory Default OK Firmware Updates OK	WEB Remote V	iewer
Analog Output     Video     Audio     Live     FTP     Event     Network     System     User     Date / Time     Maintenance     Information	Live Setup Islantenance System Name NetCamera System Reboot OK Factory Default OK Firmware Updates OK	WEB Remote V	iewer
<ul> <li>Analog Output</li> <li>Video</li> <li>Audio</li> <li>Live</li> <li>FTP</li> <li>Event</li> <li>Network</li> <li>System</li> <li>User</li> <li>Date / Time</li> <li>Maintenance</li> <li>Information</li> </ul>	Live Setup Islaintenance System Name NetCamera System Reboot ОК Factory Default ОК Firmware Updates ОК	WEB Remote V	iewer
<ul> <li>Analog Output</li> <li>Video</li> <li>Audio</li> <li>Live</li> <li>FTP</li> <li>Event</li> <li>Network</li> <li>System</li> <li>User</li> <li>Date / Time</li> <li>Maintenance</li> <li>Information</li> </ul>	Live Setup Islantenance System Name NetCamera System Reboot OK Factory Default OK Factory Default OK Firmware Updates OK	WEB Remote V	iewer
a Analog Output Video Audio Live FTP Event Network System User Date / Time Maintenance Information	Live Setup Islantenance System Name NetCamera System Reboot OK Factory Default OK Factory Default OK Firmware Updates OK ОК	WEB Remote V	
<ul> <li>Analog Output</li> <li>Video</li> <li>Audio</li> <li>Live</li> <li>FTP</li> <li>Event</li> <li>Network</li> <li>System</li> <li>User</li> <li>Date / Time</li> <li>Maintenance</li> <li>Information</li> </ul>	Live Setup Islaintenance System Name NetCamera System Reboot ОК Factory Default ОК Firmware Updates ОК ОК ОК ОК ОК ОК ОК ОК ОК ОК ОК ОК ОК О	WEB Remote V	
а Analog Output Video Audio Live FTP Event Network System User Date / Time Maintenance Information	Live Setup Islantenance System Name NetCamera System Reboot OK Factory Default OK Factory Default OK Firmware Updates OK OK	WEB Remote V	
a Analog Output	Live Setup     kaintenance     System Name     NetCamera     System Reboot     OK     Factory Default     OK     Firmware Updates     OK     Dutenus npouecca     Upgrading     W is uploaded successfully.   Don't turn off unitil 1 minutes.	WEB Remote V	
<ul> <li>Analog Output</li> <li>Video</li> <li>Audio</li> <li>Live</li> <li>FTP</li> <li>Event</li> <li>Network</li> <li>System</li> <li>User</li> <li>Date / Time</li> <li>Maintenance</li> <li>Information</li> </ul>	Live Setup     kaintenance     System Name     NetCamera     System Reboot     OK     Factory Default     OK     Firmware Updates     OK     Duenus npouecca     Upgrading     W is uploaded successfully.           Don't turn off unitil 1 minutes.	WEB Remote V	
а Analog Output Video Audio Live FTP Event Network System User Date / Time Maintenance Information	Live Setup     Isintenance     System Name     NetCamera     System Reboot     OK     Factory Default     OK        Firmware Updates     OK     Dutenus mpoujecca           Upgrading              Vis uploaded successfully.	WEB Remote V	
а Analog Output Video Audio Live FTP Event Network System User Date / Time Maintenance Information	Lvc Setup     kaintenance     System Name     System Reboot     OK     Factory Default     OK     Firmware Updates     OK     Dutenus npouecca     Upgrading     W is uploaded successfully.   Don't turn off unitil 1 minutes.	WEB Remote V	
а Analog Output Video Audio Live FTP Event Network System User Date / Time Maintenance Information	Live Setup     kaintenance     System Name     NetCamera     System Reboot     OK     Factory Default     OK     Factory Default     OK     Firmware Updates     OK     Duentus npoujecca     Upgrading     W is uploaded successfully.              Don't turn off untill 1 minutes.	WEB Remote V	

		Setup	WEB Remote Viewer
	Network	Maintenance	
	System	System Name NetCamera	
	Maintenance		
	mornation	System Reboot OK	
		Factory Default OK	
		Firmware Update Mode CHANGE	
		Firmware Updates	
		SA	VE RESET
4) <u>/</u>	Дождитесь заве	ершения процесса	
		Upgrading	
		Don't turn off unitil 1 minutes.	
2_2		и версия прошивки Вашей камеры старше, цем 1105	
<u>-</u> - <u>-</u> -	Tyuy "Eirmwar		
т) і Н	ажмите кнопки	у CHANGE чтобы активировать режим Firmware Updat	Mode
		Live Setup	WEB Remote Viewer
	Analog Output	Maintenance	
	Video		
	Audio  Live	System Name NetCamera	
		System Name NetCamera	
	. FTP	System Reboot OK	
	FTP Event	System Reboot OK	
	FTP Event Network Output	System Name NetCamera System Reboot OK Factory Default OK	
	<ul> <li>FTP</li> <li>Event</li> <li>Network</li> <li>System</li> <li>User</li> </ul>	System Name NetCamera System Reboot OK Factory Default OK	
	<ul> <li>FTP</li> <li>Event</li> <li>Network</li> <li>System</li> <li>User</li> <li>Date / Time</li> </ul>	System Name NetCamera System Reboot OK Factory Default OK Firmware Update Mode CHANGE	
	<ul> <li>FTP</li> <li>Event</li> <li>Network</li> <li>System</li> <li>User</li> <li>Date / Time</li> <li>Maintenance</li> </ul>	System Name NetCamera System Reboot OK Factory Default OK Firmware Update Mode CHANGE Firmware Updates 및마보기	
	<ul> <li>FTP</li> <li>Event</li> <li>Network</li> <li>System</li> <li>User</li> <li>Date / Time</li> <li>Maintenance</li> <li>Information</li> </ul>	System Name NetCamera System Reboot OK Factory Default OK Firmware Update Mode CHANGE Firmware Updates OK	
	<ul> <li>FTP</li> <li>Event</li> <li>Network</li> <li>System User Date / Time</li> <li>Maintenance Information</li> </ul>	System Name NetCamera System Reboot OK Factory Default OK Firmware Update Mode CHANGE Firmware Updates OK	
	<ul> <li>FTP</li> <li>Event</li> <li>Network</li> <li>System</li> <li>User</li> <li>Date / Time</li> <li>Maintenance</li> <li>Information</li> </ul>	System Name NetCamera System Reboot OK Factory Default OK Firmware Update Mode CHANGE Firmware Updates OK SAV	'E RESET
	<ul> <li>FTP</li> <li>Event</li> <li>Network</li> <li>System</li> <li>User</li> <li>Date / Time</li> <li>Maintenance</li> <li>Information</li> </ul>	System Name NetCamera System Reboot OK Factory Default OK Firmware Update Mode CHANGE Firmware Updates OK SAV	E RESET
2) (	<ul> <li>FTP</li> <li>Event</li> <li>Network</li> <li>System</li> <li>User</li> <li>Date / Time</li> <li>Maintenance</li> <li>Information</li> </ul>	System Name NetCamera System Reboot OK Factory Default OK Firmware Update Mode CHANGE Firmware Updates OK SAV	E RESET
2) /	<ul> <li>FTP</li> <li>Event</li> <li>Network</li> <li>System</li> <li>User</li> <li>Date / Time</li> <li>Maintenance</li> <li>Information</li> </ul>	System Name NetCamera System Reboot OK Factory Default OK Firmware Update Mode CHANGE Firmware Updates OK OK SAV	E RESET
2) [	<ul> <li>FTP</li> <li>Event</li> <li>Network</li> <li>System</li> <li>User</li> <li>Date / Time</li> <li>Maintenance</li> <li>Information</li> </ul>	System Name NetCamera System Reboot ОК Factory Default ОК Firmware Update Mode CHANGE Firmware Updates ОК ОК SAV	re RESET
2) [	<ul> <li>FTP</li> <li>Event</li> <li>Network</li> <li>System         <ul> <li>User</li> <li>Date / Time</li> <li>Maintenance</li> <li>Information</li> </ul> </li> </ul>	System Name NetCamera System Reboot ОК Factory Default ОК Firmware Update Mode CHANGE Firmware Updates ОК ОК SAV	E RESET
2) [	<ul> <li>FTP</li> <li>Event</li> <li>Network</li> <li>System         <ul> <li>User</li> <li>Date / Time</li> <li>Maintenance</li> <li>Information</li> </ul> </li> </ul>	System Name NetCamera System Reboot OK Factory Default OK Firmware Update Mode CHANGE Firmware Updates OK SAV	E RESET
2) /	<ul> <li>FTP</li> <li>Event</li> <li>Network</li> <li>System</li> <li>User</li> <li>Date / Time</li> <li>Maintenance</li> <li>Information</li> </ul>	System Name NetCamera System Reboot OK Factory Default OK Firmware Update Mode CHANGE Firmware Updates OK ОК ВАЧ ершения процесса to Firmware Update Mode	E RESET
2) /	<ul> <li>FTP</li> <li>Event</li> <li>Network</li> <li>System         <ul> <li>User</li> <li>Date / Time</li> <li>Maintenance</li> <li>Information</li> </ul> </li> <li>Дождитесь заве</li> <li>Changing</li> </ul>	System Name NetCamera System Reboot OK Factory Default OK Firmware Update Mode CHANGE Firmware Updates OK ОК SAV ершения процесса	E RESET

I

	I TORIOU, WAR OBVIOL OU OCCUTION.		
) Теперь пу В пункте Fi	нкт "Firmware Updates" актив rmware Updates -> выберите setup	зен прошивку -> нажмите кнопку О WEB Remote Viewer	ĸ
Network	Maintenance		
System Maintenance	System Name NetCamera		
Information	System Reboot OK		
	Factory Default OK		
	Factory Default OK Firmware Update Mode CHANGE		
	Factory Default OK Firmware Update Mode CHANGE Firmware Updates OK	271 <del></del>	