

DVR User Manual

DIGITAL VIDEO RECORDER

T Series / S Series / H Series

1. Overview

1.1 Notice

This User's manual provides Information for using DVR such as brief introduction, part names, functions, connection to other equipment, menu setup, and the like. You have to keep in mind the following notices:

- Manufacturer retains the copyright on this manual.
- This manual cannot be copied without Manufacturer's prior written approval.
- Manufacturer is not liable for any or all losses to the product incurred by your use of non-standard product or violation of instructions mentioned in this manual.
- If you want to open the case of your system for checking problems, please consult the expert from the shop where you bought the product.
- Before installing an additional HDD or connecting an external storage device (USB memory or USB HDD) to this DVR check the compatibility list.





1.2 Caution

Please be aware of the following precautions before installing the DVR

- Avoid positioning the DVR in any place where the unit may come into contact with moisture, dust, or soot.
- Avoid placing in direct sunlight or near heating appliances.
- Keep the product away from electric shock or magnetic substances.
- Avoid temperature extremes (recommended operation temperature is between 0°C and ~40°C).
- Do not place any conductive material through the ventilation grills.
- Keep the system turned off before installation.
- Ensure enough space is left for cable connections.
- Place the system on a solid surface with sufficient air ventilation. Avoid any surface that vibrates.
- Placing the system near electronic devices such as radio or TV may cause breakdown to the product.
- Do not disassemble the product without seeking assistance from manufacturer.
- Do not place any heavy object on the system.

1.3 Safety Warnings and Cautions

Warning and Caution Signs


 Warning If you are not aware of this warning, you may be seriously injured or be killed	 Caution If you are not aware of this warning, you may be injured or cause property loss
--	--

 Warning	
<p>Turn off the system before installing the system. Do not plug in several electric devices to the same outlet.</p> <ul style="list-style-type: none">• This may cause heating, fire, or electric shock. 	<p>Do not place any liquid container on the system, such as water, coffee, or beverage.</p> <ul style="list-style-type: none">• If liquid is poured onto the system, it can cause a system breakdown or cause fire. 
<p>Prevent power cable from being severely bent or pressed by a heavy object.</p> <ul style="list-style-type: none">• This may cause fire. 	<p>Clean the dust around the system on regular basis. When cleaning the system, always use dry cloth. Do not use wet cloth or other organic solvents.</p> <ul style="list-style-type: none">• This may damage the surface of the system and can cause system breakdown or electric shock. 
<p>Avoid any place with moisture, dust, or soot.</p> <ul style="list-style-type: none">• This can cause fire or electric shock. 	<p>When pulling the power cable from the plug, do so gently. Do not touch the plug with wet hands and avoid using the plug if the holes on the outlet are too loose.</p> <ul style="list-style-type: none">• This may cause fire or electric shock. 

Warning


Do not attempt to disassemble, repair, or modify the system on your own. It is extremely dangerous due to high voltage running through the system.

- This may cause fire, electric shock, or serious injuries.

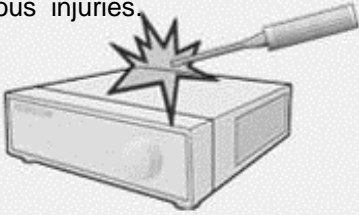


Install the system in a cool place without direct sunlight and always maintain room temperature. Avoid candle light and heat-generating devices such as heater. Keep the system away from places where many people pass.

- This may cause fire.

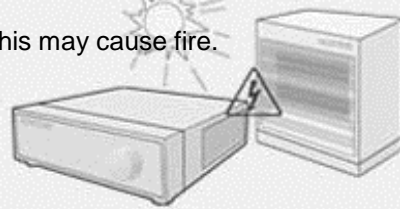


Check for any danger signs such as moist floor, loosened or damaged power cable, or unstable surface. If you encounter any problems, ask for assistance from your dealer.

- This may cause fire or electric shock.

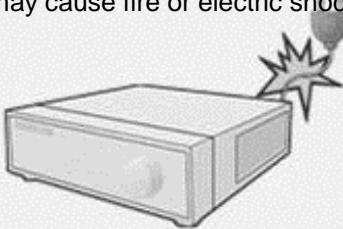


Install the system on a plain surface with sufficient air ventilation. Do not place the system on elevated surface.

- This may cause system breakdown or serious injuries.

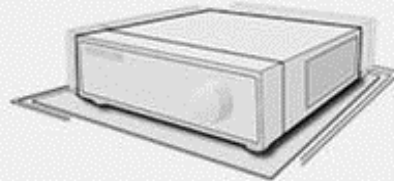


Keep at least 15cm between the back of the system and a wall for the cables connected into the system. Otherwise, cables may be bent, damaged, or cut.

- This may cause fire, electric shock, or injuries.

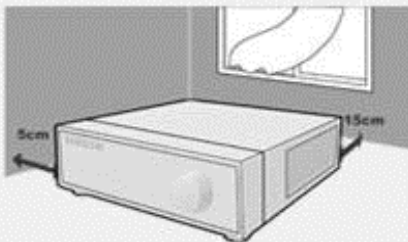

The power outlet must be placed on a ground, and the voltage range must be within 10% of the voltage rate. Do not use the same outlet with a hair dryer, iron, refrigerator, or any heating appliances.

- This may cause fire, heating, an electric shock.

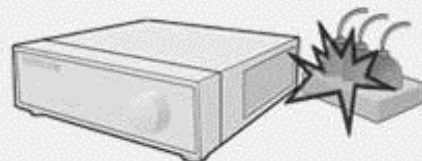



Warning

If the system's HDD has exceeded its life span, you may not be able to recover any data stored inside the HDD. If the video on the system screen appears 'damaged' while playing a recording stored inside the system's HDD, it must be replaced with a new one. Ask for an engineer's assistance for HDD replacement from your dealer.

- Manufacturer is not responsible for deleted data caused by user's mishandling.

When the system's battery is depleted, you must change it with the same or equivalent type of battery specified by the manufacturer. Depleted batteries should be discarded according to manufacturer's instructions.

- This may cause an explosion.

Caution


Do not install the system in a place with high magnetic, electric wave, or wireless devices such as radio or TV.

- Install the system in a place without magnetic objects, electric frequencies, or vibration.




Install the system in a place with appropriate moisture and temperature level.

- Avoid installing the system with high (over 40°C) or low (under 0°C) temperature.

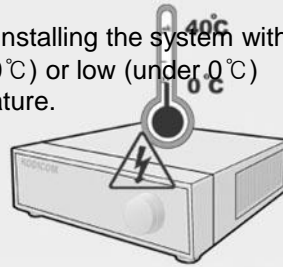


Prevent any substances from being inserted into the system.

- This may cause system breakdown.

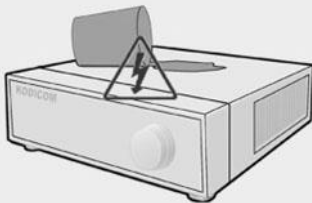

Do not place any heavy object on the system.

- This may cause system breakdown.

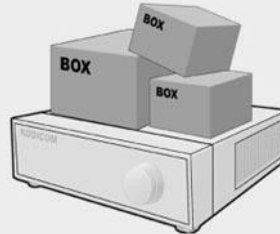

Install the system in a place with sufficient air ventilation.

- Keep at least 15cm distance between the back of the system and a wall, and at least 5cm distance between the side of the system and a wall.




Install the system on a stable and leveled surface..

- The system may not operate properly.




Caution


The system can be damaged from a strong impact or vibration. Avoid throwing objects within the vicinity of the system.

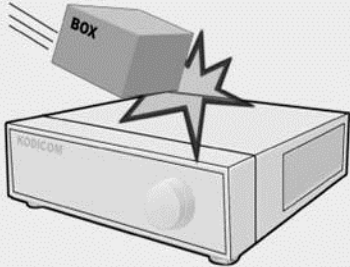

The outlet must be placed on the ground.

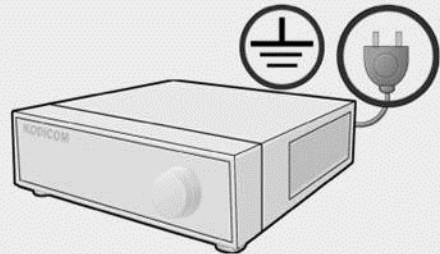


Avoid direct sunlight or any heating appliances.

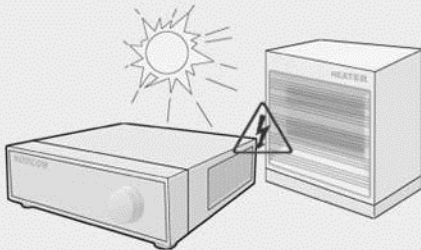

If there is strange sound or smell, unplug the power cable immediately and contact the service Center.

- This may cause fire or electric shock.

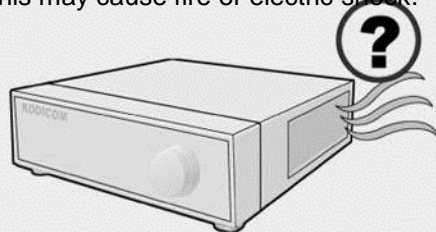

Ventilate the air inside the system operation room, and tighten the system cover firmly.

- System breakdown may be caused by inappropriate environment.

In order to maintain stable system performance, have your system checked regularly by the service Center.

- Manufacturer is not held responsible for system breakdown caused by user's mishandling.

It is recommended to use AVR (Automatic Voltage Regulator) for stable power supply.

It is recommended to coil the core-ferrite around the connector of the system to avoid electromagnetic interference.

1.4 Equipment

Please check to make sure the following equipment are included when you purchased DVR

(The user manual will be included either inside the product software CD or a quick Manual including important contents.)



1.5 Front Panel (8CH,16CH Model)



[1. DVD-RW]

[2. Jog Shuttle]

[3. LED Status]

- POWER
- REC
- NETWORK
- KEYLOCK
- AUDIO

[4. Camera Channel]

[5. Split Screen Buttons]

- AUTO SEQ : Automatic channel sequence
- 4-split : 4-splitscreen
- 9-split : 9-splitscreen
- 16-split : 16-splitscreen
- MENU : Menu screen

[6. Function Buttons]

- PANIC : Panic mode
- KEYLOCK : Keylock mode
- PTZ : PTZ mode
- BACKUP : BACKUP mode
- ESC : Return to previous mode

[7. Playback Control Buttons]


- Rewind playback
- Playback the previous video
- Pauses playback
- playback(Calendar search)
- Playback the next video
- Forward playback

[8. Directional move buttons]

[9. USB port]

- 2 Port

1.6 Rear Panel (SD Model)

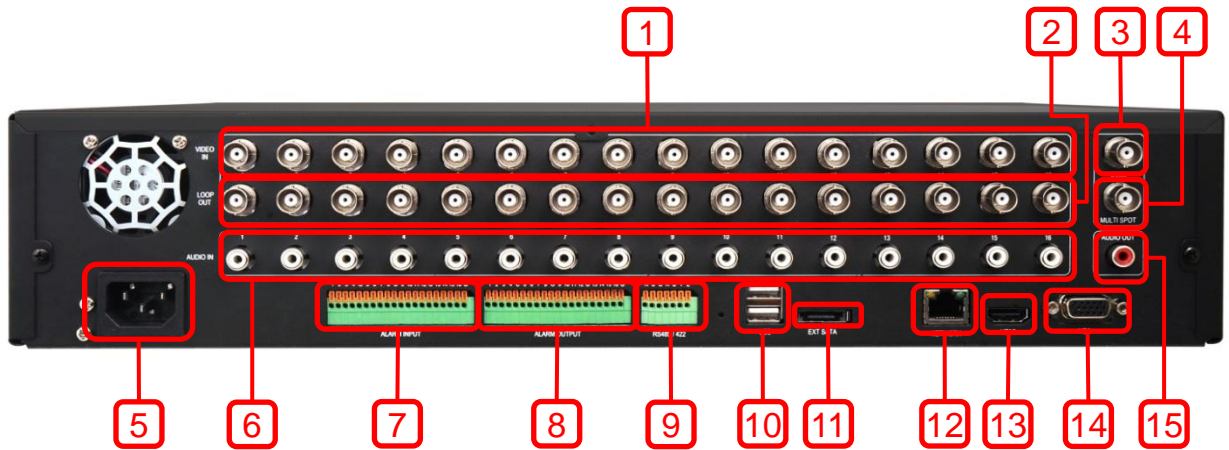

[1. Camera Video Input]
- 1~16 Port

[2. Loop Through Output]
- 1~16 Port

[3. Main Monitor(CVBS)]

[4. Multi-Spot(CVBS)]

[5. Power Connector]
- AC Input

[6. Audio Input]
- 1 ~ 16 Port

[7. Alarm In Port]
- 1~16 Port (G: Ground)

[8. Alarm Out Port]
- 1 ~ 16 Port (G: Ground)

[9. RS-485/422]
- RS-485 : A, B, G
- RS-422 : A, B, Y, Z

[10. USB Port]
- 2 Port

[11. E-SATA Port]


[12. Network Port]

[13. HDMI Port]

[14. VGA Port]

[15. Audio Out]

1.7 Rear Panel (HD Model - 16Ch)

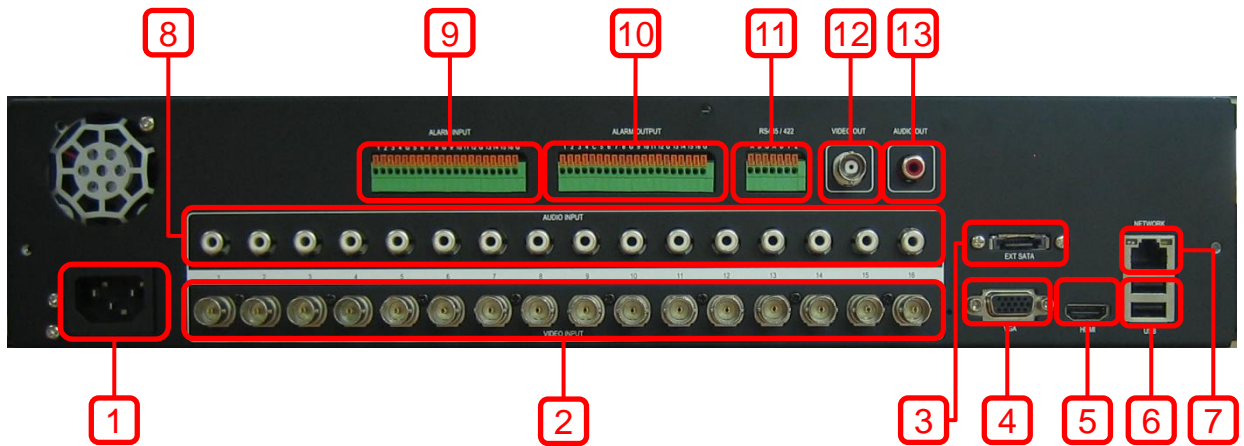

[1. Power Connector]
- AC Input

[2. Camera Video Input]
- 1~16 Port

[3. E-SATA Port]

[4. VGA Port]

[5. HDMI Port]

[6. USB Port]
- 2 Port

[7. Network Port]

[8. Audio Input]
- 1~16 Port

[9. Alarm In Port]
- 1~16 Port (G: Ground)


[10. Alarm Out Port]
- 1~16 Port (G: Ground)

[11. RS 485/422]
- RS-485 : A, B, G
- RS-422 : A, B, Y, Z

[12. Main Monitor(CVBS)]

[13. Audio Out]

1.8 Rear Panel (HD Model - 8Ch)

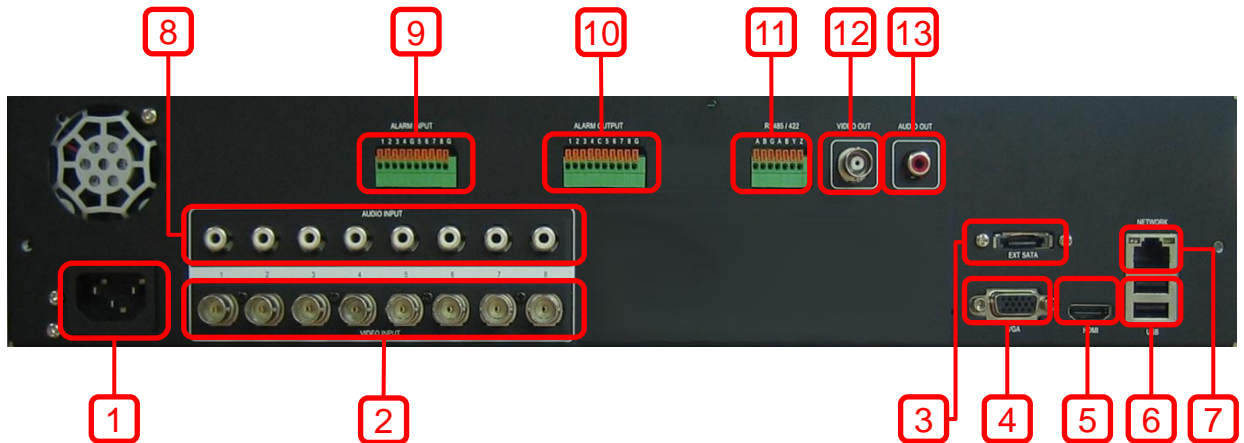

[1. Power Connector]
- AC Input

[2. Camera Video Input]
- 1~8 Port

[3. E-SATA Port]

[4. VGA Port]

[5. HDMI Port]

[6. USB Port]
- 2 Port

[7. Network Port]

[8. Audio Input]
- 1~8 Port

[9. Alarm In Port]
- 1~8 Port (G: Ground)


[10. Alarm Out Port]
- 1~8 Port (G: Ground)

[11. RS 485/422]
- RS-485 : A, B, G
- RS-422 : A, B, Y, Z

[12. Main Monitor(CVBS)]

[13. Audio Out]

1.9 Front Panel (4 CH Model)

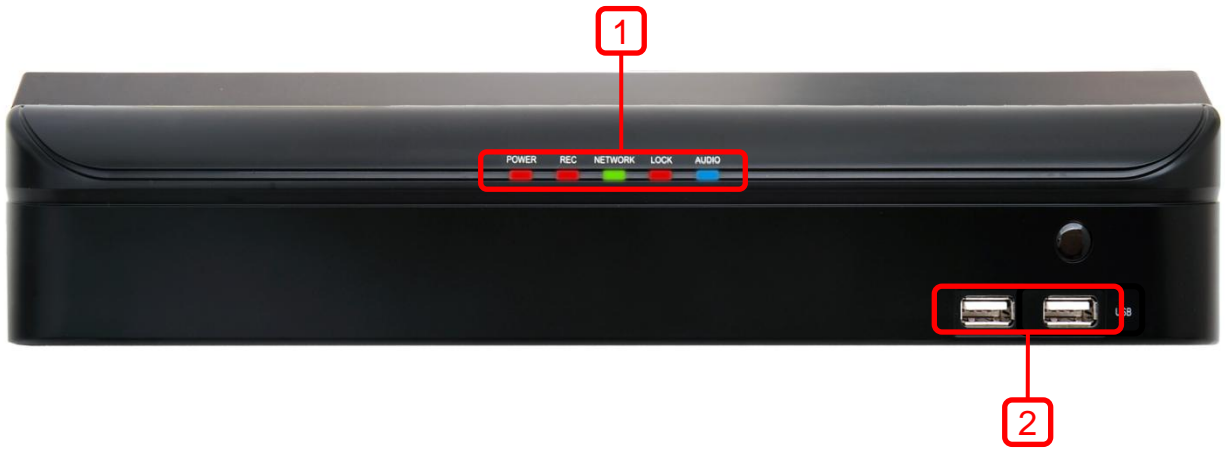


[1. LED Status]

- POWER
- REC
- NETWORK
- KEYLOCK
- AUDIO

[2. USB port]

- 2 Port

1.10 Rear Panel (4CH Model)

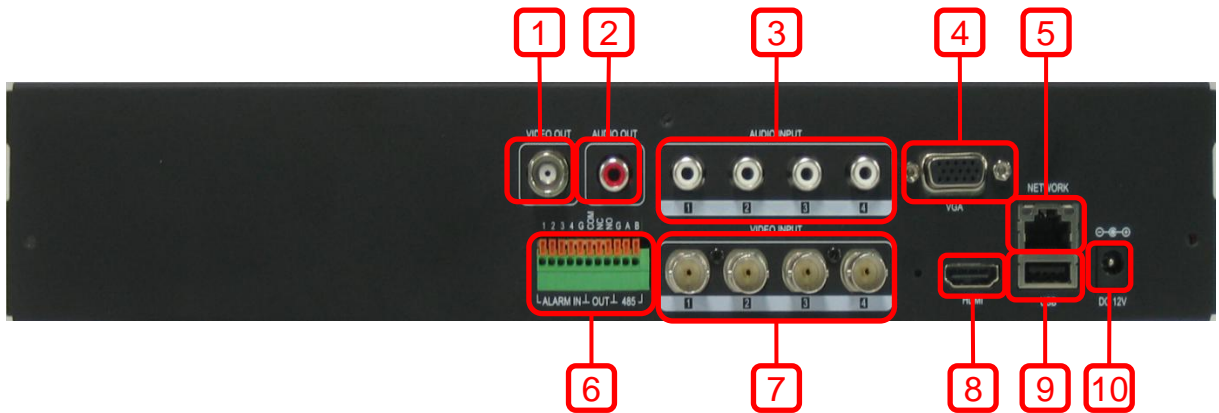

[1. Main Monitor(CVBS)]

[2. Audio Output]

[3. Audio Input]
- 1 ~ 4 Port

[4. VGA Port]

[5. Network Port]

[6. Alarm In Port/Alarm Out / RS-485]
- Alarm In : 1 ~ 4 Port, G
(G : Ground)
- Alarm Out : Com, NC, NO
- RS-485 : G, A, B


[7. Camera Video Input]
- 1 ~ 4 Port

[8. HDMI Port]

[9. USB Port]
- 1 Port

[10. Power Connector]
- DC 12V

1.11 Rear Panel (8CH Model)

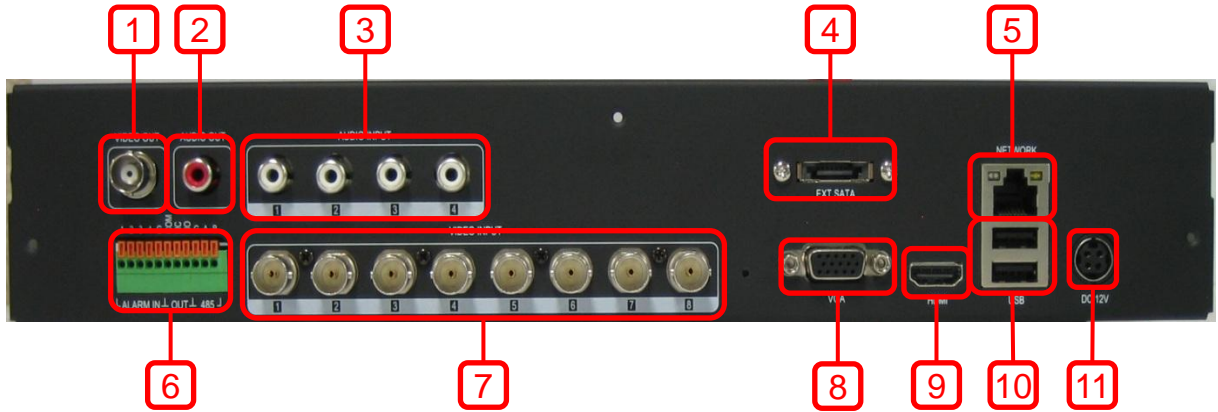

[1. Main Monitor(CVBS)]

[2. Audio Output]

[3. Audio Input]
- 1 ~ 4 Port

[4. E-SATA Port]

[5. Network Port]

[6. Alarm In Port/Alarm Out / RS-485]
- Alarm In : 1 ~ 4 Port, G
(G : Ground)
- Alarm Out : Com, NC, NO
- RS-485 : G, A, B

[7. Camera Video Input]
- 1 ~ 8 Port


[8. VGA Port]

[9. HDMI Port]

[10. USB Port]
- 2 Port

[11. Power Connector]
- DC 12V

1.12 Remote Controller

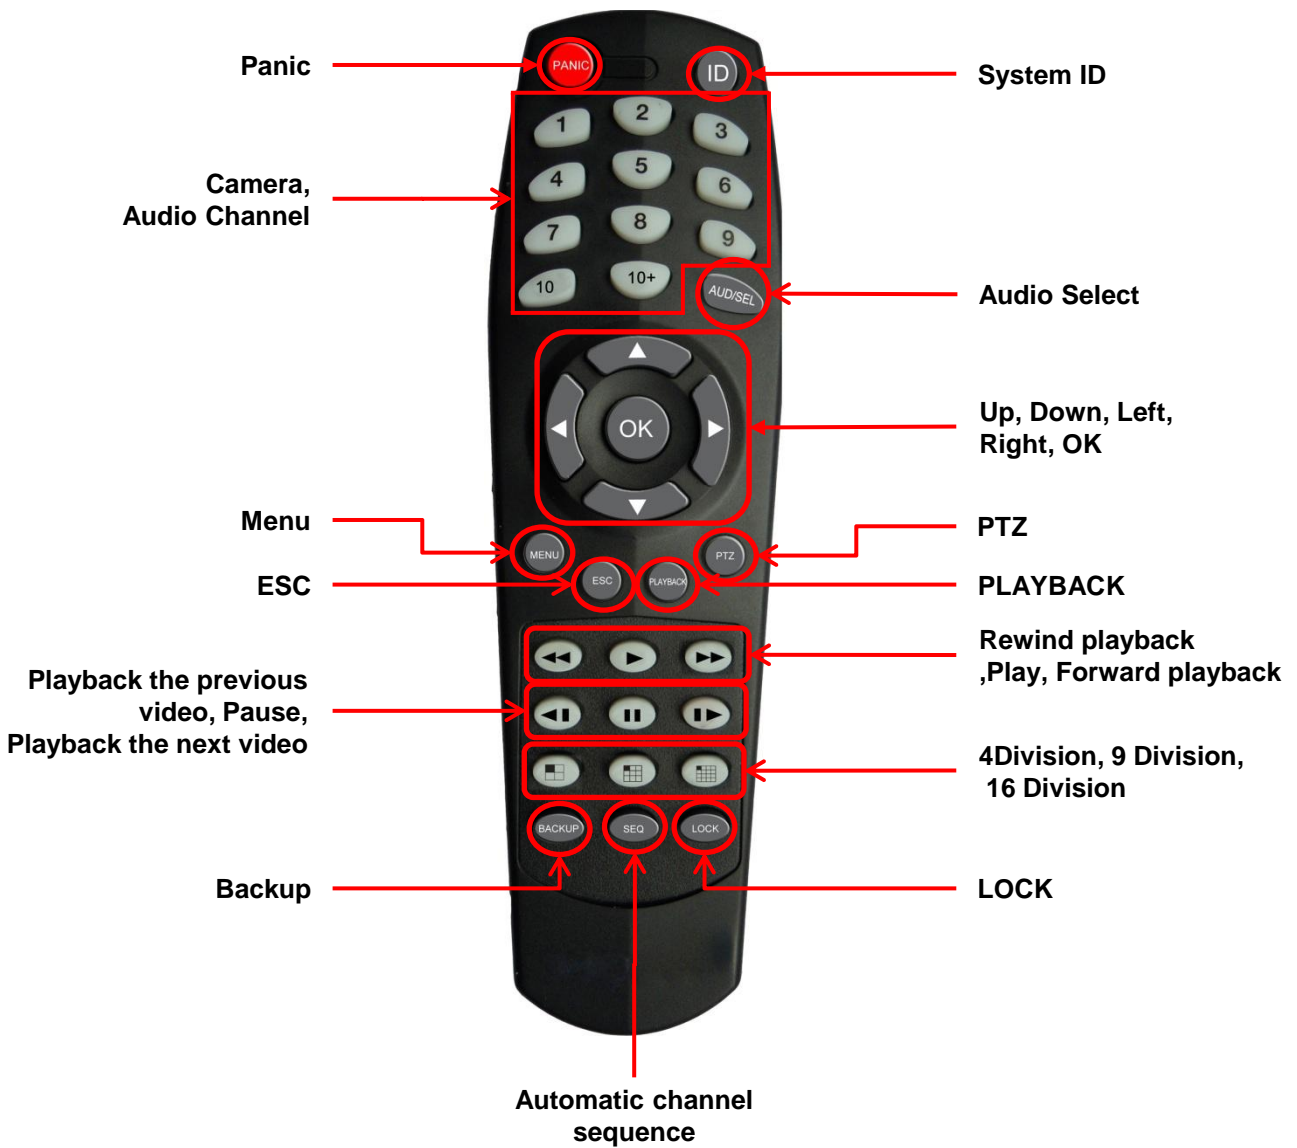

[Note]

- Usage of a remote controller is same the front panel keys.
- To select camera or Audio 10~16, press 10+ button followed by the 1 ~ 6 buttons.
- Follow the procedure below when using the remote controller for multi DVRs.
 - Check System ID(between 1 and 16) of the DVR that wish to use.
 - Holding up the remote controller to face towards the DVR and press the System ID numbers one by one, while pressing ID button on the remote controller. Note that the System ID is 2-digit number. Button '10' functions the same as '0'.

Content

1. Overview

1.1 Notice	2
1.2 Caution	3
1.3 Safety Warnings and Cautions	4
1.4 Equipment	9
1.5 Front Panel (8CH, 16 CH Model)	10
1.6 Rear Panel (SD Model)	11
1.7 Rear Panel (HD Model – 16CH)	12
1.8 Rear Panel (HD Model – 8CH)	13
1.9 Front Panel (4 CH Model)	14
1.10 Rear Panel (4 CH Model)	15
1.11 Rear Panel (8 CH Model)	16
1.12 Remote Controller	17

2. Live

2.1 Live Screen	25
2.1.1 Live Screen Zoom	26
2.2 Popup Menu	27
2.3 Context Menu	28
2.3.1 Playback	29
2.3.2 Cam Adjust (Only for 960H/SD Models)	29
2.3.2.1 Color (Only for 960H/SD Models)	30
2.3.4.2 Camera (Only for 960H/SD Models)	30
2.3.3 Alarm Out	31
2.3.4 PTZ	32

3. Playback

3.1 Playback	33
3.1.1 Play Back Zoom	34
3.2 Popup Bar	34

3.3 Context menu	35
3.3.1 backup	36
3.3.1.1 H264 Backup	36
3.3.1.2 JPG Backup	37
3.3.2 Bookmark Search	37
3.3.3 Calendar Search.....	38
3.3.4 Event Search	39
4. DVR Setup	
4.1 Wizard	40
4.1.1 All	40
4.1.2 Recording	45
4.1.3 Network	48
4.2 System	50
4.2.1 General	50
4.2.1.1 Date/Time Setting.....	50
4.2.1.2 Video	51
4.2.1.3 Storage	52
4.2.1.4 Update	53
4.2.1.4.1 Firmware Update	53
4.2.1.4.2 Kernel Update	54
4.2.1.5 Admin	55
4.2.2 Account	56
4.2.2.1 New Group	56
4.2.2.2 Edit Group	57
4.2.2.3 New User	58
4.2.2.4 Edit User	59
4.2.2.5 Checking	60
4.2.3 Log	61
4.2.3.1 Log	61
4.2.3.2 Setup	62

4.2.4 Backup	63
4.2.4.1 H264 Backup	63
4.2.4.2 JPG Backup	64
4.3 Recording	65
4.3.1 Setting	65
4.3.1.1 Camera	65
4.3.1.2 PTZ	66
4.3.1.3 Keyboard	67
4.3.1.4 Privacy	68
4.3.2 Motion	69
4.3.2.1 Motion Area Setting	70
4.3.3 Schedule	71
4.3.3.1 Schedule	71
4.3.3.2 Holiday	72
4.4 Network	73
4.4.1 General	73
4.4.1.1 Setting	73
4.4.1.2 NTP	74
4.4.1.3 UPnP	75
4.4.2 DDNS	75
4.4.3 E-Mail	76
4.4.3.1 Receiver	76
4.4.3.2 Sender	77
4.4.3.3 Attachment	78
4.5 Alarm	79
4.5.1 Alarm	79
4.5.1.1 Alarm In	79
4.5.1.2 Alarm Out	80
4.5.2 Motion	81

4.5.3 POS/ATM	82
4.5.4 No Video	83
4.5.5 Abnormal	84
4.6 View	85
4.6.1 OSG	85
4.6.1.1 System	85
4.6.1.2 Live	86
4.6.1.3 Search	87
4.6.2 POS/ATM	88
4.6.2.1 Live	88
4.6.2.2 Search	88
4.6.2.3 Network	89
4.6.3 Main Monitor	90
4.6.3.1 1 Division	90
4.6.3.2 4 Division	91
4.6.3.3 9 Division	92
4.6.4 Multi Spot	93
4.6.4.1 1 Division	93
4.6.4.2 4 Division	94
4.6.4.3 9 Division	95
5. POS/ATM	
5.1 Connection	96
5.2 Setup	96
5.2.1 Setup	96
5.2.2 Live	97
5.2.3 Playback	97
6. Keyboard	
6.1 Exterior	98
6.2 Connection	98
6.3 Function	99
6.4 Configuration	101

6.4.1 For one unit (PTZ directly connection)	101
6.4.2 For one unit (1 Keyboard , 1 DVR, 1 Camera)	101
6.4.3 Configuration	102
6.4.4 For multi units	102
6.5 Setup	103
6.5.1 Setup for DVR	103
6.5.2 Setup for Keyboard	104
6.5.2.1 Menu	104
6.5.2.2 Setup for menu.....	104
6.5.2.3 Setup for PTZ.....	106
7. CMS	
7.1 CMS Login	107
7.2 Starting screen	108
7.2.1 Menubar	108
7.2.1.1 System	108
7.2.1.2 Tools	108
7.2.1.3 Setup	109
7.2.1.4 View	110
7.2.1.5 Help	110
7.2.2 Toolbar	110
7.2.3 Server List	111
7.2.4 Video context menu.....	112
7.2.5 Log Windows	112
7.2.5.1 CMS Log	112
7.2.5.2 Server Event Log	113
7.2.5.3 Server System Log	113
7.2.5.4 Server System Status	113
7.2.5.5 Event List	113
7.3 Search	114
7.3.1 Tools	114

7.3.1.1 DVR Connection	115
7.3.1.2 Search Mode	115
7.3.1.3 Recorded Dates.....	116
7.3.1.4 Playback buttons	116
7.3.2 Search tools	117
7.3.3 Event Search tools.....	119
7.3.4 ATM/POS Search tools	120
7.3.5 Bookmark Search tools	121
7.3.6 Thumbnail Search tools	122
7.3.7 Intelli-Search tools	123
7.4 Setup	124
7.4.1 CMS Setup	124
7.4.1.1 System	124
7.4.1.2 Display	126
7.4.1.3 Backup	128
7.4.1.4 Setup	129
7.4.1.5 Playback	130
7.4.1.6 Instant Record	131
7.4.1.7 Account	132
7.4.1.8 Password	133
7.4.2 Server Setup.....	134
7.4.3 DVR Remote Setting	137
7.4.4 Remote Upgrade	138
7.5 E-Map.....	139
7.5.1 E-Map Menu.....	139
7.5.2 E-Map Edit	140
7.5.3 E-Map Item Setting.....	141
7.5.3.1 E-Map Item Connecting.....	142
7.5.4 Using E-Map	143

8. Active X

8.1 Active X Connection	143
8.2 Active X Initial Screen	144
8.3 Connect	145
8.4 LIVE	146
8.5 PLAYBACK	149
8.6 BACKUP	151

9. Mobile Viewer

9.1 Download Mobile Viewer	152
9.2 Android , iPhone	153
9.2.1 Beginning	153
9.2.2 DVR Add/Edit/Delete	154
9.2.2.1 DVR Add/Edit	155
9.2.2.2 DVR Delete	156
9.2.3 DVR connection	157
9.2.4 Playback	159
9.2.5 Snapshot	160
9.2.6 Setting	161

2. Live

2.1 Live Screen



[1. Camera name]

- Displays camera name.

[2. Recording mode]

- Displays the current recording mode.

[3. Recording status]

- Displays the current recording status.

[4. PTZ status]

- Displays PTZ camera status.

[5. Audio]

- Displays Audio On

[6. Remaining HDD Capacity]

- Displays the remaining HDD status

[7. Network status]

- Displayed if the network is connected to DVR

[8. Auto sequence]

- Displayed when the auto sequence is in process

[9. Day/Time]

- Displays the current day/time

[10. Lock]

- Displayed in the lock condition
- It needs to enter the password to release the button lock.

[11. PTZ]

- Displayed if PTZ is in operation.

[12. Spot monitor]

- Displayed when spot monitor is in auto sequence.
- Available only for 960H/Analog Models

[13. keyboard]

















- Displayed if the keyboard is connected.

2.1.1 Live Screen Zoom

1. Change screen to 1 full screen mode.
2. Draw rectangle by dragging mouse left button pressed.
3. Double click to unzoom.

2.2 POP-UP MENU



- | | | | |
|--|--|---|---|
|  | Shutdown
- Shutdown the pop-up menu |  | Backup
- Displays the backup menu |
|  | 1-split screen
- Displays 1 channel screen mode |  | Setup
- Displays the setup menu |
|  | 4-split screen
- Displays 4 channel screen mode |  | Playback
- Displays the playback menu |
|  | 9-split screen
- Displays 9 channel screen mode |  | Bookmark Search
- Displays the bookmark search menu |
|  | 16-split screen
- Displays 16 channel screen mode |  | Date Search
- Displays the calendar search menu |
|  | Auto sequence
- Activate auto sequence mode
- main screen |  | Event Search
- Displays the event search menu |
|  | Spot monitor (only for 960H/SD)
- Activate spot monitor auto sequence mode |  | Lock
- Displays the lock menu to change the user type or disable system operation |
|  | PTZ mode
- Displays the PTZ remote control menu |  | Power
- Turns DVR off |

2.3 Context Menu



- **Setup**
 - Displays the setup menu
- **Playback**
 - Displays the playback menu
- **Layout**
 - Displays the sub-menu of the split screen
 - Select 1-split, 4-split, 9-split or 16-split on the screen mode
- **Auto sequence**
 - Activate auto sequence mode - main screen
- **Spot**
 - Activate spot monitor auto sequence mode
 - Only for 960H/SD Models
- **PTZ**
 - Displays the PTZ remote control menu
- **Camera adjust**
 - Displays the sub-menu of the camera adjust menu
 - Only for 960H/SD Models
- **Alarm Out**
 - Displays the sub-menu of Alarm Out.
- **Lock**
 - Set the DVR in the lock condition.
- **Panic**
 - Enter into emergency recording mode
- **Shutdown**
 - Shutdown the DVR
- **Cancel**
 - Close the pop-up menu

2.3.1 Playback

 Setup	
 Playback	Instant
 Layout	Bookmark
 Auto Seq	Calendar
 Spot	Event
 PTZ	
 Cam Adjust	

- **Instant**
 - Displays the recent recording search menu
- **Bookmark**
 - Displays the bookmark search menu
- **Calendar**
 - Displays the calendar search menu
- **By Event**
 - Displays the event search menu

2.3.2 Cam Adjust (Only for 960H/SD Models)

 PTZ	
 Cam Adjust	Color
 Alarm Out	Cam Adjust
 Lock	

- **Color**
 - Displays the color adjust menu
- **Cam Adjust**
 - Displays the camera adjust menu

2.3.2.1 Color (Only for 960H/SD Models)




- **Brightness**
 - Adjust the Brightness value
- **Contrast**
 - Adjust the Contrast value
- **Saturation**
 - Adjust the Saturation value
- **Hue**
 - Adjust the Hue value
- **Apply to all**
 - Applies the current setup to all cameras
- **Default**
 - Initializes the setup to default value (Brightness : 0, Contrast : 85, Saturation : 130, Hue : 0)

2.3.2.2 Camera (Only for 960H/SD Models)




- **H Sync**
 - Adjust the H Sync value
- **V Sync**
 - Adjust the V Sync value
- **Apply to all**
 - Applies the current setup to all cameras
- **Default**
 - Initializes the setup to default value (H Sync : 4, V Sync : 19)

2.3.3 Alarm Out

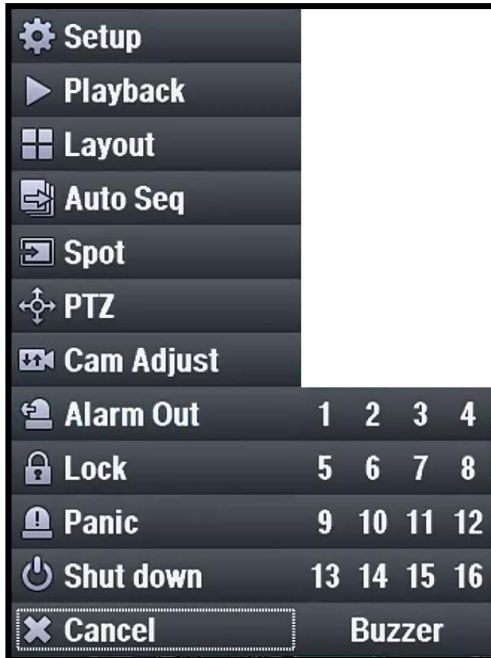

- **Alarm output channel number**
 - Select the alarm output number
- **Buzzer**
 - Turn on the buzzer

 2.3.4 PTZ



- **PTZ**
- Go to PTZ mode



- **Pan/Tilt**
- Direction buttons for movement

- **M**
- Enter into camera OSD menu
(Only for POC or COC Models)



- **Zoom**
- Zoom In / Out



- **Focus**
- Focus Near / Far



- **Iris**
- Iris Open / Close



- **LED ON, OFF**
- Turn On/Off LED
(Only for POC or COC Models)



- **Preset No**
- Set Preset number for memory & go to



- **Go to Preset number**
- Go to preset number



- **Memorize Preset position**
- Memory current position to preset number



- **Pan/Tilt Speed**
- Pan (Left/Right) / Tilt (Up/Down) speed
- Range is 1 ~ 10




- **Close window**
- Close PTZ window



- **Exit**
- Exit PTZ mode and return to Live mode

3. Playback

3.1 Playback

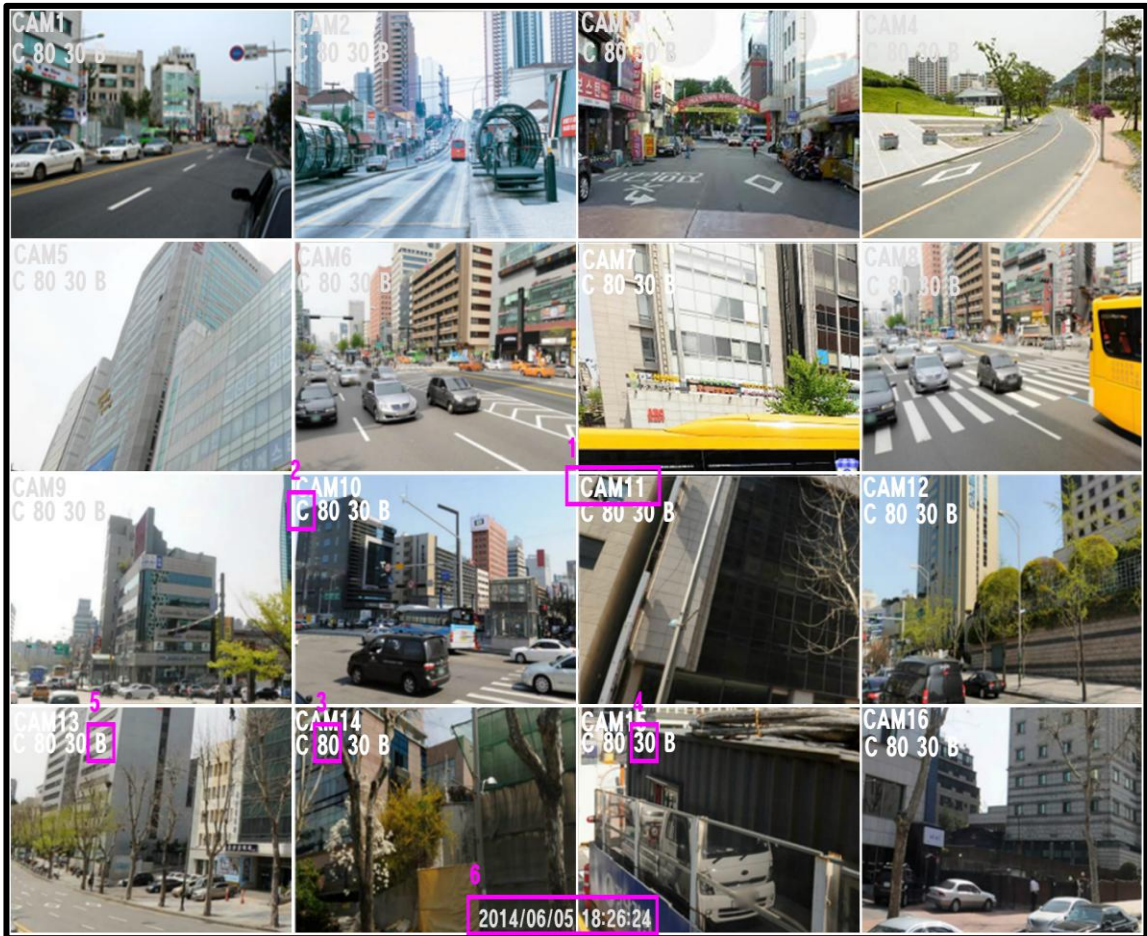

[1. Camera name]

- Displays the current camera name.

[2. Recording mode]

- C – Continuous recording mode.
- M – Motion recording mode.
- A – Alarm recording mode.

[3. Video quality]

- Displays the video quality.

[4. Frame rate]

- Displays the frame rate per sec

[5. Recording quality]

- B – Best
- H – High
- M – Moderate
- E – Economic

[6. Date/Time]

- Displays the date/time

3.1.1 Play Back Zoom

1. Change screen to 1 full screen mode.
2. Draw rectangle by dragging mouse left button pressed.
3. Double click to unzoom

3.2 Popup Bar



▪ 1-split screen

- Displays 1 channel screen mode



▪ 4-split screen

- Displays 4 channel screen mode



▪ 9-split screen

- Displays 9 channel screen mode



▪ 16-split screen

- Displays 16 channel screen mode



▪ Bookmark - add

- Adds the current time to the bookmark



▪ Backup

- Displays the backup menu



▪ Bookmark – search

- Displays the bookmark search menu.



▪ Calendar

- Displays the calendar search menu



▪ Event

- Displays the event search menu



▪ Fast rewind

- Fast backward playback



▪ Step rewind

- Backward frame by frame search while in pause



▪ Pause

- Pauses playback



▪ Playback

- Plays playback



▪ Step forward

- Forward frame by frame search while in pause



▪ Fast Forward

- Fast forward playback



▪ Playback Exit

- Exit the playback



▪ Cancel

- Closes the pop-up menu

3.3 Context menu



- **Backup**
 - Displays the backup menu
- **Bookmark**
 - Displays the bookmark search menu
- **Calendar**
 - Displays the calendar search menu
- **Event**
 - Displays the event search menu
- **Playback Exit**
 - Exit the playback
- **Cancel**
 - Closes the pop-up menu

3.3.1 Backup

3.3.1.1 H264 Backup



[H264 Backup]

- Backup video clip according to cameras selected and period set

[Recording period]

- Set the recorded period.

[Period]

- Set the start/end date and time.

[Type]

- Set the compression codec.

[Copy to]

- Select a backup device, USB memory or CD/DVR-R

[Save as]

- Set the backup file name.

[Camera]

- Select the channel to backup


[Estimate]

- Check the size of the selected data and free space

[Do backup]

- Starts backup.

3.3.1.2 JPG Backup

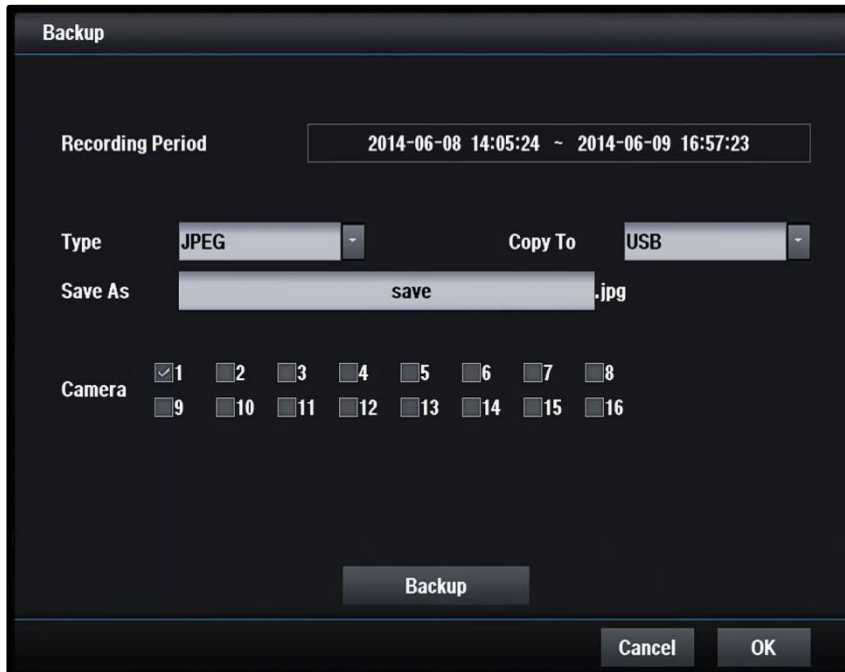

[JPG Backup]

- Save current background image as JPG format

[Period]

- Set the start/end date and time.

[Copy to]

- Select a backup device, USB memory or CD/DVR-R

[Save as]

- Set the backup file name.


[Camera]

- Only 1 camera should be selected at the same time
- Only cameras existed in a current background split mode are available

[Do backup]

- Starts backup.


3.3.2 Bookmark search

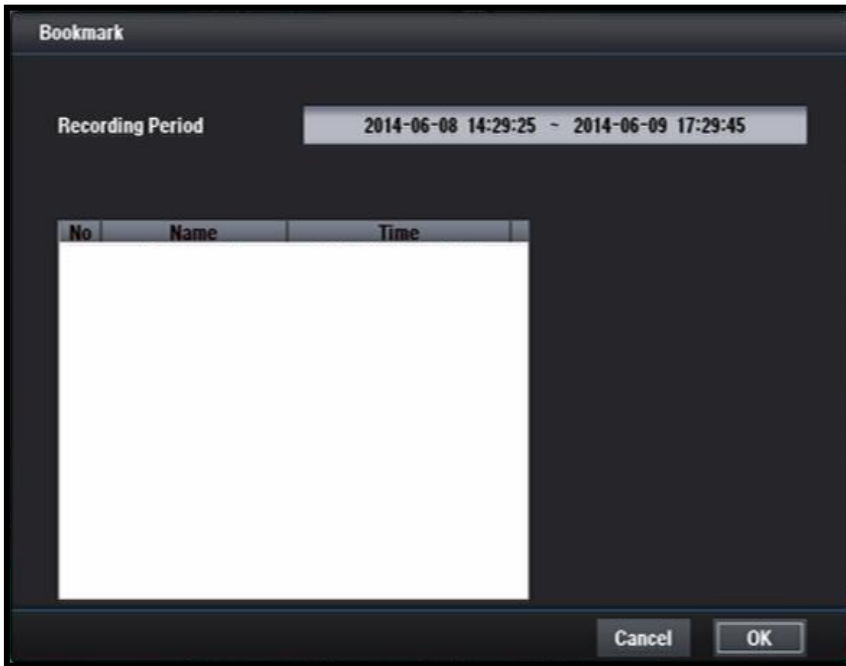


[Recording Period]

- Displays the recorded period.

3.3.3 Calendar search

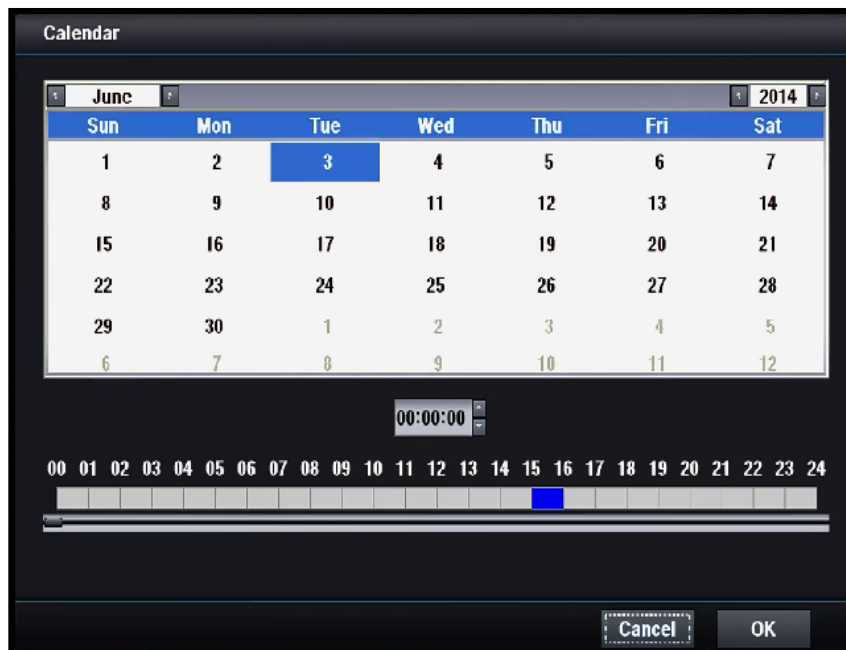

3.3.4 Event search

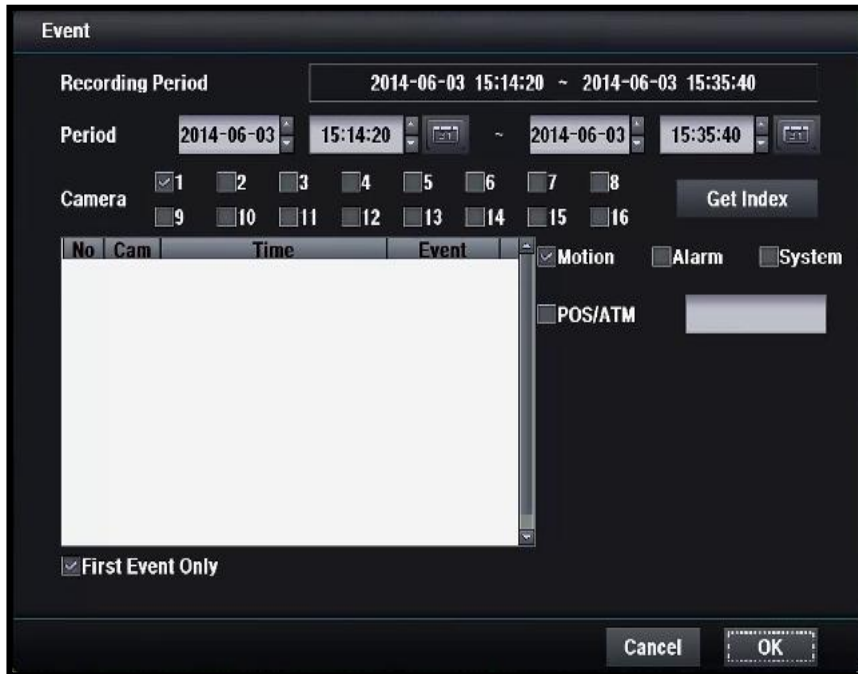

[Recording period]

- Set the recorded period.

[Period]

- Set the start/end date.

[Camera]

- Select the channel for event search

[Index]

- Select the recording data on the event list.

[Motion]

- Select the motion for motion event search.

[Alarm]

- Select the alarm for alarm event search.

[System]

- Select the system for system event search.

[POS/ATM]

- Search POS/ATM by keyword

[First event only]

- Load only the first frame of each new event

4. DVR Setup

4.1 Wizard

4.1.1 All

STEP 1.



Time Zone: UTC+09:00 Seoul, Tokyo

Language: English

Date: 2014-06-03

Date Format: YYYYMMDD

Date Separator: /

Time: 15:27:47

Time Format: 12 HOURS

Day Light Saving:

Setting ...

Cancel Next

[Time Zone]

- Set the time zone.

[Language]

- Set the language to use.

[Date]

- Set the current date.

[Date Format]

- Select the date display format

[Date Separator]

- Set the separator come between year-month-date

[Time]

- Set the current time

[Time Format]

- Select the time display format.

[Day Light Saving]

- Set the day light saving for the applied countries.




Day Light Saving

Start: FEB 1st SUN

Finish: AUG 1st SUN

Cancel OK

STEP 2.

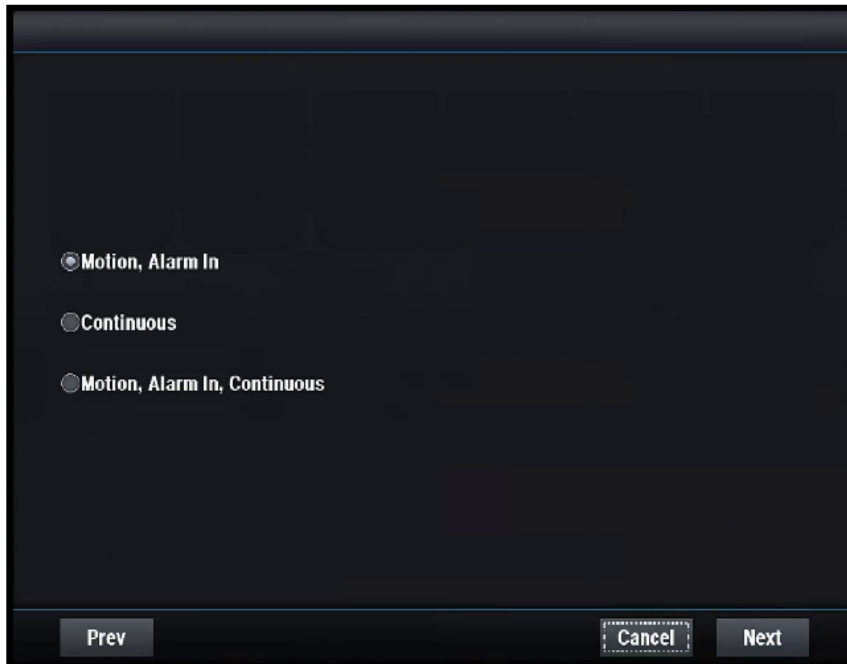

[Motion, Alarm In]

- Motion / Alarm In Recording

[Continuous]

- Continuous Recording

[Motion, Alarm In, Continuous]

- Motion / Alarm In / Continuous Recording

STEP 3.



[Best Quality]

- Best recording quality

[High Quality]

- High recording quality

[Normal Quality]

- Normal recording quality

STEP 4.

Day Light Saving

Static/DHCP: DHCP

MAC: [Empty]

IP Address: [Empty]

Subnet Mask: [Empty]

Gateway: [Empty]

DNS Server: [Empty]

TCP Port: [Empty]

UDP Port: [Empty]

HTTP Port: [Empty]

Transmission Method: By Speed

Fps: 25

Quality: BEST

Prev Cancel Next

[STATIC/DHCP]

- STATIC
 - Network settings are configured manually by STATIC server
- DHCP
 - Network settings are configured automatically by DHCP server

[IP Address]

- Set the IP Address
 - Configured automatically by the DHCP mode

[Subnet Mask]

- Set the Subnet Mask
 - Configured automatically by the DHCP mode

[Gateway]

- Set the Gateway address
 - Configured automatically by the DHCP mode

[DNS Server]

- Set the DNS Server address
 - Configured automatically by the DHCP mode

[TCP Port]

- Enter the TCP Port number
 - The default port is 7080

[UDP Port]

- Enter the UDP Port number
 - The default port is 7081

[HTTP Port]

- Enter the HTTP Port number
 - The default port is 80

[Transmission Method]

- Set the Transmission Method

STEP 5.

The screenshot shows a configuration window titled "Day Light Saving". It contains several input fields and a "Check" button. The fields are: "DDNS Server Type" (a dropdown menu with "nsddns.org" selected), "Auto Sync" (an unchecked checkbox), "DDNS Server" (an empty text box), "DDNS Port" (a text box containing "9438"), "User Domain Name" (an empty text box), "System Domain Name" (an empty text box), "User" (an empty text box with a mouse cursor over it), "Password" (an empty text box), and "Key" (a long empty text box). At the bottom, there are three buttons: "Prev", "Check", "Cancel", and "OK".

[DDNS Server Type]

- Set the DDNS Server Type
- Needed to register only when use user defined DDNS server
- Available DDNS servers
 - nsddns.org, dyndns.org, no-ip.com., zoneedit.com, freedns.afraid.org

[DDNS Server]

- Enter the DDNS Server address

[DDNS Port]

- Enter the port number to access to the DDNS server
- The default port is 9438

[User Domain Name]

- Enter the User Domain Name

[System Domain Name]

- Enter the System Domain Name

[User]

- Enter the User ID to access to the DDNS server

[Password]

- Enter the User password to access to the DDNS server

[Key]

- Need the connection certificate key value if use the freeDNS

[Do Check]

- Verify availability of DDNS server setting

4.1.2 Recording

STEP 1.



The screenshot shows a dark-themed settings dialog box with the following fields and controls:

- Time Zone:** A dropdown menu showing "UTC+09:00 Seoul, Tokyo".
- Language:** A dropdown menu showing "English".
- Date:** A text input field showing "2014-06-03".
- Date Format:** A dropdown menu showing "YYYYMMDD".
- Date Separator:** A dropdown menu showing "/".
- Time:** A text input field showing "15:27:47".
- Time Format:** A dropdown menu showing "12 HOURS".
- Day Light Saving:** A checkbox that is currently unchecked.
- Buttons:** A "Setting ..." button, a "Cancel" button, and a "Next" button.

[Time Zone]

- Set the time zone.

[Language]

- Set the language to use.

[Date]

- Set the current date.

[Date Format]

- Select the date display format.

[Date Separator]

- Set the separator come between year-month-date

[Time]

- Set the current time.


[Time Format]

- Select the time display format.

[Day Light Saving]

- Set the day light saving for the applied countries.

STEP 2.

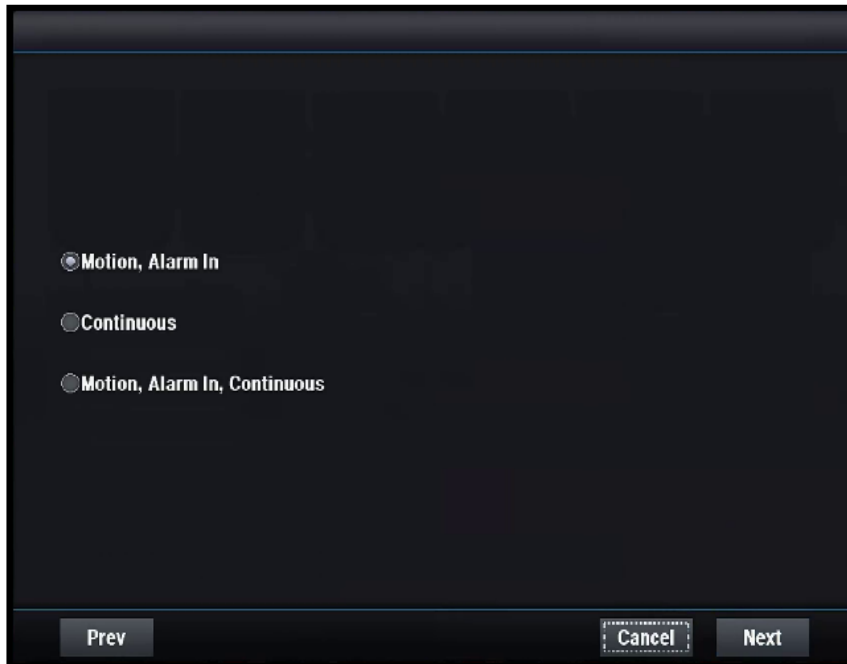

[Motion, Alarm In]

- Motion / Alarm In Recording.


[Continuous]

- Continuous Recording

[Motion, Alarm In, Continuous]

- Motion / Alarm In / Continuous Recording

STEP 3.

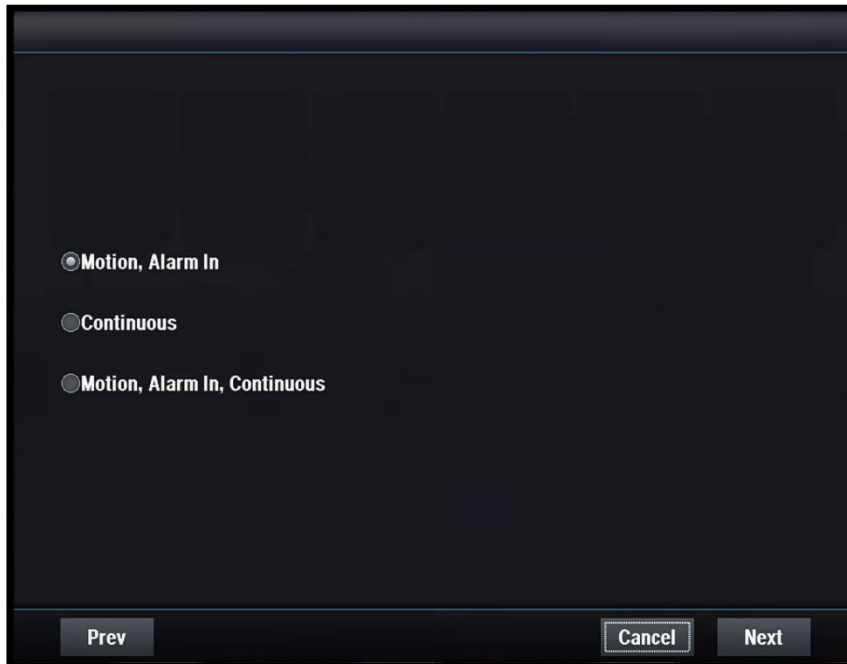

[Best Quality]

- Best recording quality.

[High Quality]

- High recording quality

[Normal Quality]

- Normal recording quality

4.1.3 Network

STEP 1.

Day Light Saving

Static/DHCP: DHCP | MAC

IP Address: []

Subnet Mask: []

Gateway: []

DNS Server: []

TCP Port: []

UDP Port: []

HTTP Port: []

Transmission Method: By Speed | Fps: 25 | Quality: BEST

Prev | Cancel | Next

[STATIC/DHCP]

- STATIC
 - Network settings are configured manually by STATIC server
- DHCP
 - Network settings are configured automatically by DHCP server

[IP Address]

- Set the IP Address
 - Configured automatically by the DHCP mode

[Subnet Mask]

- Set the Subnet Mask
 - Configured automatically by the DHCP mode

[Gateway]

- Set the Gateway address
 - Configured automatically by the DHCP mode

[DNS Server]

- Set the DNS Server address
 - Configured automatically by the DHCP mode

[TCP Port]

- Enter the TCP Port number
 - The default port is 7080

[UDP Port]

- Enter the UDP Port number
 - The default port is 7081

[HTTP Port]

- Enter the HTTP Port number
 - The default port is 80

[Transmission Method]

- Set the Transmission Method

[MAC]

- Shows MAC ADDRESS

STEP 2.

Day Light Saving

DDNS Server Type: nsddns.org Auto Sync

DDNS Server: [Text Box]

DDNS Port: 9438

User Domain Name: [Text Box]

System Domain Name: [Text Box]

User: [Text Box]

Password: [Text Box]

Key: [Text Box]

Check

Prev Cancel OK

[DDNS Server Type]

- Set the DDNS Server Type
- Needed to register only when use user defined DDNS server
- Available DDNS servers
 - nsddns.org, dyndns.org, no-ip.com., zoneedit.com, freedns.afraid.org

[DDNS Server]

- Enter the DDNS Server address

[DDNS Port]

- Enter the port number to access to the DDNS server
- The default port is 9438

[User Domain Name]

- Enter the User Domain Name

[System Domain Name]

- Enter the System Domain Name you need when you want to connect via network

[User]

- Enter the User ID to access to the DDNS server

[Password]

- Enter the User password to access to the DDNS server

[Key]

- Need the connection certificate key value if use the freeDNS

[Do Check]

- Verify availability of DDNS server setting

4.2 System

4.2.1 General

4.2.1.1 Date/Time Setting



The screenshot shows a 'Date/Time Setting' dialog box with the following fields and options:

- Time Zone:** UTC+09:00 Seoul, Tokyo
- Language:** English
- Date:** 2014-06-03
- Date Format:** YYYYMMDD
- Date Separator:** /
- Time:** 15:27:47
- Time Format:** 12 HOURS
- Day Light Saving:**
- Buttons:** Setting ... (disabled), Cancel, Next

[Time Zone]

- Set the time zone.

[Language]

- Set the language to use.

[Date]

- Set the current date.

[Date Format]

- Select the date display format.

[Date Separator]

- Set the separator come between year-month-date.

[Time]

- Set the current time.

[Time Format]

- Select the time display format.

[Day Light Saving]

- Set the day light saving for the applied countries.



The screenshot shows a 'Day Light Saving' dialog box with the following fields and options:

- Start:** FEB 1st SUN
- Finish:** AUG 1st SUN
- Buttons:** Cancel, OK

4.2.1.2 Video



[Video Type]

- Show Video Type.


[VGA Resolution]

- Set the VGA output resolution.
1920X1080 P60, 1920X1080 P50, 1920X1080 I50, 1920X1080 P30,
1440X900 @60Hz, 1366X768 @60Hz, 1280X800 @60Hz, 1024X768 @60Hz

[Video Input Type]

- Shows video input type from CH01 ~ CH16.
- Only for HD-SDI Models
- Only HD channels are showed for hybrid models

4.2.1.3 Storage

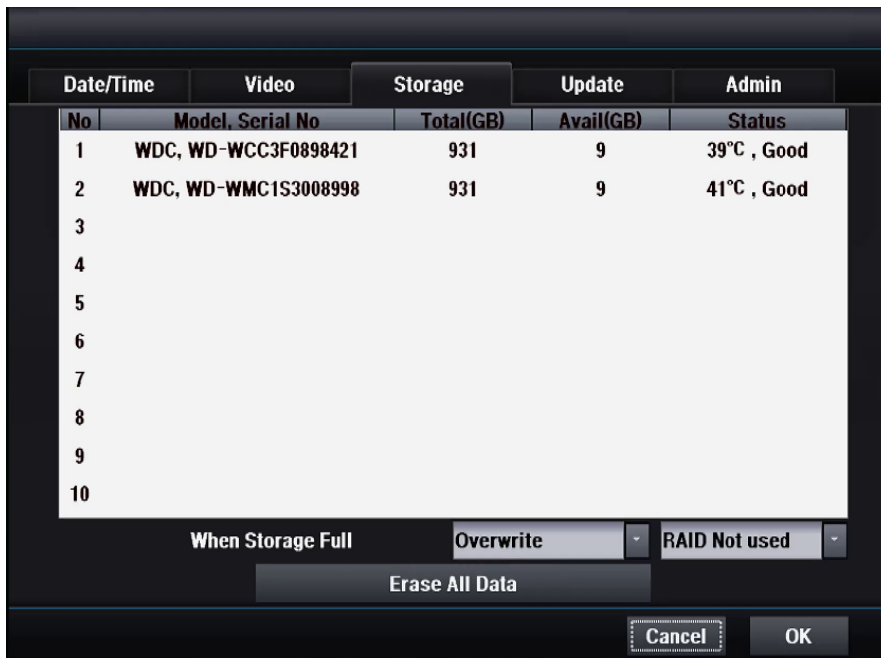

[When HDD is full]

- Overwrite
 - Keep recording after deleting older data.
- Stop
 - Stop recording.

[Erase All Data]

- Erase all the HDD data


[RAID]

- Raid 1
 - Raid 1 means mirroring, which store same data to every 2 HDDs
 - HDD1 and HDD2 (HDD3 and HDD4 ...) have same data.
 - If one of two HDD fails, the other one has data safely.
 - HDD capacity use 50 % of total HDD capacity
- Raid 5
 - Raid 5 stores data to every 3 HDDs
 - If one of three HDD fails, the other two HDDs has data safely.
 - HDD capacity use 66 % of total HDD capacity

We strongly recommend you use RAID1!

4.2.1.4 Update

4.2.1.4.1 Firmware Update

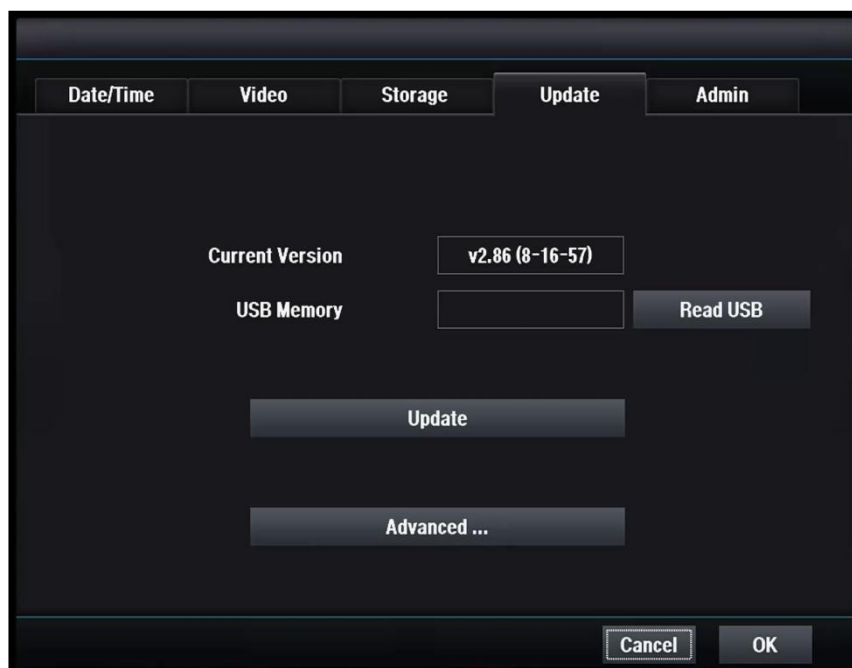

[Current Version]

- Shows current DVR version

[USB Memory]

- Shows version of the USB memory


[Update]

- Update current version to new version of USB memory.

[Advanced]

- Update kernel

4.2.1.4.2 Kernel Update

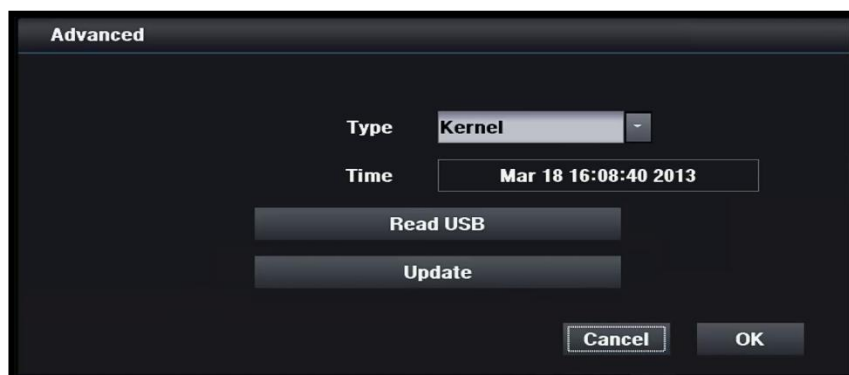

[Type]

- Select kernel

[Time]

- Shows current kernel information installed

[USB Memory]

- Shows version of the USB memory

[Update]

- Update current version to new version of USB memory.

4.2.1.5 Admin

The screenshot shows the Admin configuration page with the following settings:

- DVR ID:** 0
- DVR NAME:** (empty text field)
- Auto Logout Time:** Not Used
- P60 Recording:**
- Auto Restart:** Not used

[DVR ID]

- Select the DVR ID which is used for remote controller. For remote controller, DVR id and remote controller's is should be same.

[DVR Name]

- Set the DVR Name.

[Auto Logout Time]

- Login status is valid during the period of auto logout time
- You don't need to login whenever you try to enter setup and so on
- Not Used / 1 Min / 5 Min / 10 Min / 30 Min / 60 Min are available

[P60 Recording]

- Enable/Disable P60 Recording
- If enabled, 60 fps setting is allowed on recording setting page

[Auto Restart]

- Reboot system according to user setting
- Not used : Disable auto restart(Default)
- Daily : You can select restart time by 30 minutes interval
- Weekly : You can select restart time by weekday & 30 minutes interval
- Monthly : You can select restart time by day & 30 minutes interval

4.2.2 Account

4.2.2.1 New Group

The screenshot shows a 'New Group' dialog box with the following elements:

- Navigation tabs: New Group, Edit Group, New User, Edit User, Checking.
- Group Name: A text input field with an 'Add' button.
- Permissions list (all checked):
 - Setup
 - Playback
 - Network
 - Backup
 - Shut down
 - Lock
- Camera for Network (all checked):
 - 1 2 3 4
 - 5 6 7 8
 - 9 10 11 12
 - 13 14 15 16
- Buttons: Cancel, OK.

[Group Name]

- Type new group name

[Permission]

- Select the Setup / Playback / Network / Backup / Shutdown / Lock
- Select the permissions for the edited group.


[Add]

- Add new group with new permissions
- Maximum number is 8

[Camera for Network]

- Select the cameras privileged for network

4.2.2.2 Edit Group

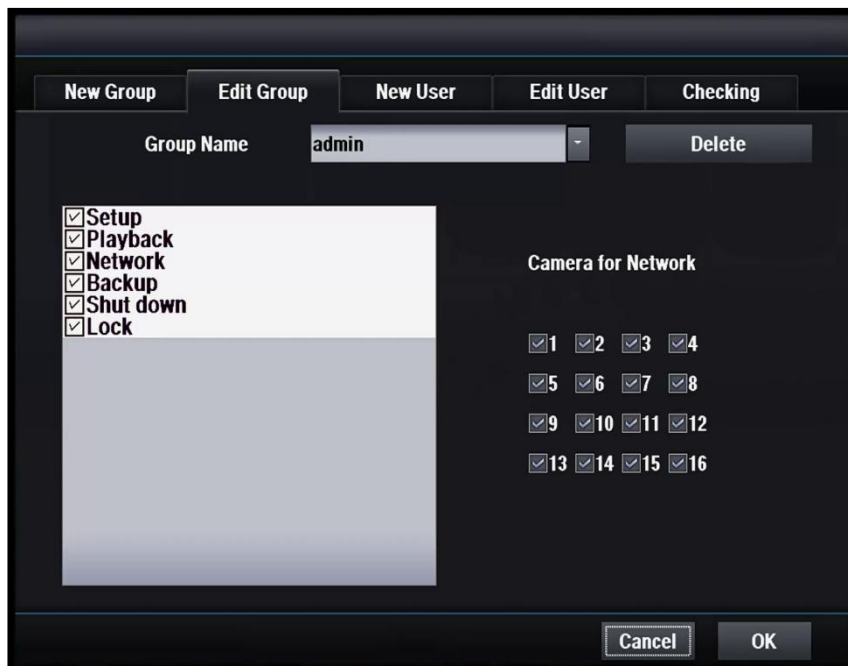

[Group Name]

- Select the group name to edit.

[Permission]

- Select the Setup / Playback / Network / Backup / Shutdown / Lock
- Select the permissions for the edited group.

[Delete]

- Delete the selected group name.

[Camera for Network]

- Select the cameras privileged for network

4.2.2.3 New User

The screenshot shows a 'New User' dialog box with the following fields and controls:

- User Name:** A text input field and an **Add** button.
- Group Name:** A dropdown menu with 'admin' selected.
- Password:** A text input field.
- Confirm:** A text input field.
- Buttons:** **Cancel** and **OK** buttons at the bottom right.

[User Name]

- Enter new user name.

[Group Name]

- Select the group name for new user.
- User is allowed to use each group permission.

[Password]

- Type password

[Add]

- Add new user

4.2.2.4 Edit User

The screenshot shows a dialog box with the following elements:

- Tabbed interface: **New Group**, **Edit Group**, **New User**, **Edit User** (selected), **Checking**
- User Name**: dropdown menu showing "admin", with a **Delete** button to its right.
- Group Name**: dropdown menu showing "admin", with a **Modify** button to its right.
- Old Password**: empty text input field.
- New Password**: empty text input field.
- Bottom right: **Cancel** and **OK** buttons.

[User Name]

- Select user you want to edit

[Group Name]

- Select new group you want

[Modify]

- Modify user setting


[Old Password]

- Type old password

[New Password]

- Type new password

4.2.2.5 Checking

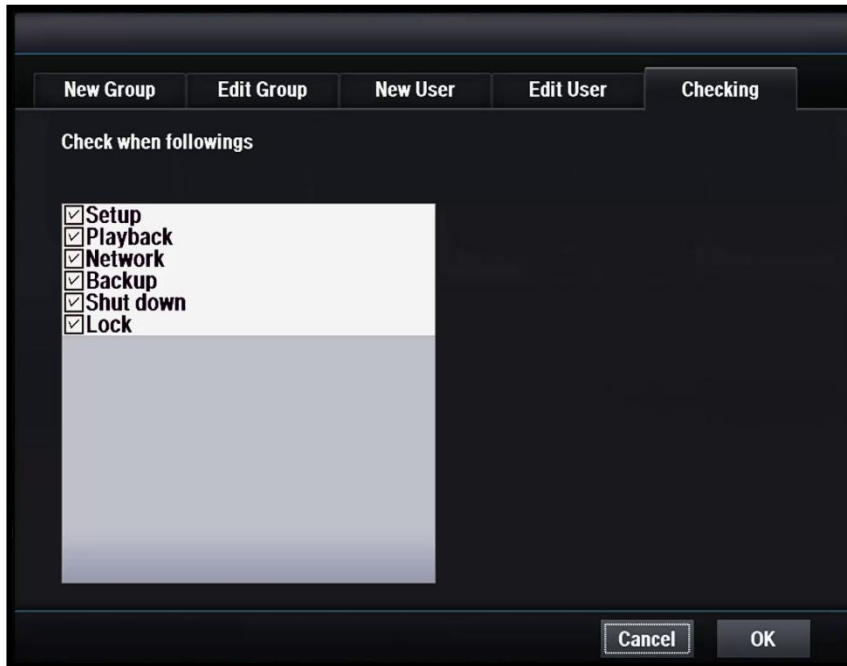


[Checking Setting]

- Select whether you will require ID & password or not.

4.2.3 Log

4.2.3.1 Log

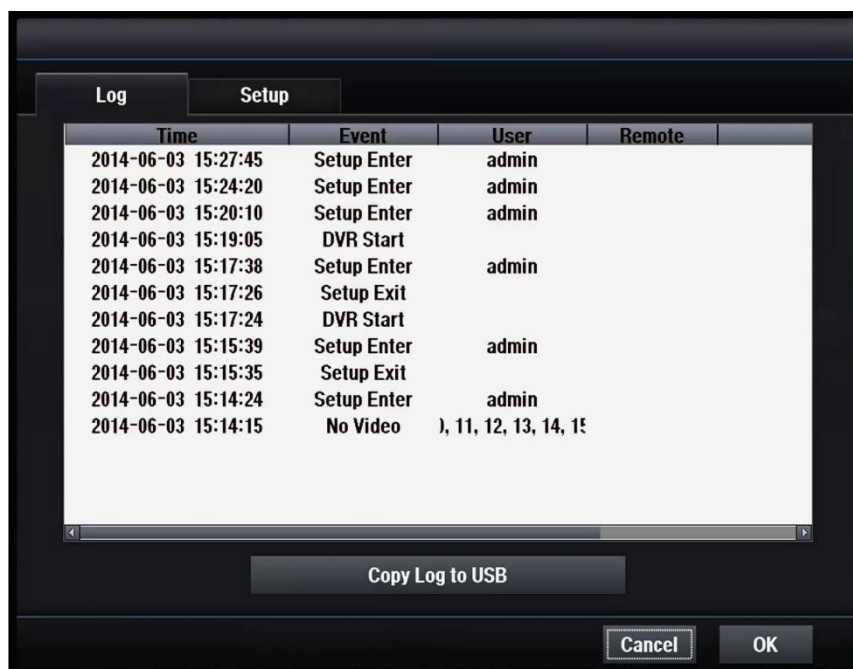


The screenshot shows a user interface with two tabs: 'Log' and 'Setup'. The 'Log' tab is active, displaying a table of system events. The table has five columns: 'Time', 'Event', 'User', and 'Remote'. The 'Remote' column is currently empty. Below the table is a 'Copy Log to USB' button, and at the bottom right are 'Cancel' and 'OK' buttons.

Time	Event	User	Remote
2014-06-03 15:27:45	Setup Enter	admin	
2014-06-03 15:24:20	Setup Enter	admin	
2014-06-03 15:20:10	Setup Enter	admin	
2014-06-03 15:19:05	DVR Start		
2014-06-03 15:17:38	Setup Enter	admin	
2014-06-03 15:17:26	Setup Exit		
2014-06-03 15:17:24	DVR Start		
2014-06-03 15:15:39	Setup Enter	admin	
2014-06-03 15:15:35	Setup Exit		
2014-06-03 15:14:24	Setup Enter	admin	
2014-06-03 15:14:15	No Video), 11, 12, 13, 14, 15	

[Copy Log to USB]

- Copy Log data to USB.

4.2.3.2 Setup

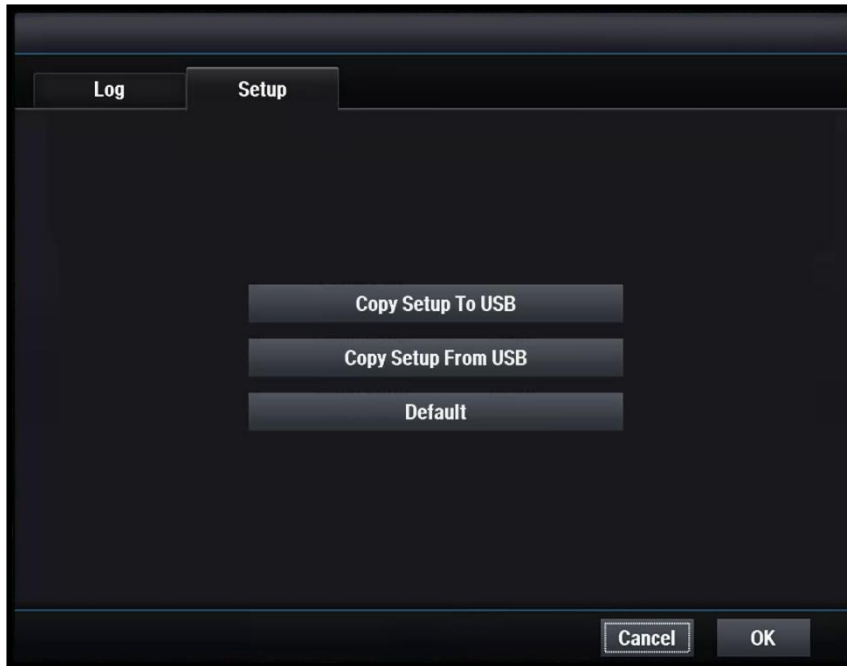

[Copy Setup To USB]


- Copy Setup data to USB

[Copy Setup From USB]

- Copy Setup data from USB to DVR


[Default]

- Set DVR setup information to factory default

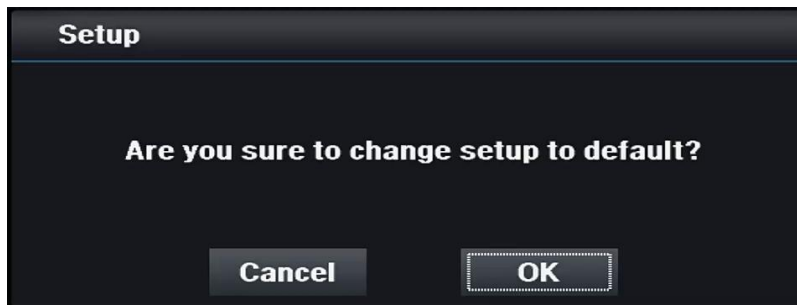

4.2.4 Backup

4.2.4.1 H264 Backup

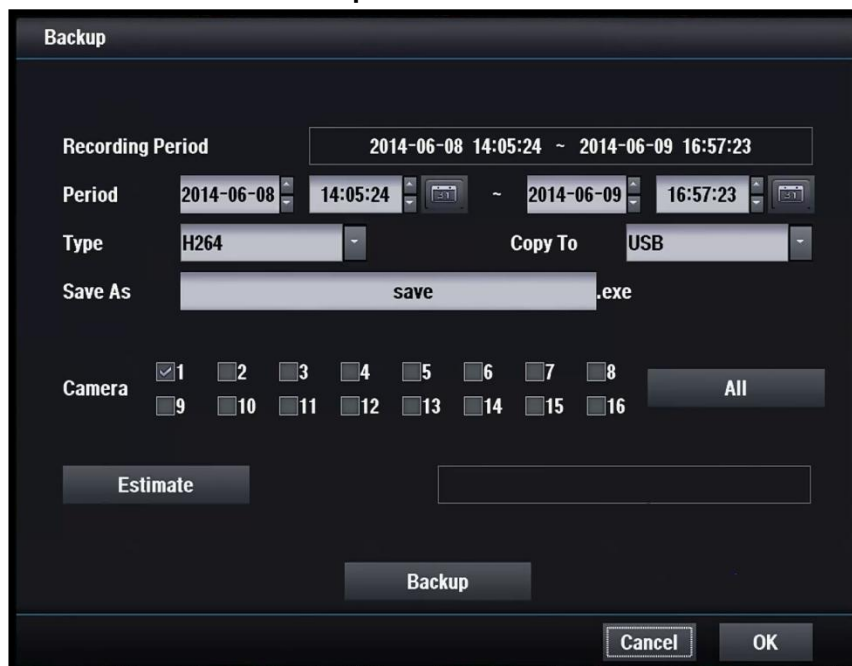

[H264 Backup]

- Backup video clip according to cameras selected and period set

[Recording Period]

- Show current recorded period

[Period]

- Set begin time and end time you want to backup

[Type]

- Select JPG or H264 as a backup file format

[Copy To]

- Set destination device

[Save As]

- Type filename

[Camera]

- Select cameras you want to backup


[Estimate]

- Estimate space needed for your backup

[Do backup]

- Start backup

4.2.4.2 JPG Backup

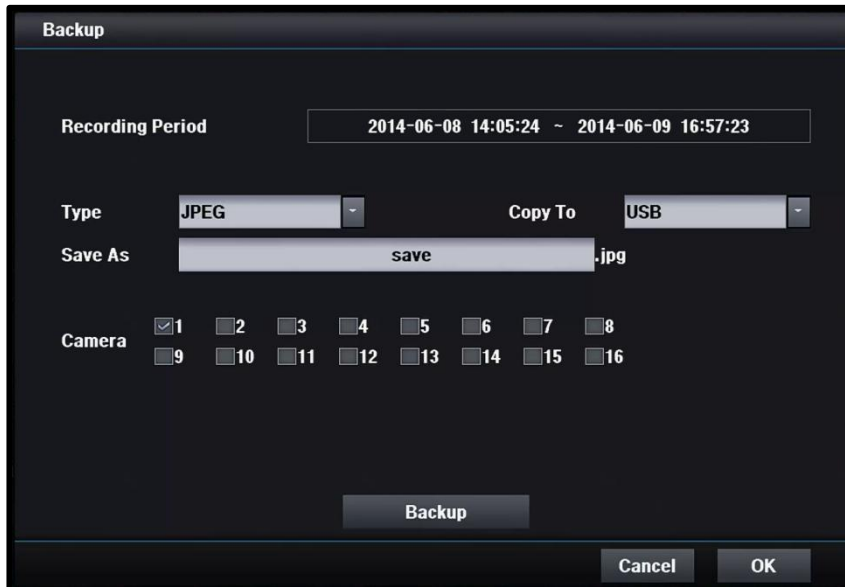

[JPG백업]

- Save current background image as JPG format

[Period]

- Set the start/end date and time.

[Copy to]

- Select a backup device, USB memory or CD/DVR-R

[Save as]

- Set the backup file name.

[Camera]

- Only 1 camera should be selected at the same time
- Only cameras existed in a current background split mode are available

[Do backup]

- Starts backup.

4.3 Recording

4.3.1 Setting

4.3.1.1 Camera



[Recording Type]

- Continue
 - Record continuously
- Event
 - Record only when event occur
- Pre-Event
 - Record data before event occur

[On]

- Enable/Disable camera

[Name]

- Type camera name

[Period]

- Set period for event/pre-event

[Resolution]

- Set recording size

[Frame]

- Set recording frame rate

[Quality]

- Set recording video quality

[Audio]

- Enable/Disable audio recording

[Fixed GOP]

-

4.3.1.2 PTZ



[On]

- Enable/Disable PTZ

[Protocol]

- Set PTZ protocol

[Databit]

- Set data bit

[ID]

- Set PTZ ID

[Baudrate]

- Set baud rate

[Stopbit]


- Set stop bit

[Parity]

- Set parity bit

[Tour ...]

- DVR handle touring schedule without using camera's touring
- You can start touring by PTZ mode on the live screen mode

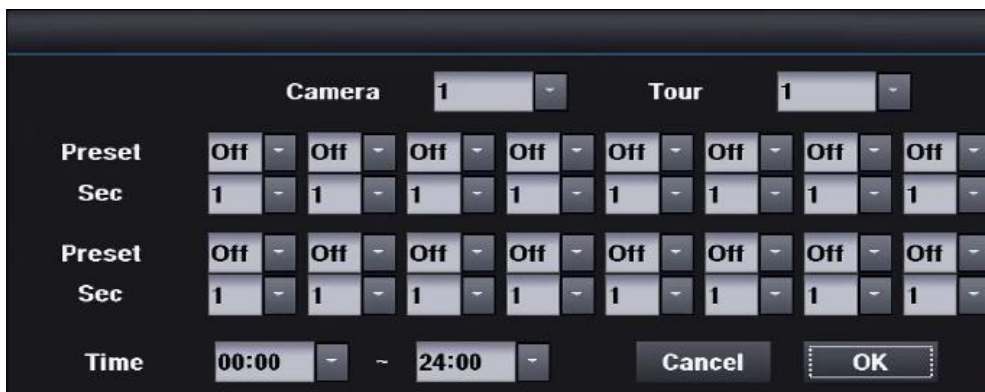

[Camera]

- Camera NO

[Preset]

- ON/OFF Preset

[Time]

- Set Time

[Tour]

- Tour NO

[Sec]

- Set Time

4.3.1.3 Keyboard



[On]

- Enable/Disable keyboard controller

[ID]

- Set keyboard ID

[Protocol]

- Set PTZ protocol

[Baudrate]

- Set baud rate

[Databit]

- Set data bit

[Stopbit]

- Set stop bit

[Parity]

- Set parity bit

4.3.1.4 Privacy



[No]

- Camera number

[Hidden]

- Hide each camera
- Hidden function hide whole camera.


[Mosaic]

- Mosaic mask specific region with black color.
- In order to use Mosaic, first check Mosaic checkbox, set region as you want to mask

[Cut Days]

- For a private law, recording days is restricted by setting values.

4.3.1.5 IP Cam

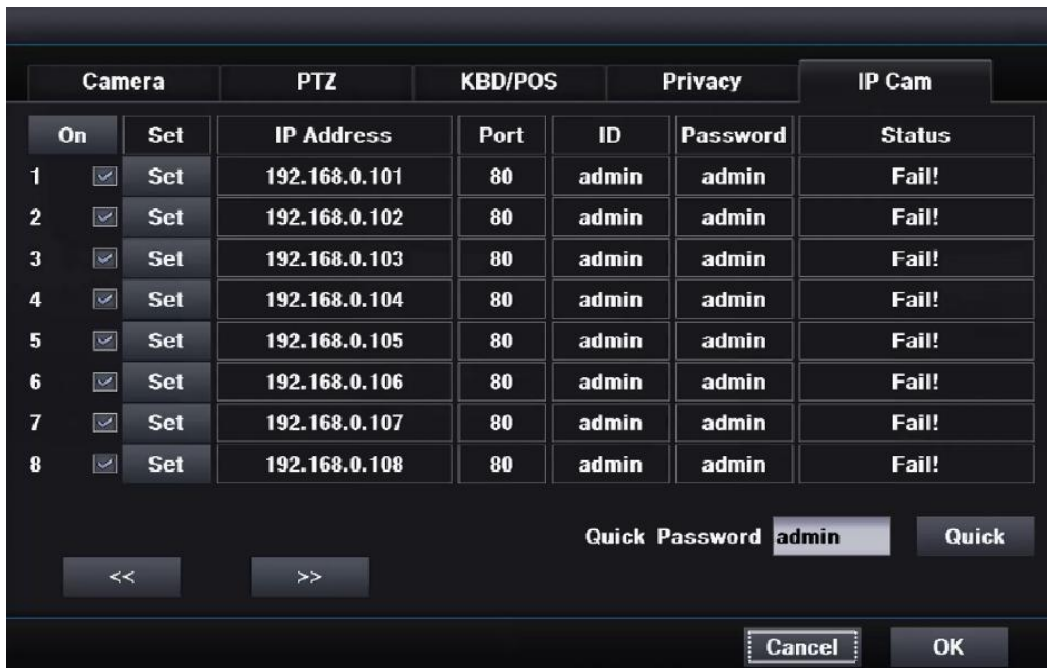

[On]

- Enable/Disable Camera
- if you enable IP channel on, this channel is used only for IP cam regardless of HD or Analog coaxial video input connected.


[Status]

- Shows "Success" when IP cam streaming is being transferred
- Basically, DVR try to get dual streaming from IP cam. If DVR succeed to get two streaming, it show "Success". If not, it shows "Fail"
- streaming is transferred after IP cam detection and communication. So "Success" message means all the things is successful.

[Quick]

- Quick button does following
 - Detect all IP cameras
 - Sort all IP cameras by IP address
 - Register each IP camera for each channel
 - Enable IP channel
- For Quick setting, DVR uses "Quick Password" for Quick processing. You should enter proper default password for your IP camera. Default is "admin"
- You can use drag and drop on the live screen after setting IP camera to change position of IP cameras

4.3.1.5.1 IP Cam Set

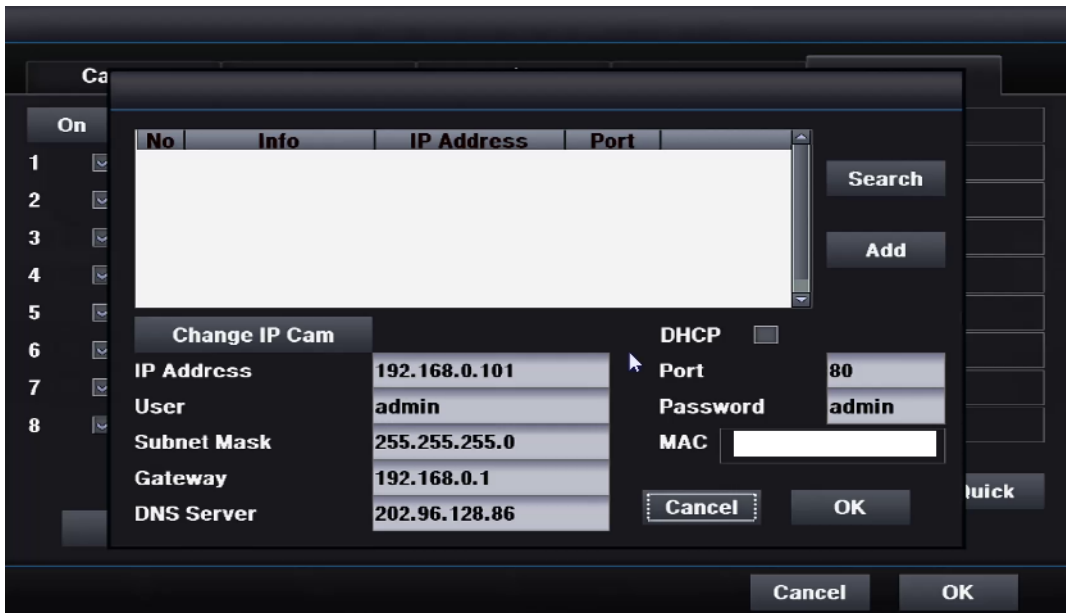

How to register IP cam

1. Select IP camera you want to assign to this channel
2. Click Add button
3. Enter User ID(“admin” is default for most iP cam)
4. Enter Password(“admin” or “12345” is default for most iP cam)
5. Click OK button

[DHCP]

- Set DHCP

[IP Address]

- Set IP

[User]

- Set User

[Search]

- Restart probing for IP camera
- Use this button only when some IP camera is not detected

[Subnet Mask]

- Set Subnet Mask

[Gateway]

- Set Gateway

[Add]

- Add selected IP cam to this channel

[DNS Server]

- Set DNS Server

[Change IP Cam]

- Change IP address of IP cam.
- It is recommended you use additional tools to change IP address of IP cams
- Additional tools for IP cam is provided by CD-ROM
- If you want to this function, you should contact to our technical team.

[Port]

- Set Port

[Password]

- Set Password

4.3.2 Motion



[No]

- Camera number

[Sensitivity]

- Select motion sensitivity

[All Area]

- Select all area as a motion detection area

[Set]

- Set motion detection area

4.3.2.1 Motion Area Setting



[Set All]

- Select All region

[Clear All]

- Clear All region

[Copy to All]

- Copy this region set to all other channels.

[Save & Exit]

- Exit after saving this region

[Exit]


- Exit without saving this region

[Cancel]

- Close window

4.3.3 Schedule

4.3.3.1 Schedule

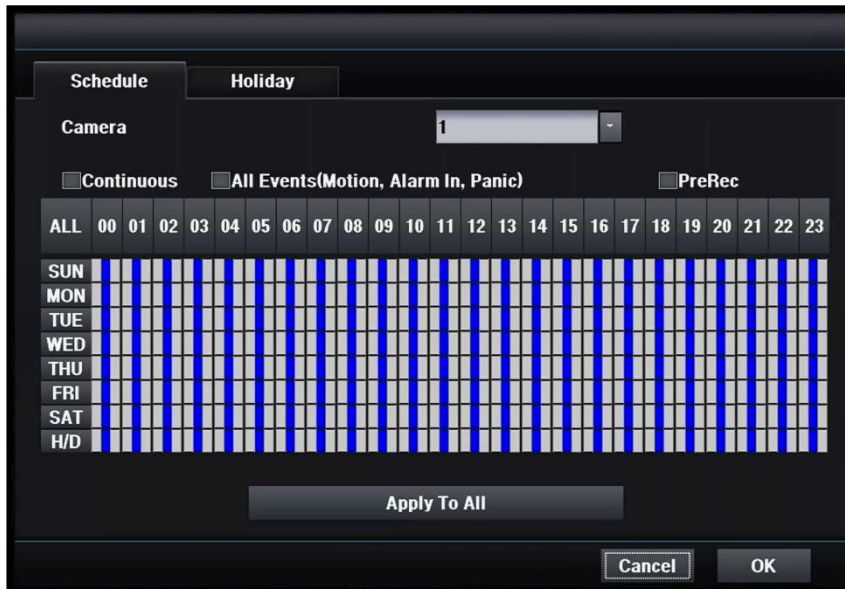

- You can set the schedule by hour, week, holiday

[Camera]

- Select camera you want to set

[Continuous]

- Record camera continuously
- Set the schedule continuously

[All events]

- Record camera only when event occurs
- Set the schedule by event

[PreRec]

- Record camera before event occurs
- Set the schedule by pre-event
(PreRec can be selected only with other event mode.)

[Apply To All]

- Apply current setting to all other cameras

[Hours : 00 ~ 23]

- Apply selected mode to selected hours

[Weekday : Sun ~ Sat, Holiday]

- Apply selected mode to selected weekday
- Holiday is selected by 4.3.3.2


[Apply To All]

- Apply current setting to all other cameras

[No Recording]

- No recording when this is checked
- Only live monitoring is available when this is checked

4.3.3.2 Holiday

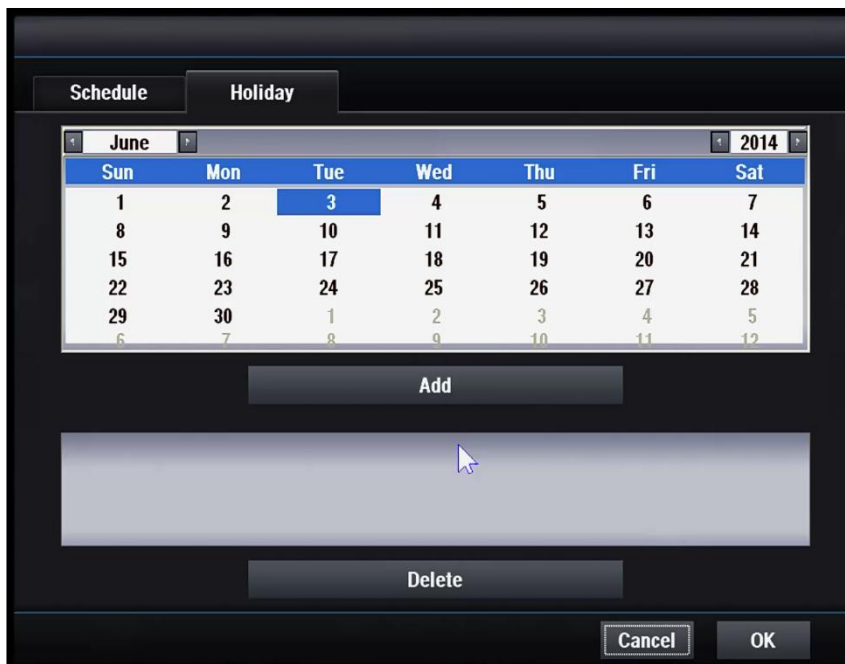

[Add]

- Add new holiday

[Delete]

- Delete selected holiday

4.4 Network

4.4.1 General

4.4.1.1 Setting

The screenshot shows a network configuration window titled "Day Light Saving". It features a list of settings on the left and their corresponding input fields on the right. The "Static/DHCP" setting is currently set to "DHCP". Below the list are three dropdown menus: "Transmission Method" set to "By Speed", "Fps" set to "25", and "Quality" set to "BEST". At the bottom are "Prev", "Cancel", and "Next" buttons.

Setting	Value
Static/DHCP	DHCP
IP Address	
Subnet Mask	
Gateway	
DNS Server	
TCP Port	
UDP Port	
HTTP Port	
Transmission Method	By Speed
Fps	25
Quality	BEST

[STATIC/DHCP]

- STATIC
 - Set network to static mode
- DHCP
 - Set network to DHCP mode

[IP Address]

- Set IP address
- Auto detected for DHCP mode

[Subnet Mask]

- Set subnet mask
- Auto detected for DHCP mode

[Gateway]

- Set gateway address
- Auto detected for DHCP mode

[DNS Server]

- Set DNS server address
- Auto detected for DHCP mode

[TCP Port]

- Set TCP port number
- Default is 7080

[UDP Port]

- Set TCP port number
- Default is 7081

[HTTP Port]

- Set HTTP port number
- Default is 80

[Transmission Method]

- Select By Quality if you want to high quality
- Select By Speed if you want to high transmission speed

[Fps]

- Frames for network transmission


[Quality]

- Quality for network transmission

▪[MAC]

- MAC ADDRESS

4.4.1.2 NTP

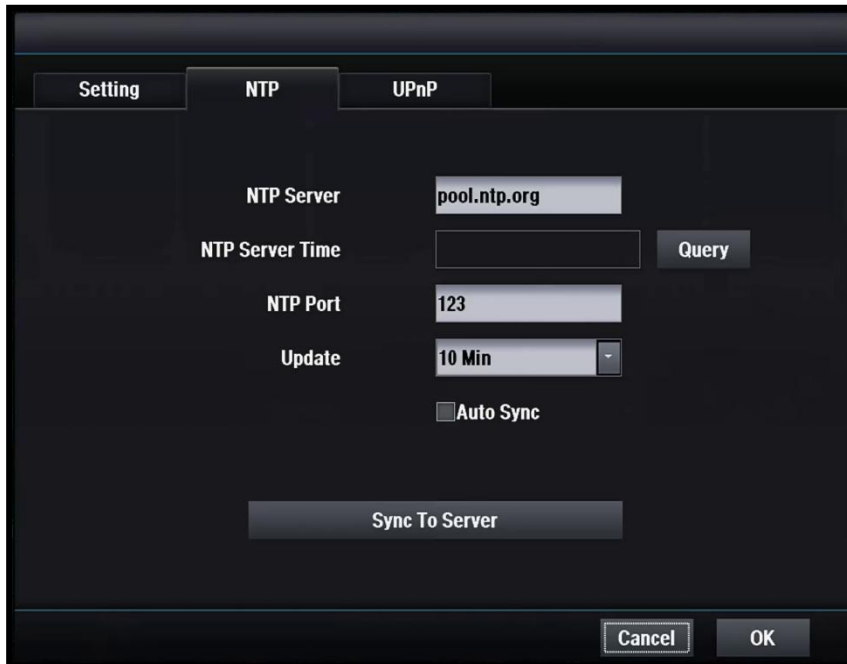

[NTP Server]

- Type NTP server name

[NTP Server Time]

- [Query] Click button and NTP server time is displayed

[NTP Port]

- Set NTP port number
- Default is 123

[Update]

- Set auto update time interval

[Auto Sync]

- Select whether you use auto sync

[Sync To Server]

- Sync DVR time to NTP server time

4.4.1.3 UPnP

[UPnP]

- Click button and UPnP function is enabled

4.4.2 DDNS

The screenshot shows a configuration window for DDNS. The window title is 'DDNS'. It features a tab labeled 'DDNS'. The configuration options are as follows:

- DDNS Server Type:** A dropdown menu with 'nsddns.org' selected.
- Auto Sync:** A checkbox that is currently unchecked.
- DDNS Server:** An empty text input field.
- DDNS Port:** A text input field containing the value '9438'.
- User Domain Name:** An empty text input field.
- System Domain Name:** An empty text input field.
- User:** An empty text input field.
- Password:** An empty text input field.
- Key:** A long, empty text input field.

At the bottom of the window, there are three buttons: 'Check', 'Cancel', and 'OK'.

[DDNS Server Type]

- Set the DDNS Server Type
- Needed to register only when use user defined DDNS server
- Available DDNS servers
 - nsddns.org, dyndns.org, no-ip.com., zoneedit.com, freedns.afraid.org

[DDNS Server]

- Enter the DDNS Server address

[DDNS Port]

- Enter the port number to access to the DDNS server
- The default port is 9438

[User Domain Name]

- Enter the User Domain Name

[System Domain Name]

- Enter the System Domain Name you need when you want to connect via network

[User]

- Enter the User ID to access to the DDNS server

[Password]

- Enter the User password to access to the DDNS server

[Key]


- Need the connection certificate key value if use the freeDNS

[Do Check]

- Verify availability of DDNS server setting

4.4.3 E-Mail

4.4.3.1 Receiver

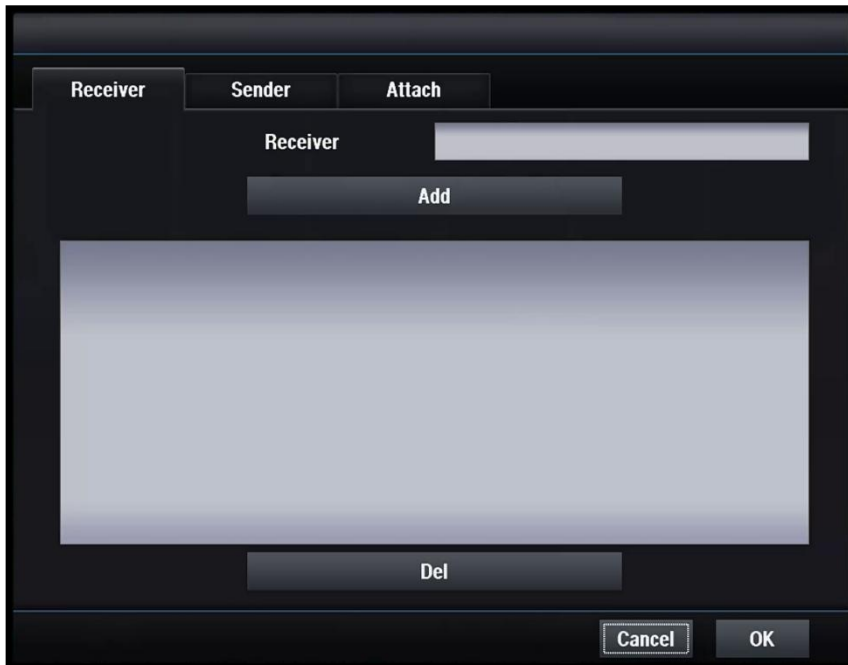

[Receiver]

- Type Receiver email address

[Add]

- Add new receiver

[Del]

- Delete selected receiver

4.4.3.2 Sender

The screenshot shows a configuration window with three tabs: 'Receiver', 'Sender', and 'Attach'. The 'Sender' tab is selected. The configuration options are as follows:

Field	Value
SMTP Server Type	mail.nsddns.org
SMTP Server	
SMTP Port	587
Use SSL Connection	<input type="checkbox"/>
User	
Password	

Buttons: Cancel, OK

[SMTP Server Type]

- Select SMTP server type

[SMTP Server]

- Type SMTP server address

[SMTP Port]

- Set SMTP Port number

[SSL]

- Check if your SMTP server supports SSL


[User]

- Type user name

[Password]

- Type password

4.4.3.3 Attachment

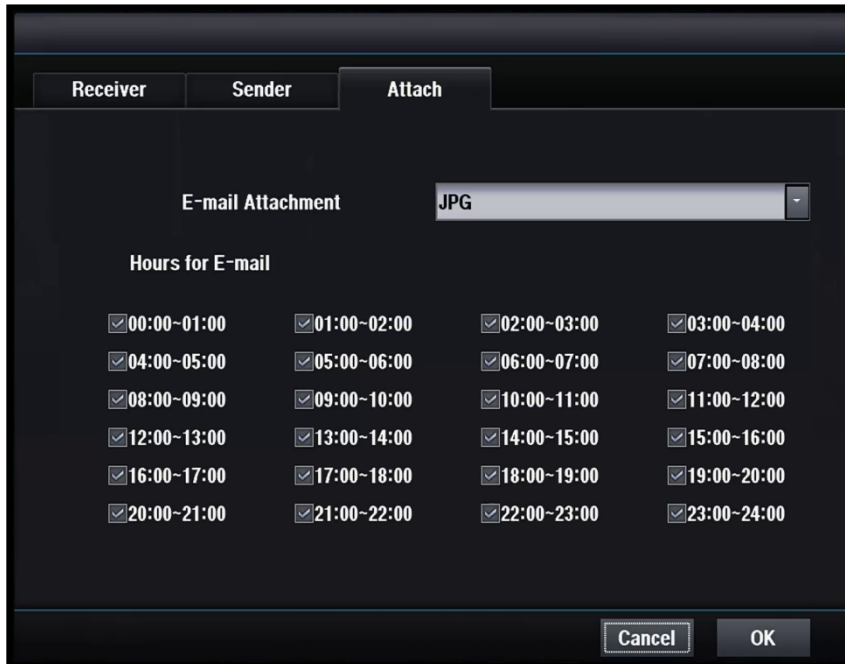

[Email Attachment]

- Set attach type for email
- None : No file attached when email
- JPG : JPG capture image attached sent when email

[Email allowance hours]

- You can set the hours when you want to receive email
- Email is not sent for hours which are not selected.

4.5 Alarm

4.5.1 Alarm

4.5.1.1 Alarm In

The screenshot shows a configuration window for 'Alarm In'. It has two tabs: 'Alarm In' and 'Alarm Out'. The 'Alarm In' tab is selected. The window contains the following elements:

- Alarm In:** A dropdown menu showing '1' and a checked 'Enabled' checkbox.
- Camera:** A grid of checkboxes for cameras 1 through 16. Camera 1 is checked.
- Alarm Out:** A grid of checkboxes for alarm out triggers 1 through 16.
- Buzzer:** A checkbox that is currently unchecked.
- Full Screen:** A checkbox that is currently unchecked.
- E-Mail:** A checkbox that is currently unchecked.
- Buttons:** 'Apply To All', 'Cancel', and 'OK' buttons.

[Alarm In]

- Select Alarm In number

[Enabled]

- Set Enable/Disable

[Camera]

- Select camera to be recorded when alarm

[Alarm Out]

- Select Alarm Out to be triggered when alarm

[Buzzer]

- Enable/Disable Buzzer when alarm

[Full Screen]

- Enable/Disable Full screen mode when alarm

[E-Mail]

- Enable/Disable email transmission when alarm

4.5.1.2 Alarm Out

No	Type	Period
1	N/C	05
2	N/C	05
3	N/C	05
4	N/C	05
5	N/C	05
6	N/C	05
7	N/C	05
8	N/C	05


[Type]

- Select Alarm In Type

[Period]

- Set Alarm Out period

4.5.2 Motion

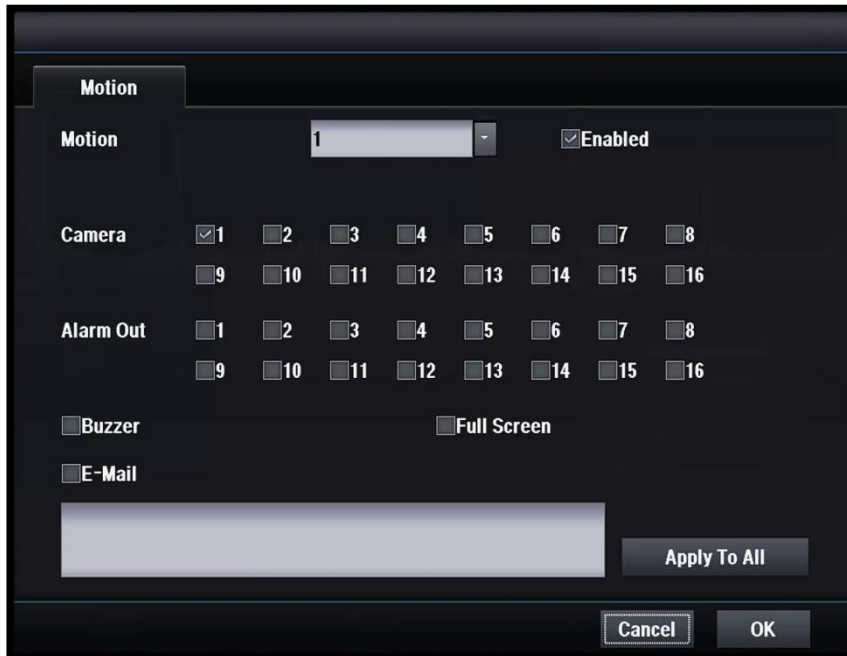

[Motion]

- Select Motion number

[Enabled]

- Set Enable/Disable

[Camera]

- Select camera to be recorded when motion

[Alarm Out]

- Select Alarm Out to be triggered when motion

[Buzzer]

- Enable/Disable Buzzer when motion

[Full Screen]

- Enable/Disable Full screen mode when motion

[E-Mail]

- Enable/Disable email transmission when motion

4.5.3 POS/ATM

POS/ATM

POS/ATM 1 Enabled

Camera 1 2 3 4 5 6 7 8
 9 10 11 12 13 14 15 16

Alarm Out 1 2 3 4 5 6 7 8
 9 10 11 12 13 14 15 16

Buzzer Full Screen

E-Mail

Apply To All

Cancel OK

[POS/ATM]

- Select POS/ATM number

[Enabled]

- Set Enable/Disable

[Camera]

- Select camera to be recorded when POS/ATM

[Alarm Out]

- Select Alarm Out to be triggered when POS/ATM

[Buzzer]

- Enable/Disable Buzzer when POS/ATM

[Full Screen]

- Enable/Disable Full screen mode when POS/ATM

[E-Mail]

- Enable/Disable email transmission when POS/ATM

4.5.4 No Video

The screenshot shows a configuration window titled "No Video". At the top, there is a sub-header "No Video" and a dropdown menu with the value "1" selected. To the right of the dropdown is an "Enabled" checkbox. Below this, there is an "Alarm Out" section with 16 checkboxes numbered 1 through 16. Underneath the "Alarm Out" section are two more checkboxes: "Buzzer" and "E-Mail". At the bottom right of the window is an "Apply To All" button. At the very bottom of the window are "Cancel" and "OK" buttons.

[No Video]

- Select No Video Camera Number

[Enabled]

- Set Enable/Disable

[Alarm Out]

- Select Alarm Out to be triggered when No Video

[Buzzer]

- Enable/Disable Buzzer when No Video

[E-Mail]

- Enable/Disable email transmission when No Video

4.5.5 Abnormal



[Abnormal]

- Select abnormal type

[Enabled]

- Set Enable/Disable

[Alarm Out]

- Select Alarm Out to be triggered when each abnormal type

[Buzzer]

- Enable/Disable Buzzer when each abnormal type

[E-Mail]

- Enable/Disable email transmission when each abnormal type

4.6 View

4.6.1 OSG

4.6.1.1 System



[Storage]

- Enable/Disable storage Icon

[Time]

- Enable/Disable time Icon

[Spot]

- Enable/Disable spot Icon

[PTZ]

- Enable/Disable PTZ Icon

[Keyboard]

- Enable/Disable keyboard Icon

[Sequence]

- Enable/Disable sequence Icon

[Network]

- Enable/Disable network Icon

[Font Size]

- Set Font Size

[Border]

- Set Border


[Bubble Menu]

- Set Bubble Menu

[All On]

- Enable/Disable All

4.6.1.2 Live

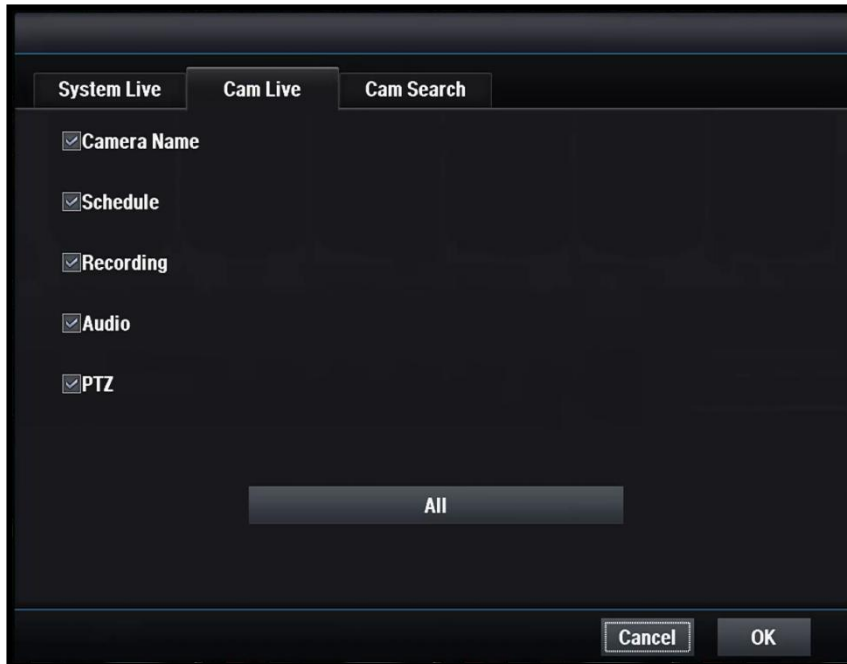

[Camera Name]

- Enable/Disable Camera Name

[Schedule]

- Enable/Disable schedule icon

[Recording]

- Enable/Disable recording icon

[Audio]

- Enable/Disable audio icon


[PTZ]

- Enable/Disable PTZ icon

[All On]

- Enable/Disable All

4.6.1.3 Search

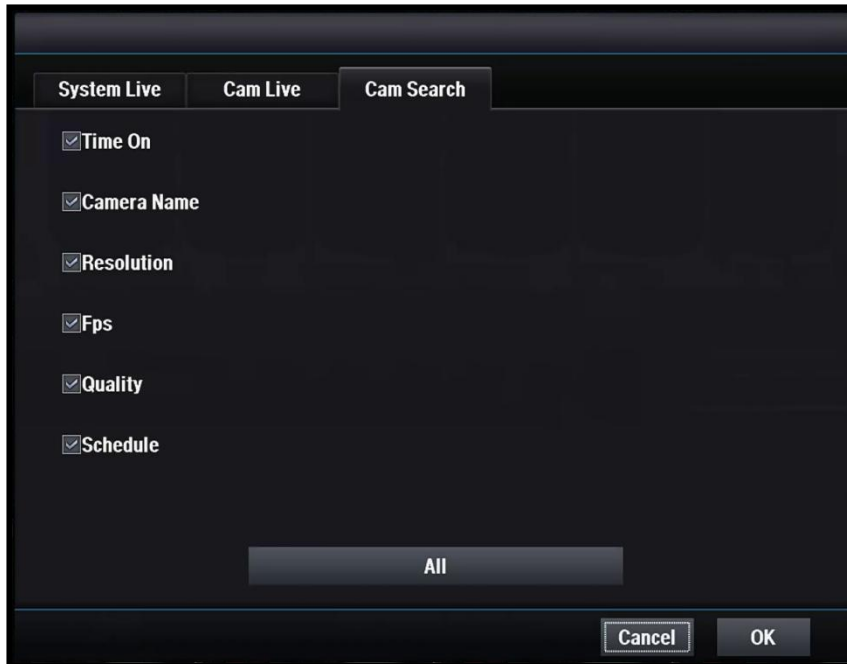

[Time]

- Enable/Disable Time

[Camera Name]

- Enable/Disable camera name

[Resolution cording]

- Enable/Disable resolution icon

[Fps]

- Enable/Disable frame rate

[Quality]


- Enable/Disable video quality

[All On]

- Enable/Disable All

4.6.2 POS/ATM


4.6.2.1 Live

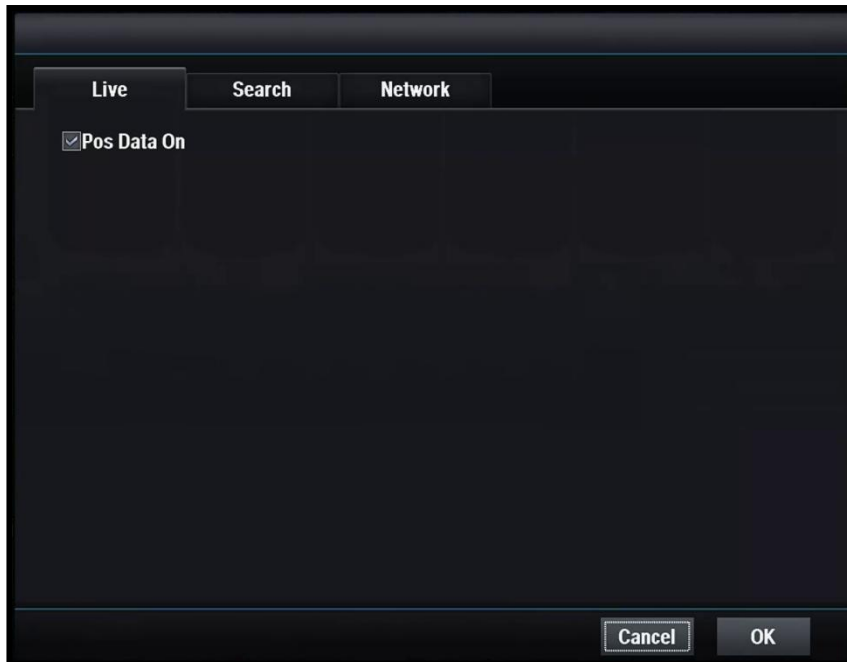

[POS Data On]

- Enable/Disable POS display


4.6.2.2 Search

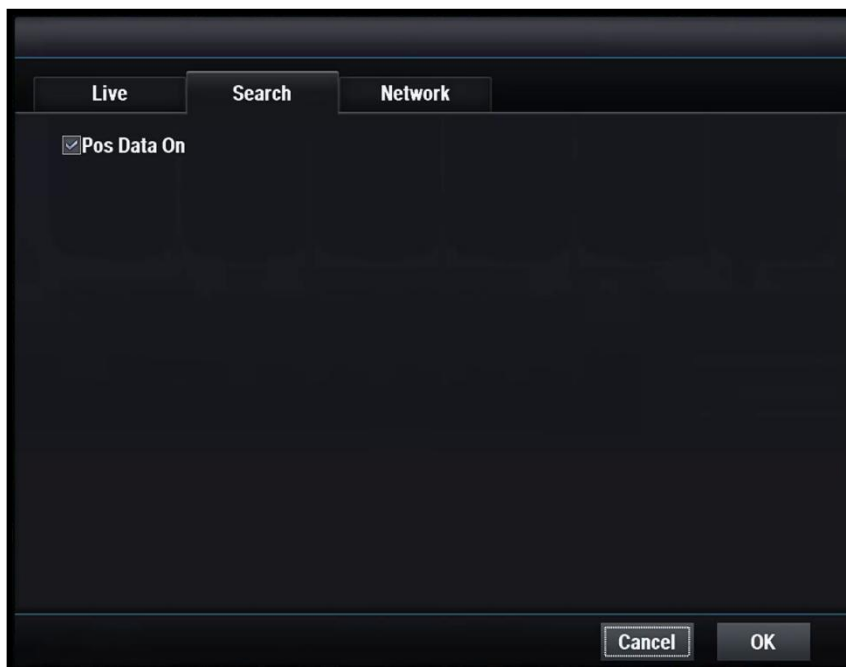

[POS Data On]

- Enable/Disable POS display

4.6.2.3 Network

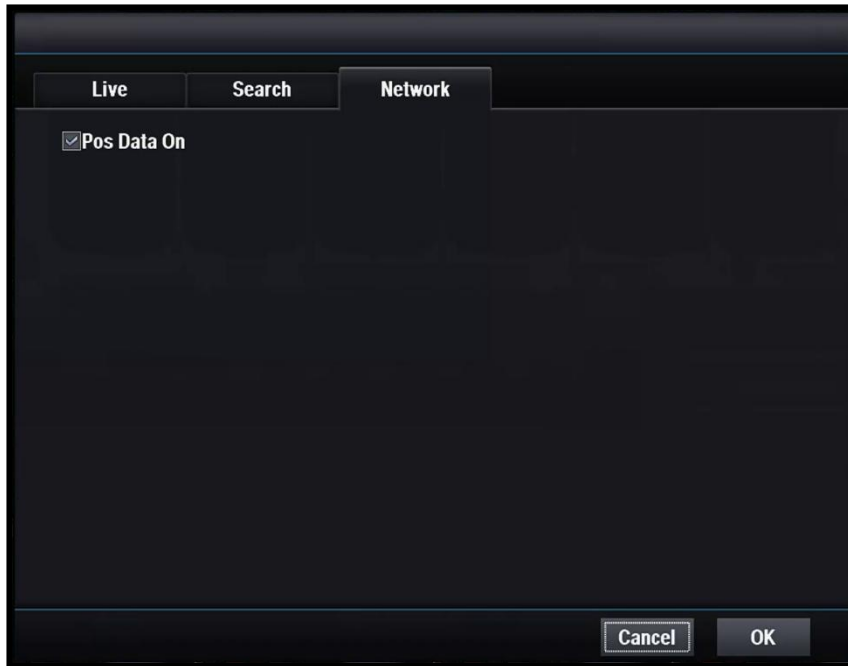

[POS Data On]

- Enable/Disable POS display

4.6.3 Main Monitor

4.6.3.1 1 Division



[Camera]

- Select cameras you want to show

[Period]

- Select duration when auto dwelling

4.6.3.2 4 Division

Page	Camera	Period
Page 1 of 4 Division	<input checked="" type="checkbox"/> 1 <input checked="" type="checkbox"/> 2 <input checked="" type="checkbox"/> 3 <input checked="" type="checkbox"/> 4 <input type="checkbox"/> 5 <input type="checkbox"/> 6 <input type="checkbox"/> 7 <input type="checkbox"/> 8 <input type="checkbox"/> 9 <input type="checkbox"/> 10 <input type="checkbox"/> 11 <input type="checkbox"/> 12 <input type="checkbox"/> 13 <input type="checkbox"/> 14 <input type="checkbox"/> 15 <input type="checkbox"/> 16	3
Page 2 of 4 Division	<input type="checkbox"/> 1 <input type="checkbox"/> 2 <input type="checkbox"/> 3 <input type="checkbox"/> 4 <input checked="" type="checkbox"/> 5 <input checked="" type="checkbox"/> 6 <input checked="" type="checkbox"/> 7 <input checked="" type="checkbox"/> 8 <input type="checkbox"/> 9 <input type="checkbox"/> 10 <input type="checkbox"/> 11 <input type="checkbox"/> 12 <input type="checkbox"/> 13 <input type="checkbox"/> 14 <input type="checkbox"/> 15 <input type="checkbox"/> 16	3
Page 3 of 4 Division	<input type="checkbox"/> 1 <input type="checkbox"/> 2 <input type="checkbox"/> 3 <input type="checkbox"/> 4 <input type="checkbox"/> 5 <input type="checkbox"/> 6 <input type="checkbox"/> 7 <input type="checkbox"/> 8 <input checked="" type="checkbox"/> 9 <input checked="" type="checkbox"/> 10 <input checked="" type="checkbox"/> 11 <input checked="" type="checkbox"/> 12 <input type="checkbox"/> 13 <input type="checkbox"/> 14 <input type="checkbox"/> 15 <input type="checkbox"/> 16	3
Page 4 of 4 Division	<input type="checkbox"/> 1 <input type="checkbox"/> 2 <input type="checkbox"/> 3 <input type="checkbox"/> 4 <input type="checkbox"/> 5 <input type="checkbox"/> 6 <input type="checkbox"/> 7 <input type="checkbox"/> 8 <input type="checkbox"/> 9 <input type="checkbox"/> 10 <input type="checkbox"/> 11 <input type="checkbox"/> 12 <input checked="" type="checkbox"/> 13 <input checked="" type="checkbox"/> 14 <input checked="" type="checkbox"/> 15 <input checked="" type="checkbox"/> 16	3


[Camera]

- Select cameras you want to show

[Period]

- Select duration when auto dwelling

4.6.3.3 9 Division

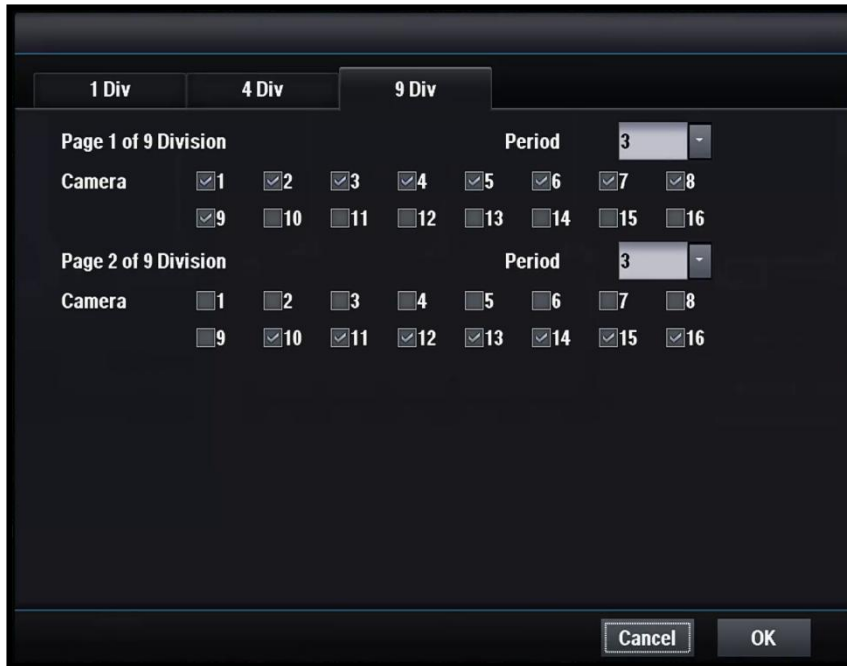

[Camera]

- Select cameras you want to show

[Period]

- Select duration when auto dwelling

4.6.4 Multi Spot

4.6.4.1 1 Division



[[Enable]

- Enable/Disable Mutil Spot
- If you check “Enabled”, composite video output port is used for multispot
- In this case, composite video out show multi spot independently regardless of main screen

[[Camera]

- Select cameras you want to show

[Period]

- Select duration when auto dwelling

4.6.4.2 4 Division

The screenshot shows a configuration window for a 4-division camera setup. The window has three tabs: '1 Div', '4 Div' (selected), and '9 Div'. The '4 Div' tab is active, showing four pages of camera selection. Each page has a 'Camera' section with 16 checkboxes and a 'Period' section with a dropdown menu. The 'Camera' checkboxes are arranged in two rows of eight. The 'Period' dropdown menu is set to '3'. The 'OK' button is highlighted.

Page	Camera 1	Camera 2	Camera 3	Camera 4	Camera 5	Camera 6	Camera 7	Camera 8	Camera 9	Camera 10	Camera 11	Camera 12	Camera 13	Camera 14	Camera 15	Camera 16	Period
Page 1 of 4 Division	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	3
Page 2 of 4 Division	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	3
Page 3 of 4 Division	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	3
Page 4 of 4 Division	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	3


[Camera]

- Select cameras you want to show

[Period]

- Select duration when auto dwelling

4.6.4.3 9 Division

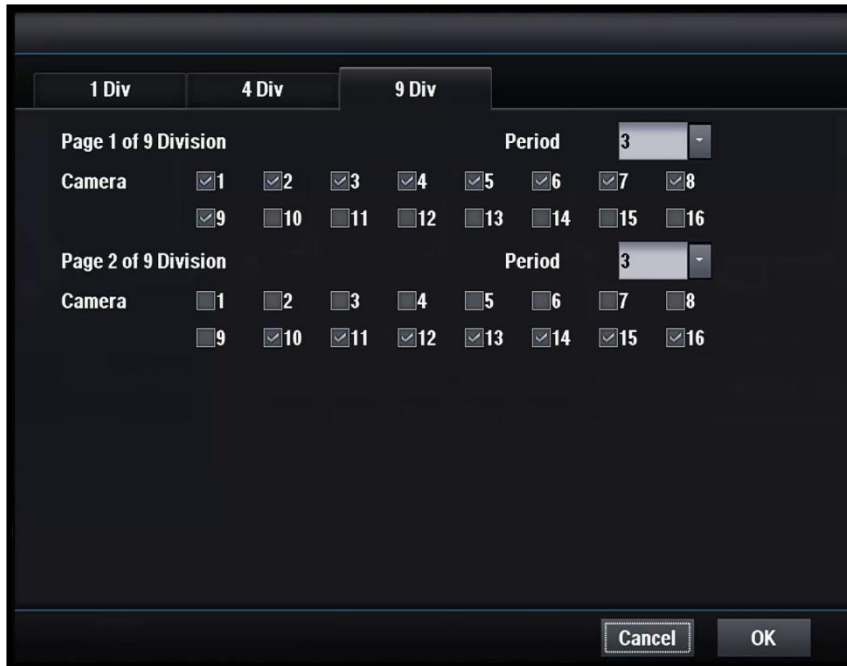

[Camera]

- Select cameras you want to show

[Period]

- Select duration when auto dwelling

5. POS/ATM

5.1 Connection



[POS/ATM Connection]

- Use USB to Serial converter
- Shorter one is the first port for multiple converter.
- Maximum distance is 15 m for RS-232 cable

5.2 Setup


5.2.1 Setup



[Connection setup]

- Set Baudrate, Databit, Stop bit, Parity same to POS/ATM device
- Restart DVR after POS/ATM connection setup finished
- POS/ATM data is displayed on live and playback screen


5.2.2 Live

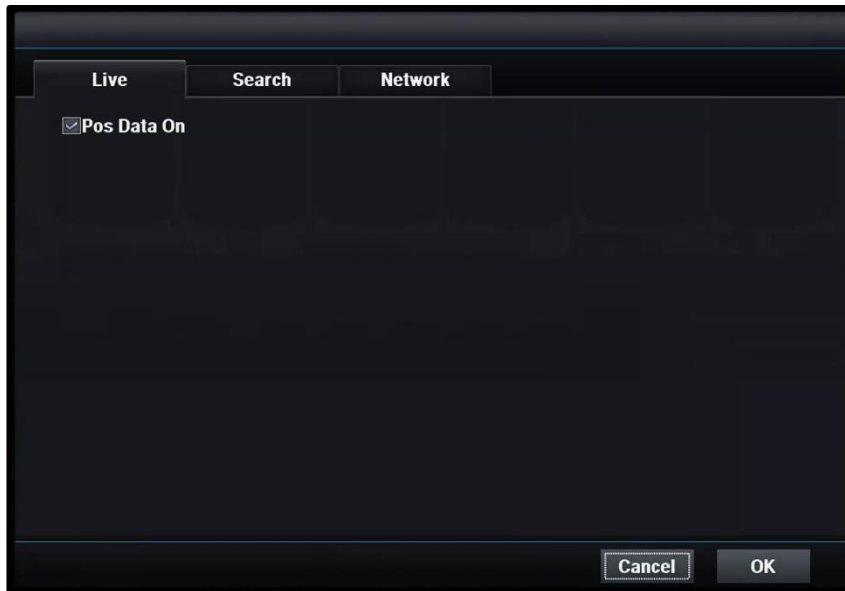

[POS Data]

- Turn On/Off POS data display on live mode

5.2.3 Playback

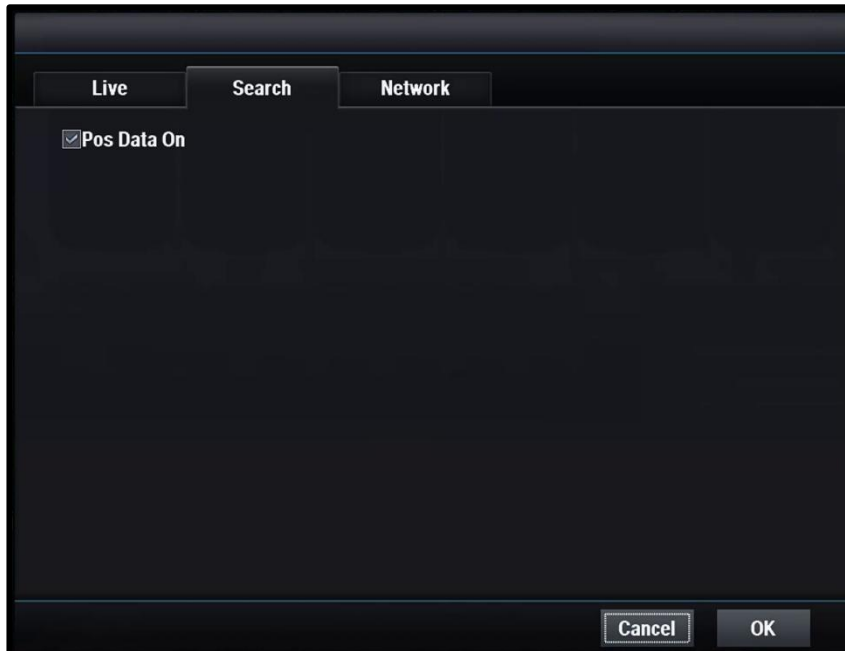

[POS Data]


- Turn On/Off POS data display on playback mode

6. Keyboard

6.1 Exterior



6.2 Connection

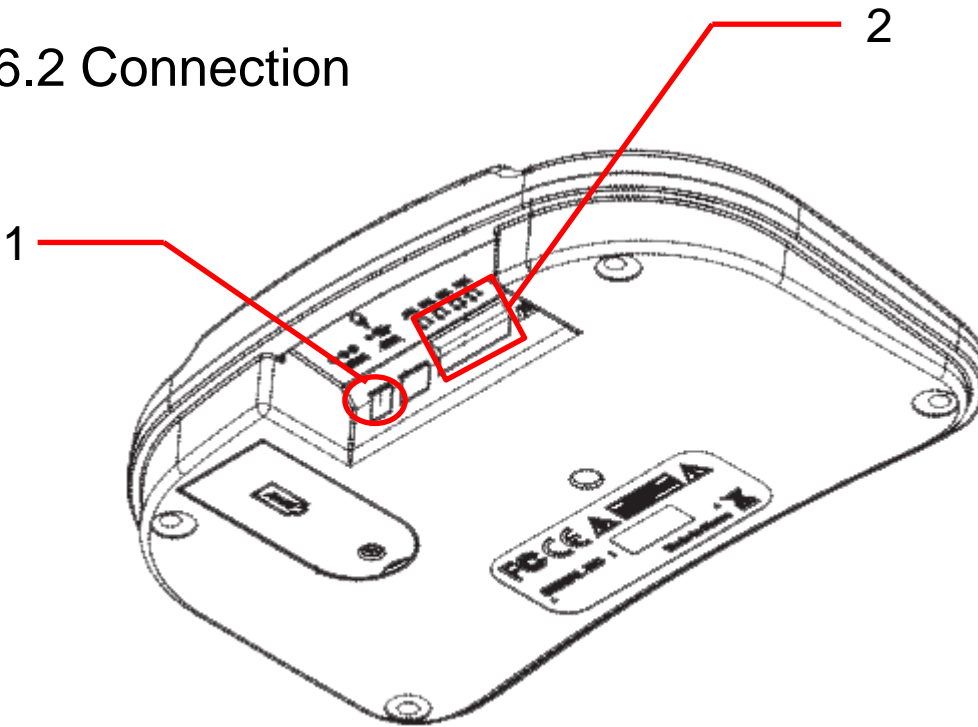

1. DC12V Input




DC 12V Input

2. RS-485 / RS-422



6.3 Functions

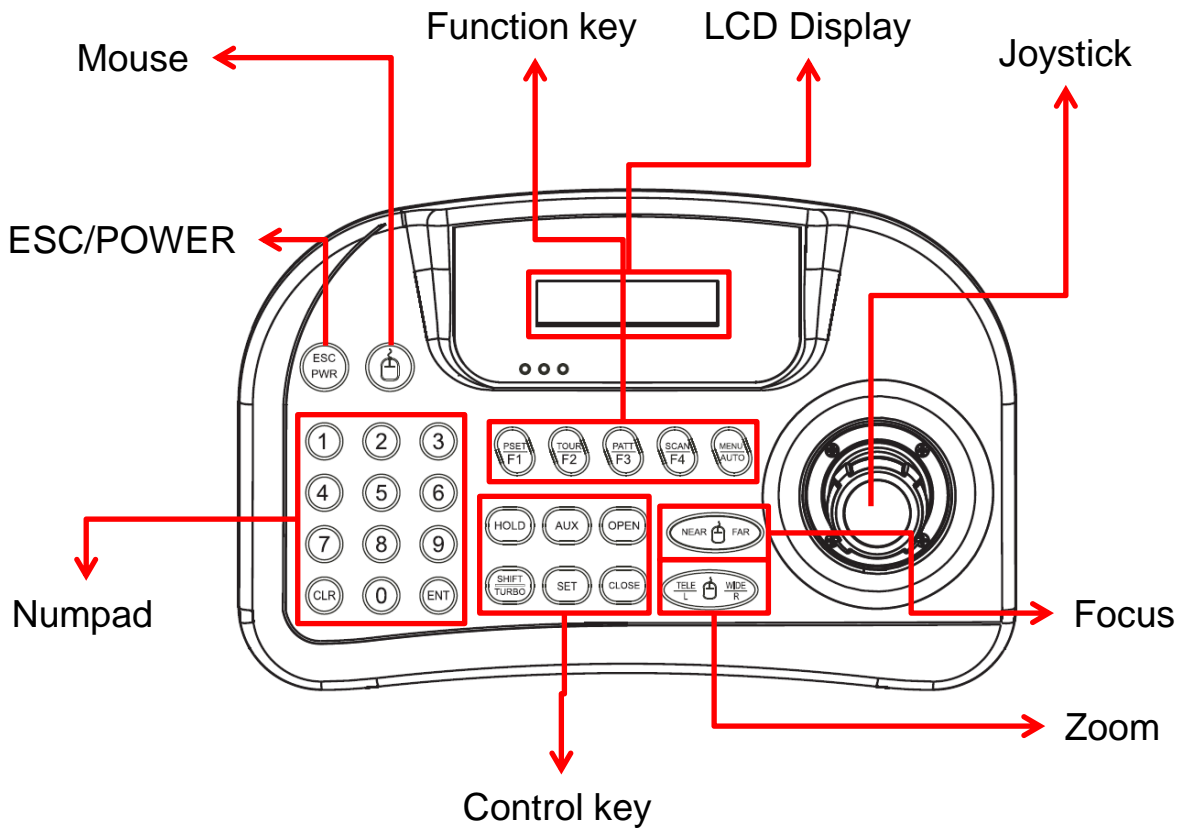

MOUSE



[Mouse]

- Turn On/Off mouse

ESC/POWER



[ESC/POWER]

- Turn On/Off keyboard power
- Cancel or escape to previous mode

Numbers



[Numpad]

- Used for number input, camera id, PTZ setting

Function keys



[Function]

- F1~MENU/AUTO : control for Speed Dome Camera functions (Preset, Tour, Pattern, Scan, Auto)
- Menu : Used for controlling of PTZ menu

LCD DISPLAY

16 x 2 Graphic display

 
[LCD Display]

- Number, system status, current function



[Joystick]

- For Up/down/left/right of PTZ
- For movement in the camera menu



[Control function]

- Hold : Lock the system(Password needed for unlock)
- SHIFT/TURBO : Maximum speed while shift pressed
- AUX : Turn AUX On/Off – Press button for 3 ~ 4 seconds
- SET : Control Pan/Tilt menu
- IRIS Close, IRIS OPEN : Used to control the camera's aperture Zoom.



[Zoom]

- Zoom / Unzoom




[Focus]


- Focus Near / Far

6.4 System Configuration


6.4.1 For one unit (PTZ directly connected)

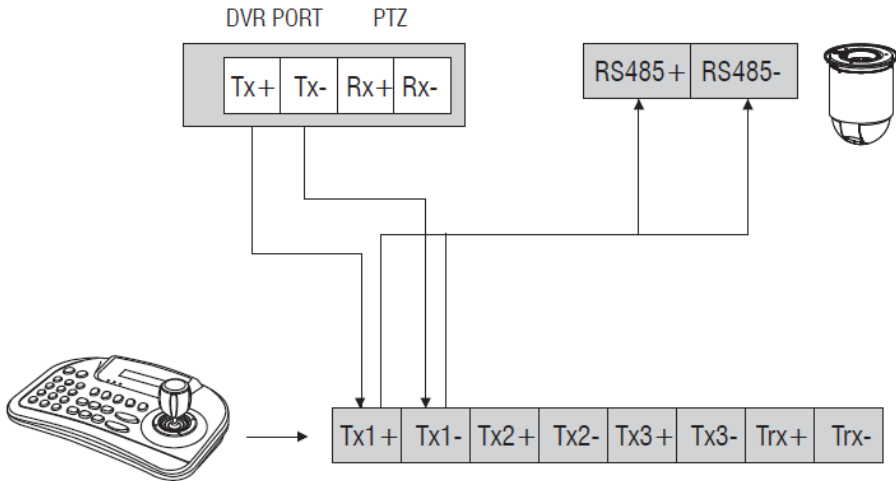


6.4.2 For one unit (1 Keyboard, 1 DVR, 1 Camera)

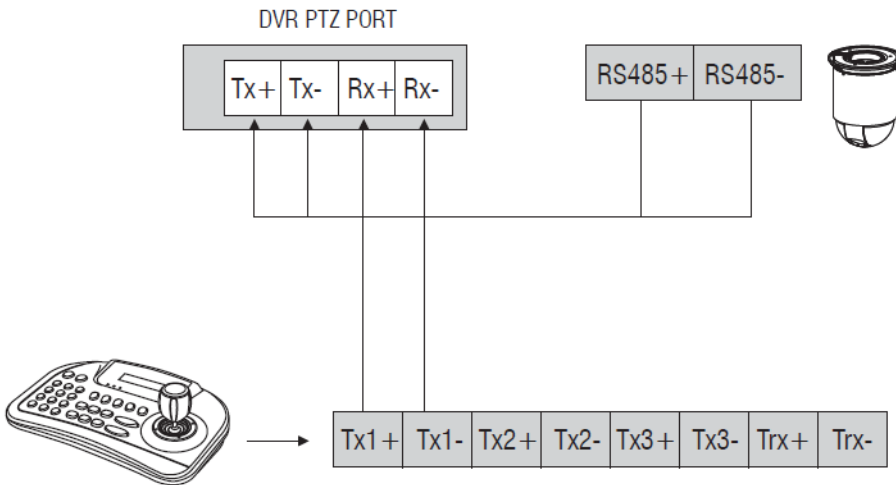

6.4.3 Configuration 1

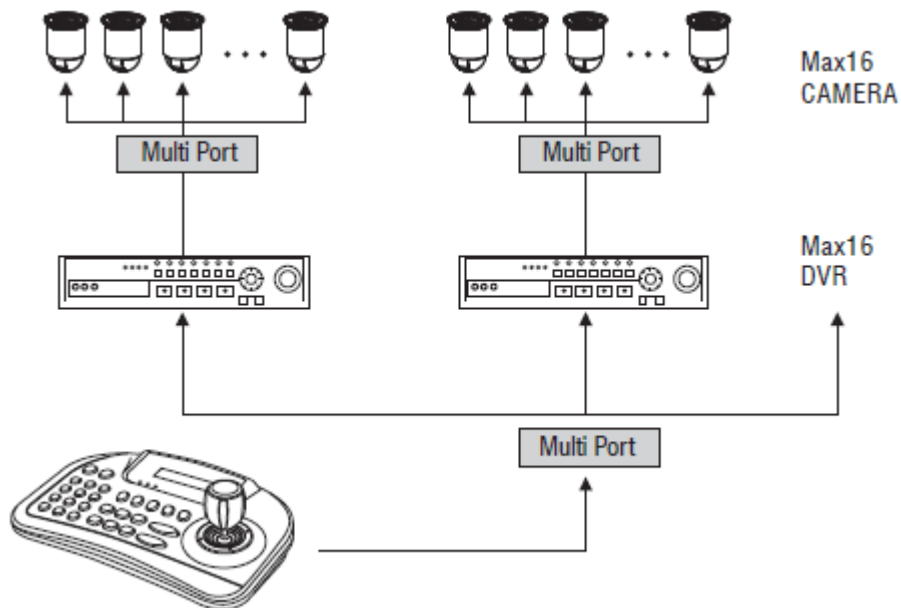

6.4.4 Configuration for multi units

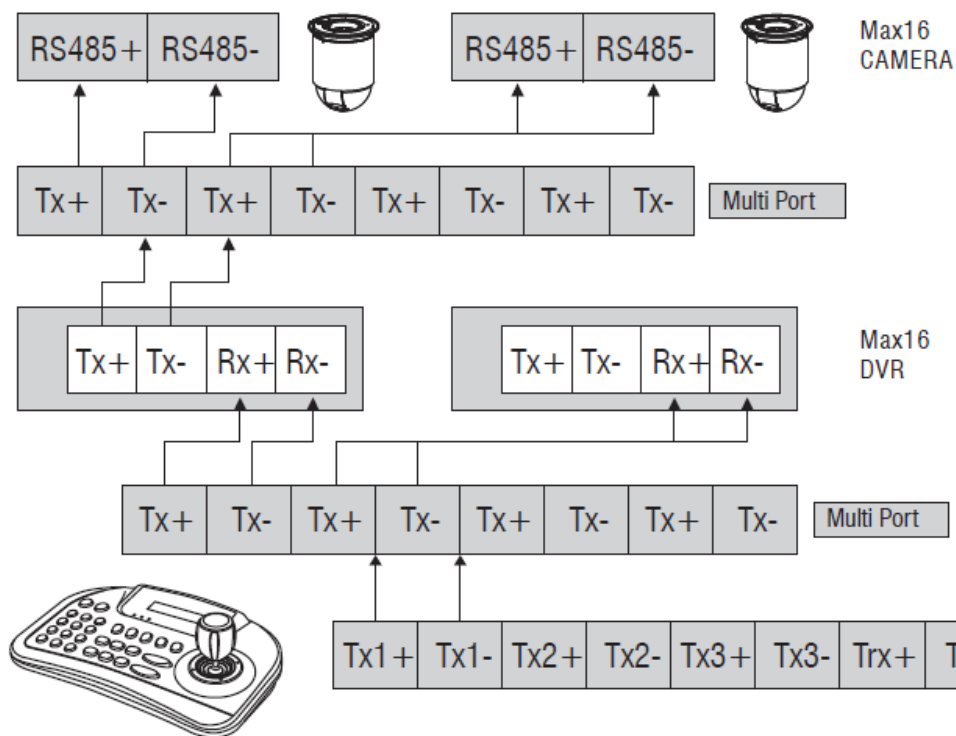

6.5 Setup

6.5.1 DVR Setup



Set DVR ID on System -> General -> Admin



Set keyboard on Record -> Setting -> KBD/POS

Set keyboard on Record -> Setting -> KBD/POS

1. Check On
2. Set KEYBOARD ID
3. Set baudrate, databit, stopbit, paritybit

6.5.2 Setup Keyboard

6.5.2.1 Menu movement


Cursor Left / Right





Cursor Up / Down



6.5.2.2 Menu setup


Press Button 2 +  for 2 seconds to enter main menu

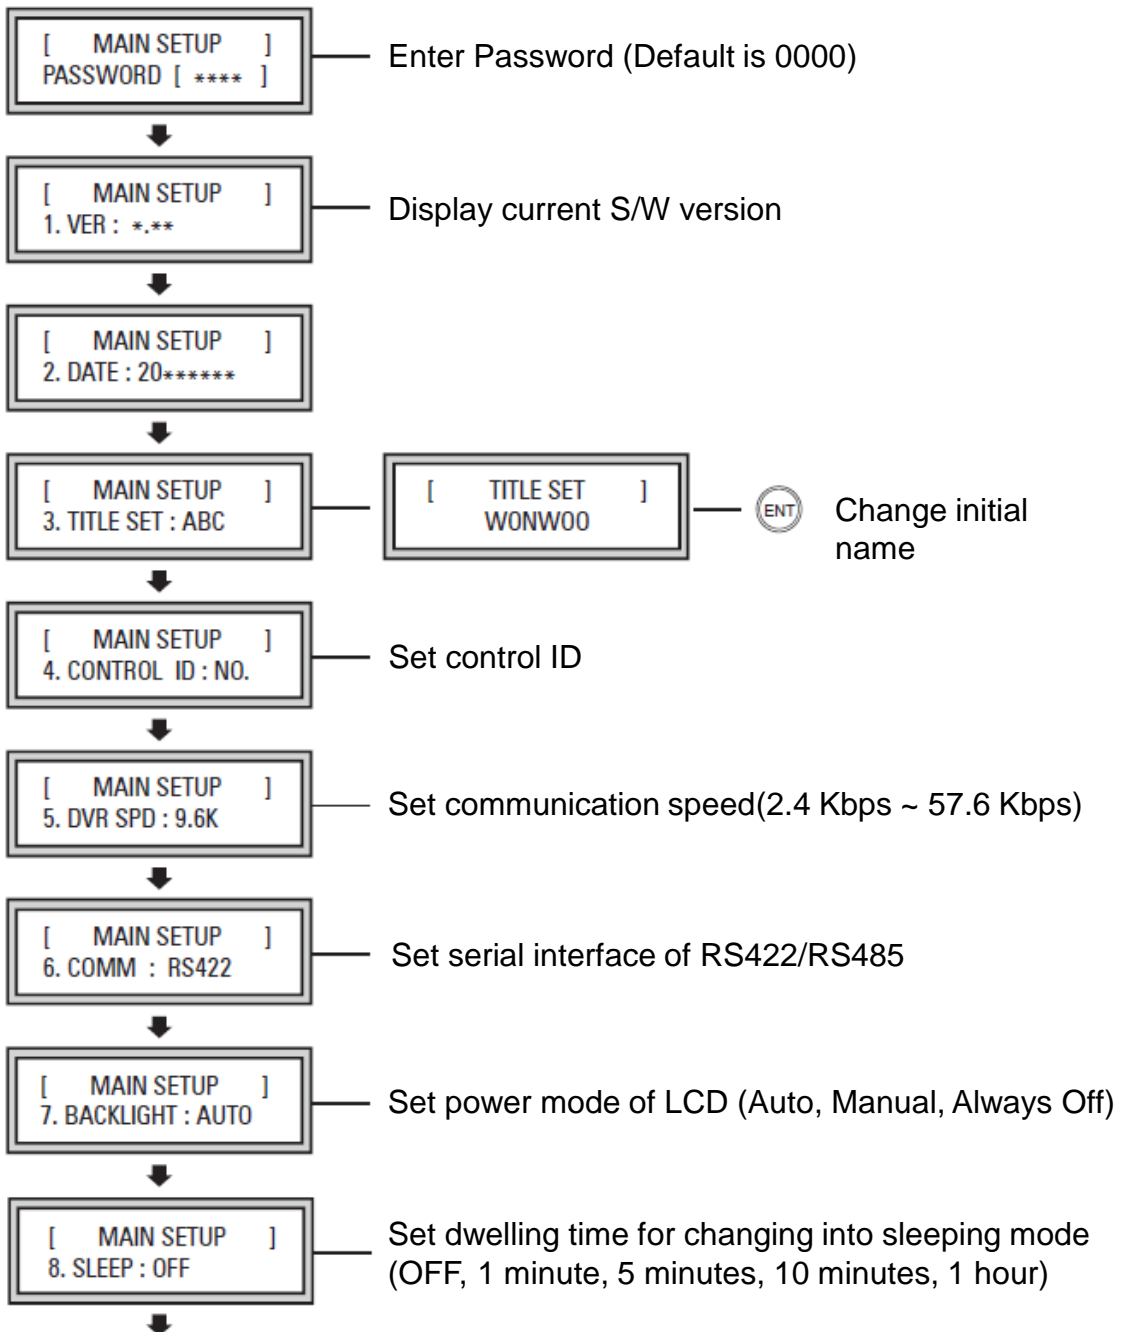


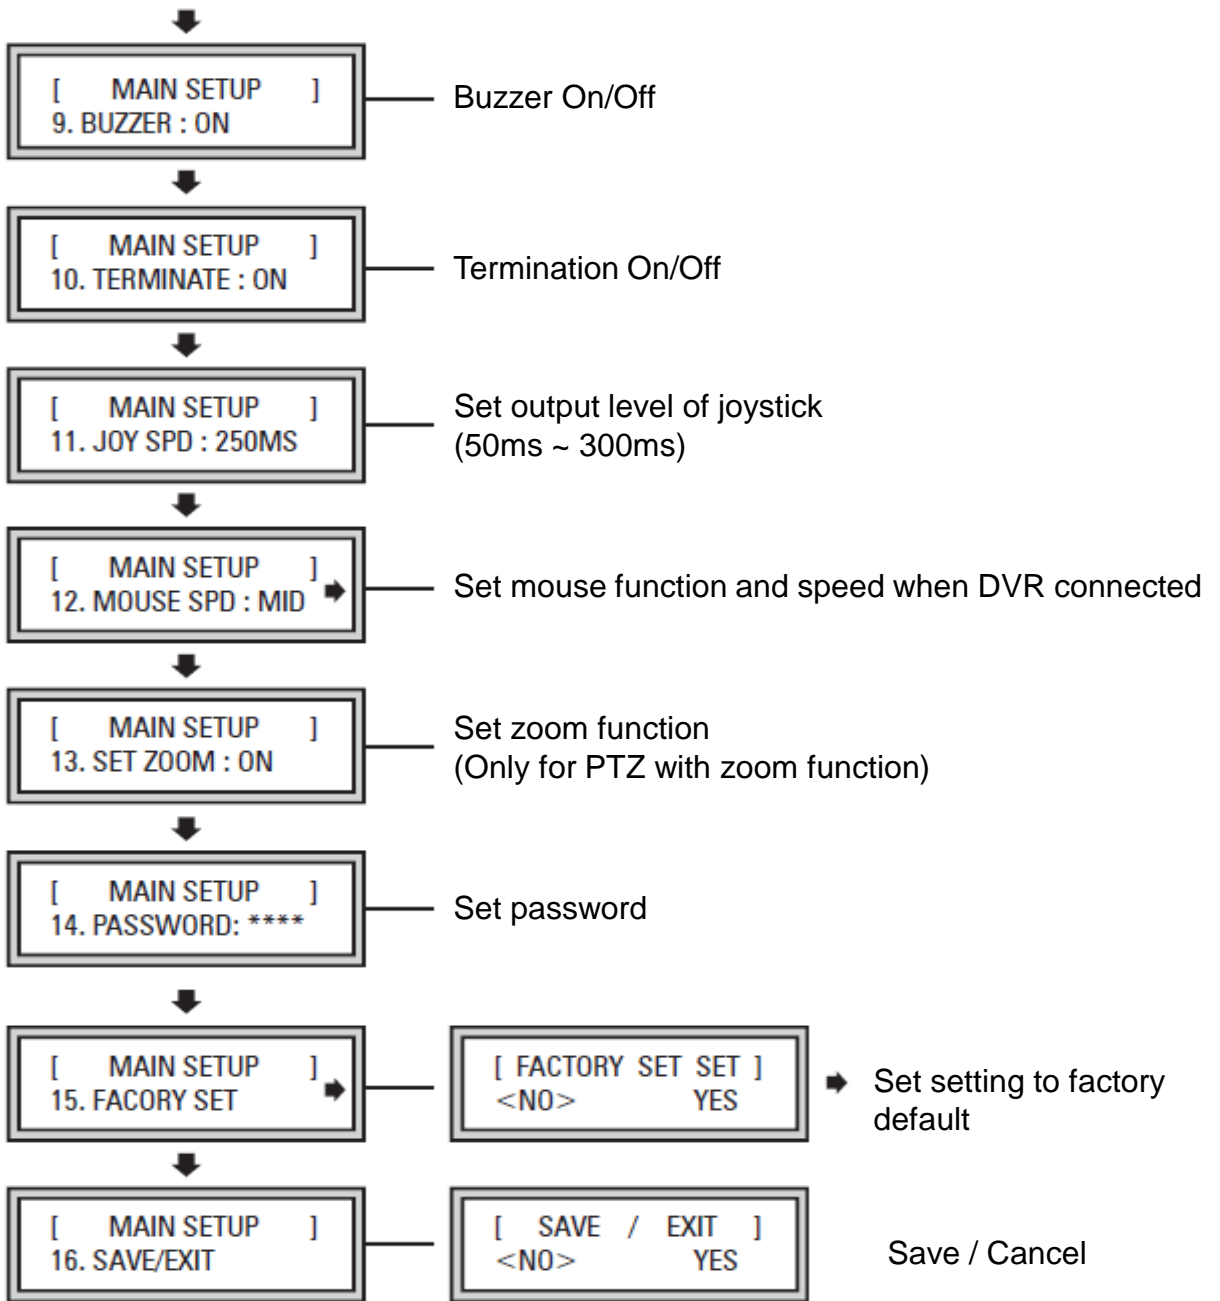

Setting is saved after selecting YES/NO by moving joystick up/down

6.5.2.3 PTZ Setup


Press button 1 +  for 2 seconds to enter PTZ menu

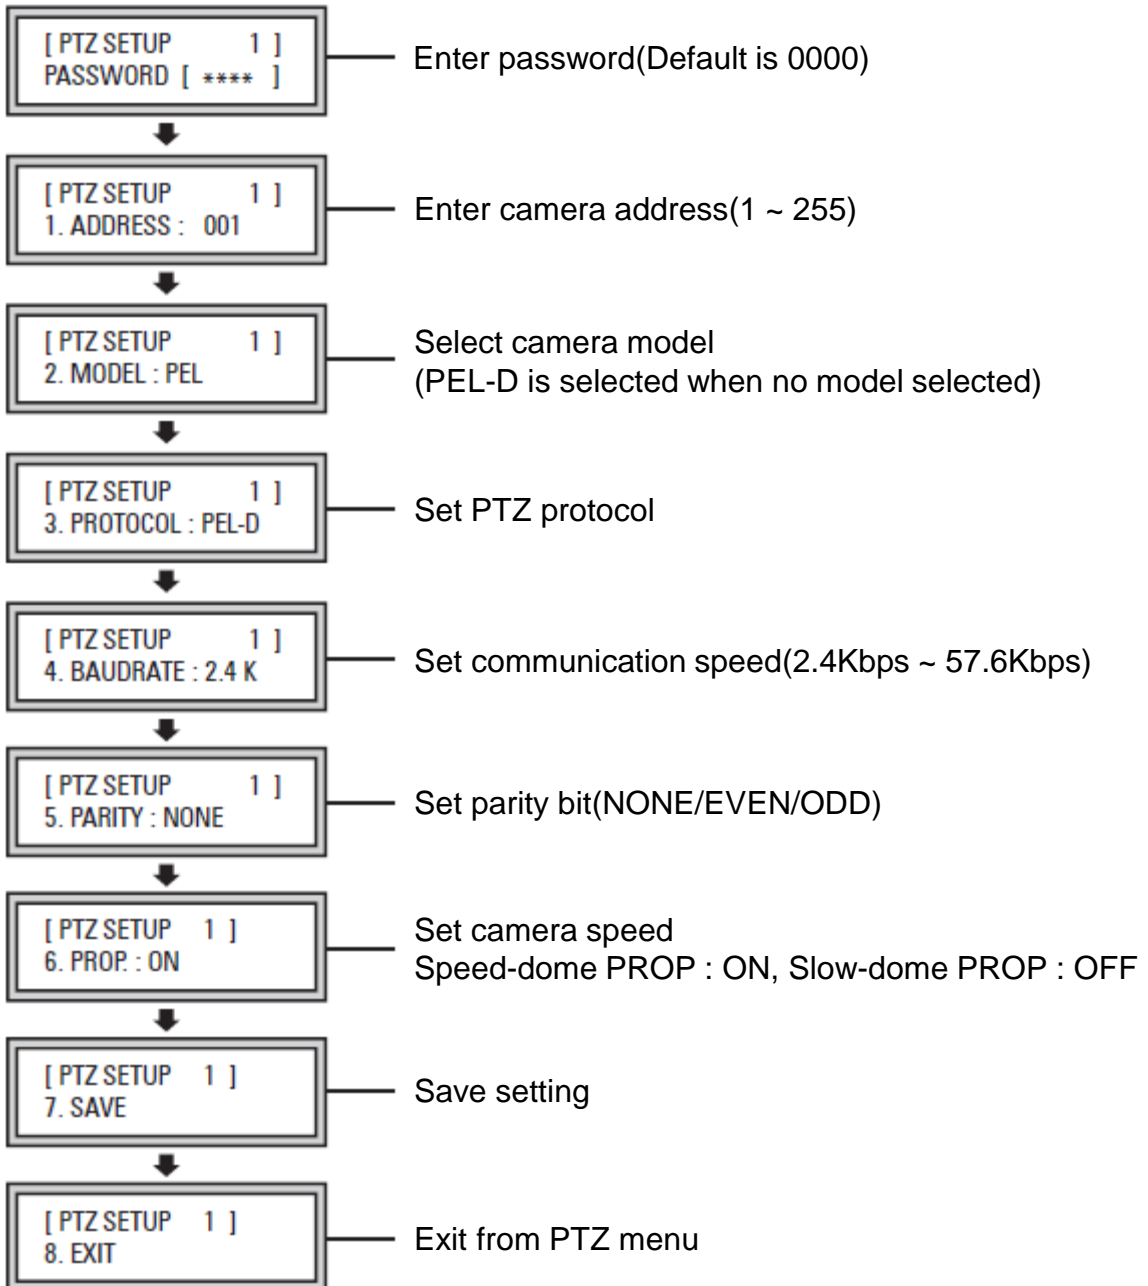

Set PTZ setting on the keyboard when PTZ connected to keyboard
Set PTZ setting on the DVR when PTZ connected to DVR

7. CMS

7.1 CMS Login

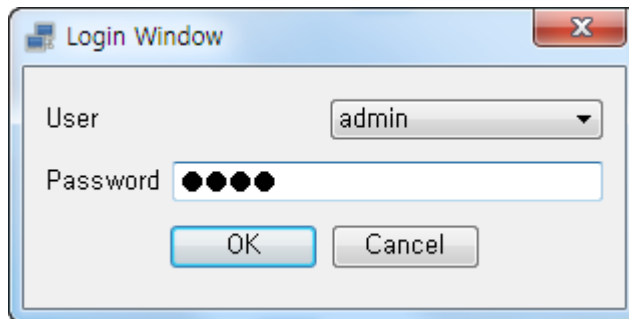

ID and Password are required to prevent unauthorized access when run CMS


[User]

- Select user

[Password]


- Type password.
- Default value is 1111

7.2 Starting screen

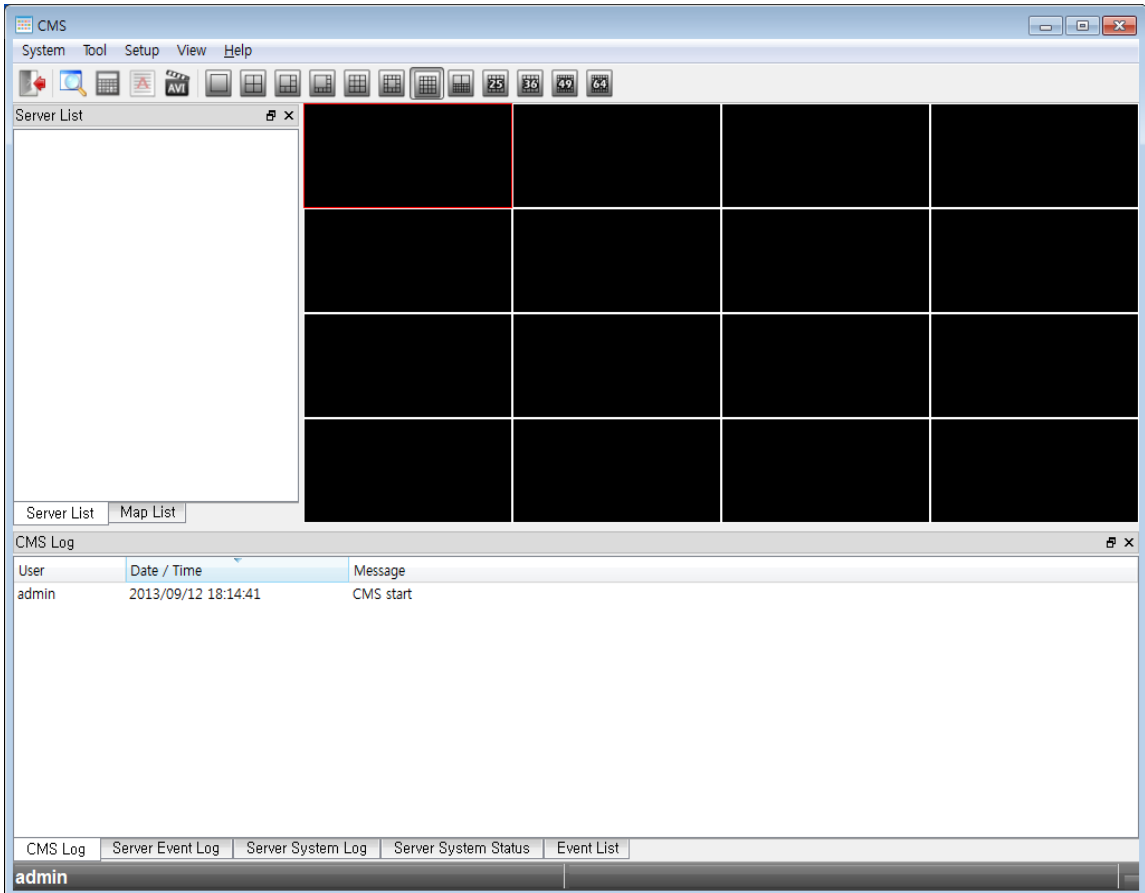


This is the first screen. You can check current CMS status.

 7.2.1 Menubar



 
7.2.1.1 System



Menu of commands for CMS action.

- [Exit]**
- Exit CMS.

7.2.1.2 Tools

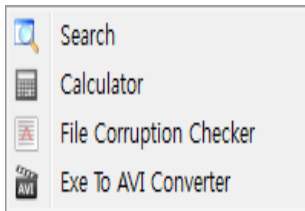

CMS Tools

[Search]

- Playback recorded data.

[Calculator]

- Calculate disk space needed


[File Corruption Checker]

- Check and verify whether backup data is corrupted or not.

[EXE to AVI Converter]

- Convert EXE format to AVI format

7.2.1.3 Setup

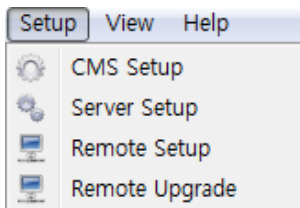

Manage CMS & DVR setting.

[CMS Setup]

- Setting CMS environments

[Server Setup]

- Add/Edit/Delete DVR server


[Remote Setup]

- Change remote DVR setup

[Remote Upgrade]

- You can upgrade DVR firmware by remote CMS

7.2.1.4 View

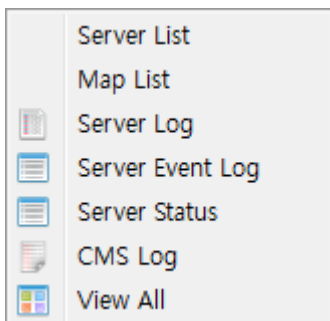

Show CMS & DVR logs.

[Server List]

- Shows server list

[Map List]

- Shows eMAP list

[Server Log]

- Shows DVR log

[Server Event Log]

- Shows DVR event log

[Server Status]

- Shows the status of server

 
[CMS Log]

- Show CMS log

[View All]

- Show all logs.

7.2.1.5 Help



Show CMS & DVR Information.

[About CMS]

- Information of CMS

7.2.2 Tool bar



Changes DVR display format.



- **Exit**
- Exit CMS.



- **1 division**
- Changes screen to full screen



- **4 division**
- Changes screen to 4 division screen



- **6 division**
- Changes screen to 6 division screen



- **8 division**
- Changes screen to 8 division screen



- **9 division**
- Changes screen to 9 division screen



- **13 division**
- Changes screen to 13 division screen



- **16 division**
- Changes screen to 16 division screen



- **20 division**
- Changes screen to 20 division screen.



- **25 division**
- Changes screen to 25 division screen



- **36 division**
- Changes screen to 36 division screen



- **49 division**
- Changes screen to 49 division screen



- **64 division**
- Changes screen to 64 division screen




- **121 division**
- Changes screen to 121 division screen



- **256 division**
- Changes screen to 256 division screen

7.2.3 Server List

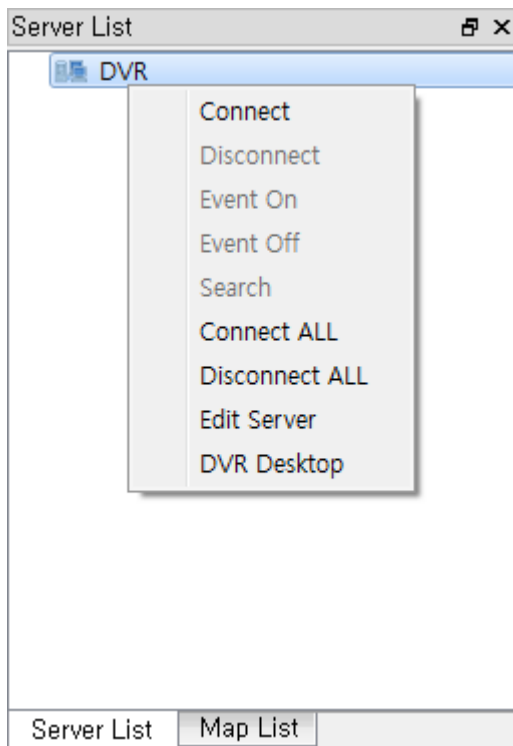

Setup – You connect DVR registered in Server Setup

Click mouse right button to show menu

[Connect]

- Connect to DVR

[Disconnect]

- Disconnect DVR

[Event On]

- Enable Event transmission

[Event Off]

- Disable Event transmission

[Search]

- Run search window

[Connect ALL]

- Connect to all server

[Disconnect ALL]

- Disconnect all server connected


[Edit Server]

- Edit server information
- Available only when disconnected

[DVR Remote desktop]

- You can control DVR remotely while you see DVR screen (Some DVR models do not show camera)

7.2.4 Video context menu

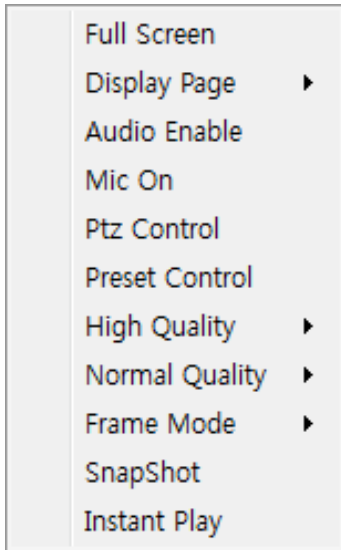

Click mouse right button on camera.

[Full Screen]

- Change selected camera to full screen

[Display Page]

- Shows next page of current split mode

[Audio Enable]

- Enable audio function

[Audio Disable]

- Disable audio function

[PTZ Control]

- Enable PTZ mode

[Preset Control]

- Preset memory and go to

[High Quality]

- Set video quality to high

[Normal Quality]

- Set video quality to normal

[Frame Mode]

- Changes frame mode for network transmission
- Frame mode are 1X, 2X, 4X

[Snapshot]


- Save current camera image to jpg

[Instant Playback]

- Playback recorded video of 3 minutes before

7.2.5 Log Window

7.2.5.1 CMS Log

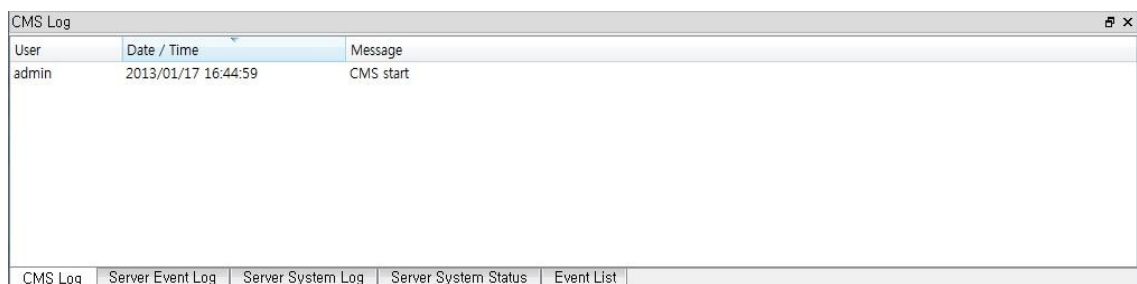

Shows CMS log

7.2.5.2 Server Event Log

Server	Camera	Event	Date / Time	Message
--------	--------	-------	-------------	---------

CMS Log | Server Event Log | Server System Log | Server System Status | Event List

Shows DVR event log

7.2.5.3 Server System Log

Server	User	Date / Time	Message
--------	------	-------------	---------

CMS Log | Server Event Log | Server System Log | Server System Status | Event List

Shows DVR log

7.2.5.4 Server System Status

Server	Number	Camera	HDD	Recording	Motion	Alarm IN	Alarm OUT
--------	--------	--------	-----	-----------	--------	----------	-----------

CMS Log | Server Event Log | Server System Log | Server System Status | Event List

Shows current DVR system status

7.2.5.5 Event List

Server	Camera	Type	Time
--------	--------	------	------


Alarm Motion

CMS Log | Server Event Log | Server System Log | Server System Status | Event List

Shows current DVR Event List


7.3 Search

7.3.1 Tools

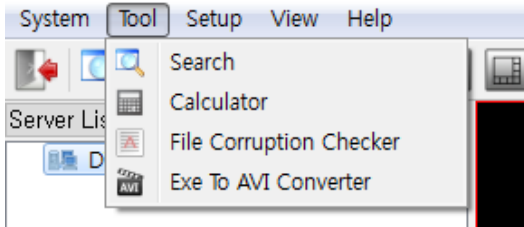


Search recorded date of DVR

Click Tool – Search button

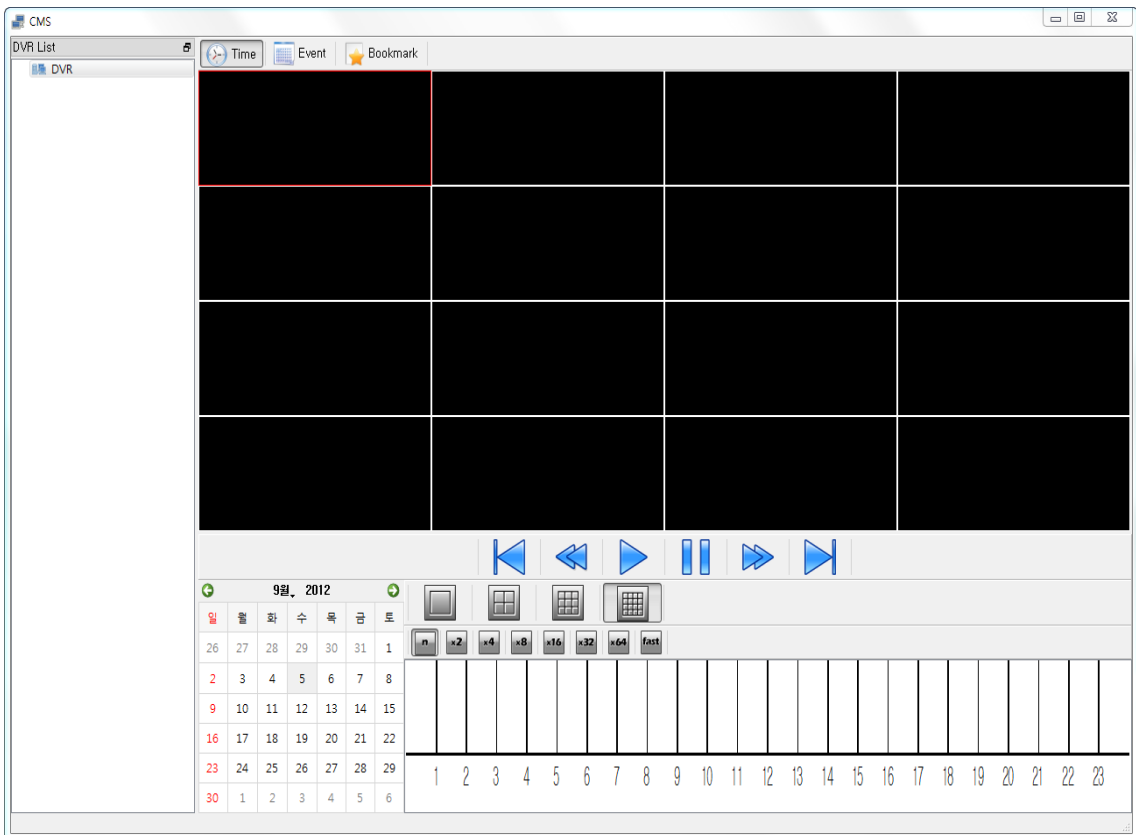

7.3.1.1 DVR Connection

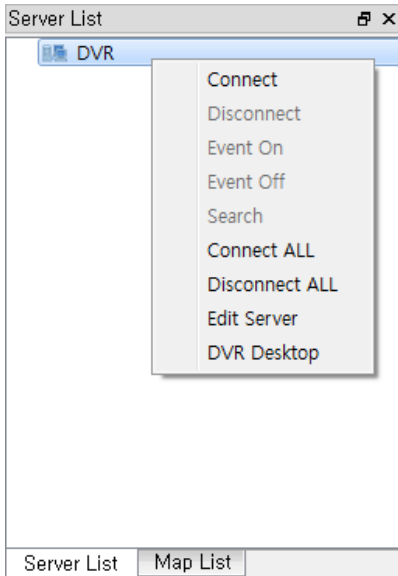

You need to connect first for playback.

Search is independent with live monitoring.

[Connect]

- Connect to DVR.

[Disconnect]

- Disconnect selected DVR.

[Event On]

- Turn on event transmission

[Event Off]

- Turn off event transmission

[Search]

- Run search window

[Connect ALL]

- Connect to all server

[Disconnect ALL]

- Disconnect all server connected

 
[Edit Server]

- Edit server information
- Available only when disconnected

[DVR Remote desktop]

- You can control DVR remotely while you see DVR screen (Some DVR models do not show camera)

7.3.1.2 Search mode



[Time]

- Search by date & time you want to playback

[Event]

- Search by event

[ATM/POS]

- Search ATM/POS text data and recorded data

[Bookmark Search]

- Search and playback recorded data bookmarked of DVR

[Thumbnail Search]

- Search and playback recorded data by hours / minutes

[Intelli-Search]

- Search and playback recorded data by the region motions occur

7.2.1.3 Recorded dates








9월, 2013						
일	월	화	수	목	금	토
25	26	27	28	29	30	31
1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16	17	18	19	20	21
22	23	24	25	26	27	28
29	30	1	2	3	4	5

Shows recorded dates of DVR when you connect to DVR


7.3.1.4 Playback buttons



Playback buttons

-  ▪ **1 frame backward**
- backward 1 frame
-  ▪ **Rewind**
- Rewind backward
-  ▪ **Play**
- Play forward
-  ▪ **Pause**
- Pause playback
-  ▪ **Fast Forward**
- Fast Forward
-  ▪ **1 frame forward**
- play 1 frame forward
-  ▪ **Load bookmark**
- Load bookmark list of DVR



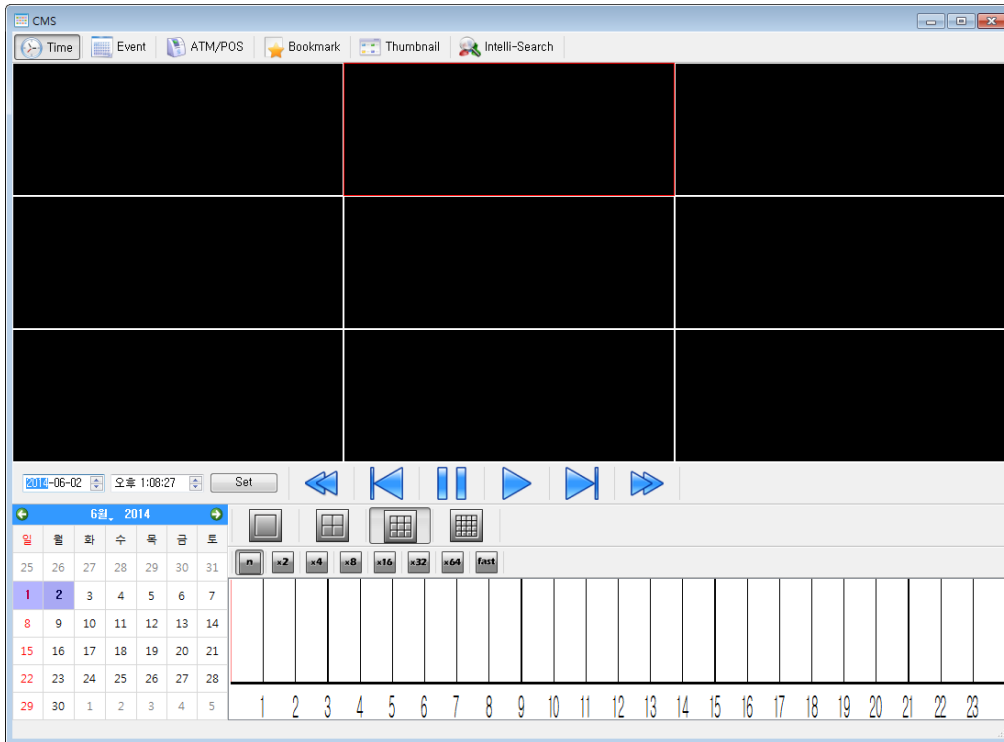

7.3.2 Search tools



- Search by selection of the date and time
- Timebar data is displayed by hours after user choose the date
- Playback starts after user press playback button after setting up time, division mode, playback speed



 





Division buttons




-  **1 Division**
- Changes screen to 1 channel full screen
-  **4 Division**
- Changes screen to 4 division screen
-  **9 Division**
- Changes screen to 9 division screen
-  **16 Division**
- Changes screen to 16 division screen

Playback speed control




-  ▪ **Normal speed**
- Playback speed
-  ▪ **x2**
- playback by double speed
-  ▪ **x4**
- playback by 4 times speed
-  ▪ **x8**
- playback by 8 times speed
-  ▪ **x16**
- playback by 16 times speed
-  ▪ **x32**
- playback by 32 times speed
-  ▪ **x64**
- playback by 64 times speed
-  ▪ **Fast**
- playback by maximum speed

Timebar

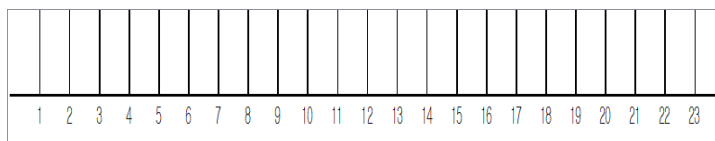

You can click proper position of timebar when you want to go search tome quickly.

7.3.3 Event search tools

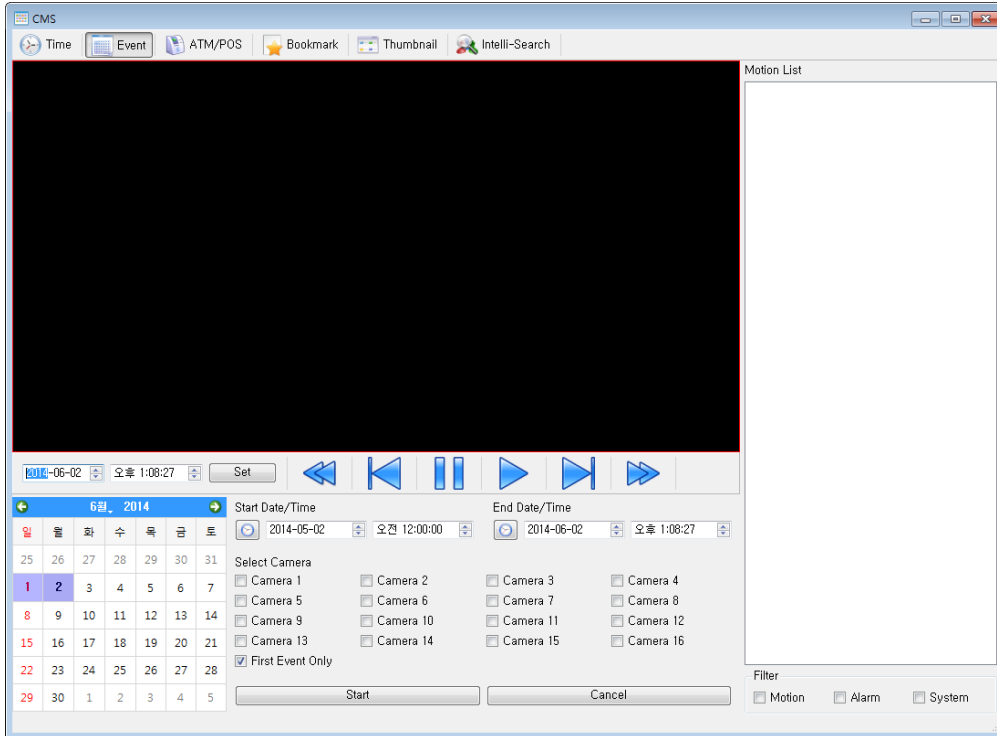

- Search by events (Motion, Alarm-In, System events)
- Press playback button after setting date, time, camera
- Click event list to playback the video

[Start Date/Time]

- Set starting date & time for playback

[End Date/Time]

- Set finishing date & time for playback


[Select Camera]

- Select camera you want to playback

[First Event Only]

- Display the first frame of new event after previous event

7.3.4 ATM/POS Search

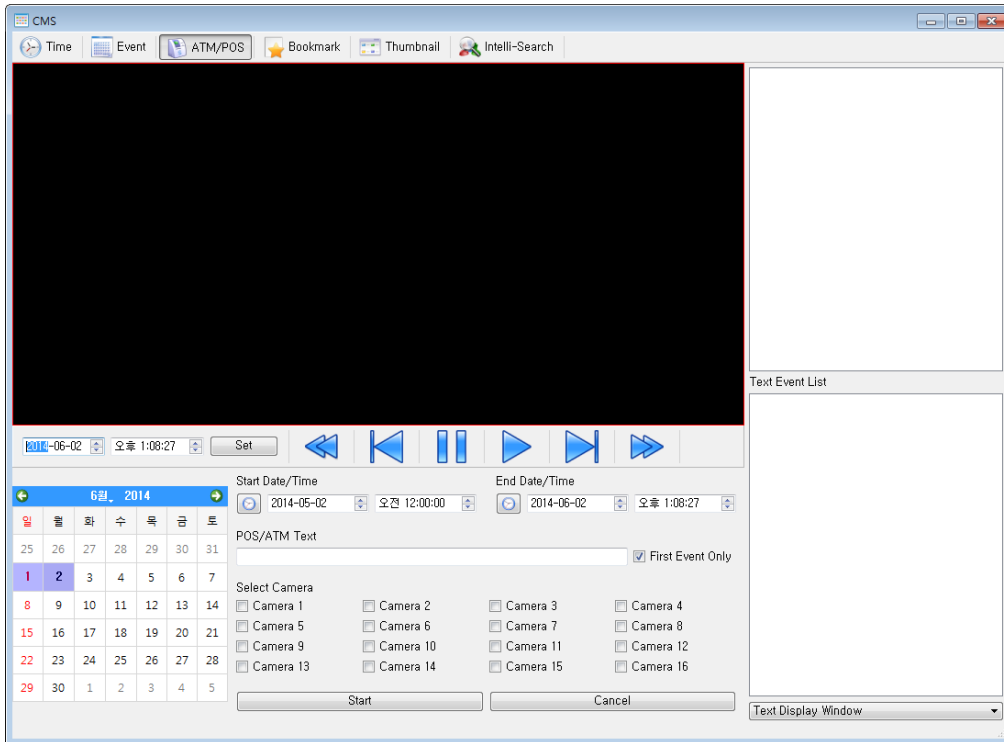

- Search by ATM/POS data
- Press playback button after setting date, time, camera
- Click POS/ATM list to playback the video

[Start Date/Time]

- Set the starting date/time of POS/ATM index

[End Date/Time]

- Set the ending date/time of POS/ATM index


[POS/ATM Keyword]

- Enter keyword for search

[Camera selection]

- Choose the camera you want to search


7.3.5 Bookmark search

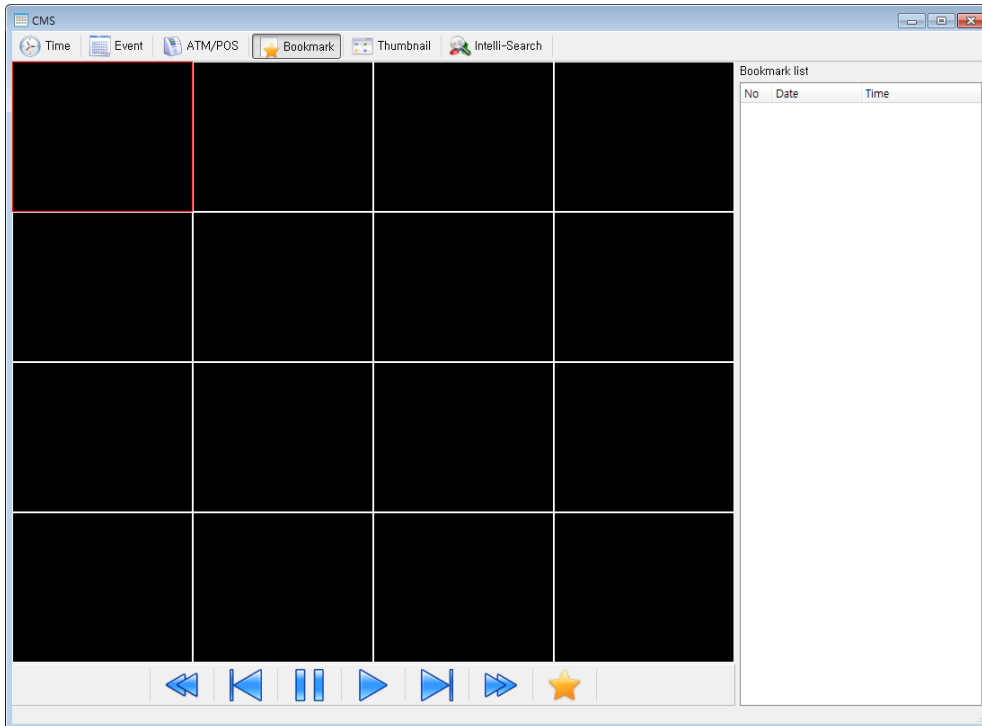

- Search by bookmarked of DVR
- Press playback button after selecting bookmark list
- Click bookmark list to playback the video

- ★ **▪ Load bookmark of DVR**
 - Load bookmark of DVR.

7.3.6 Thumbnail Search

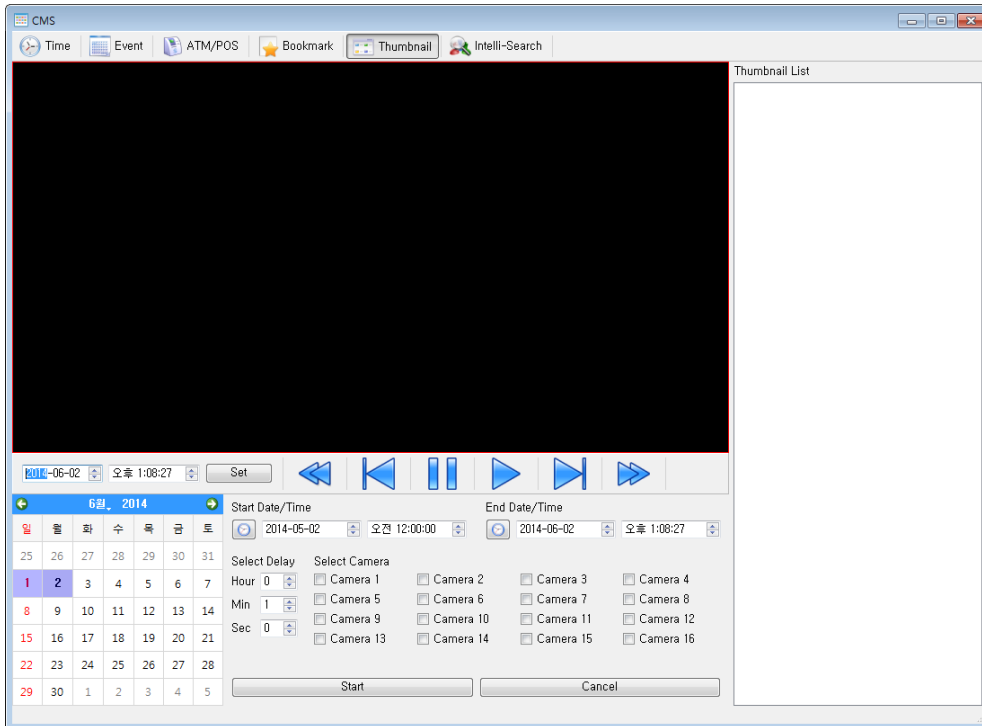

- Search by thumbnail data
- Press playback button after setting date, time, camera, delay
- Click thumbnail list to playback the video

[Start Date/Time]

- Set the starting date/time

[End Date/Time]

- Set the ending date/time


[Camera selection]

- Choose the camera you want to search

[Delay selection]

- Choose the thumbnail interval

7.3.7 Intelli-Search

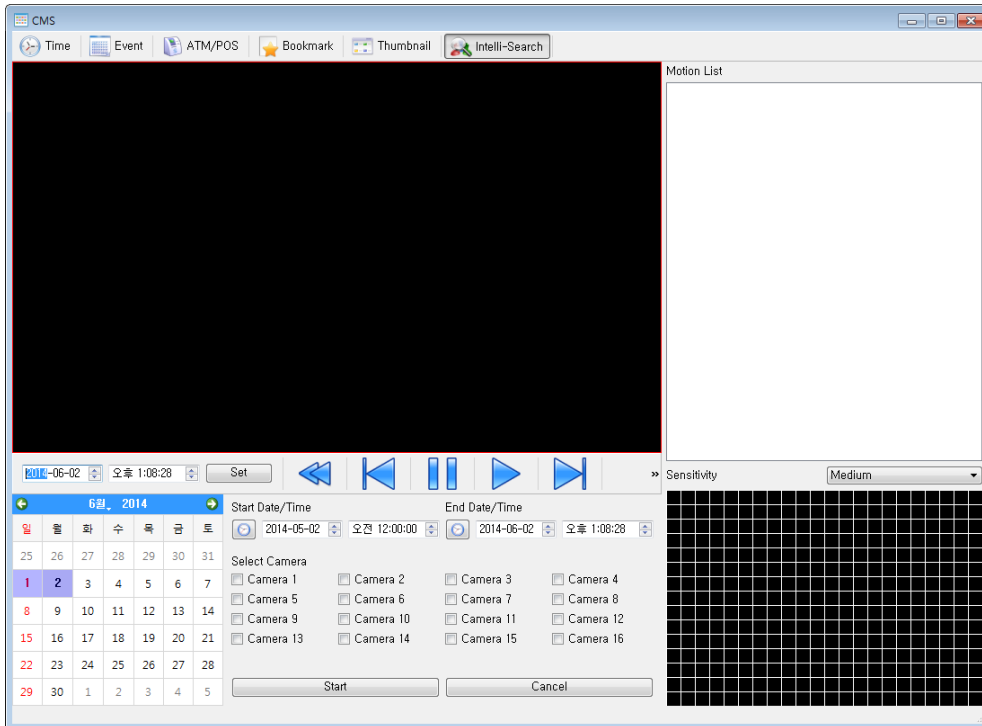

- You can search data by the region motion occur

[Start Date/Time]

- Set the starting date/time

[End Date/Time]

- Set the ending date/time

[Camera selection]

- Choose the camera you want to search

[Delay selection]


- Choose the thumbnail interval

[Sensitivity]

- Motion sensitivity setting (Very High, High, Medium, Low, Very Low)

7.4 Setup


7.4.1 CMS Setup

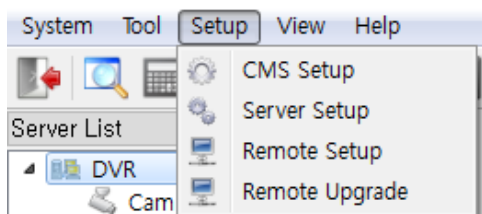

Menu for CMS environment setting

Click Setup – CMS Setup button

7.4.1.1 System

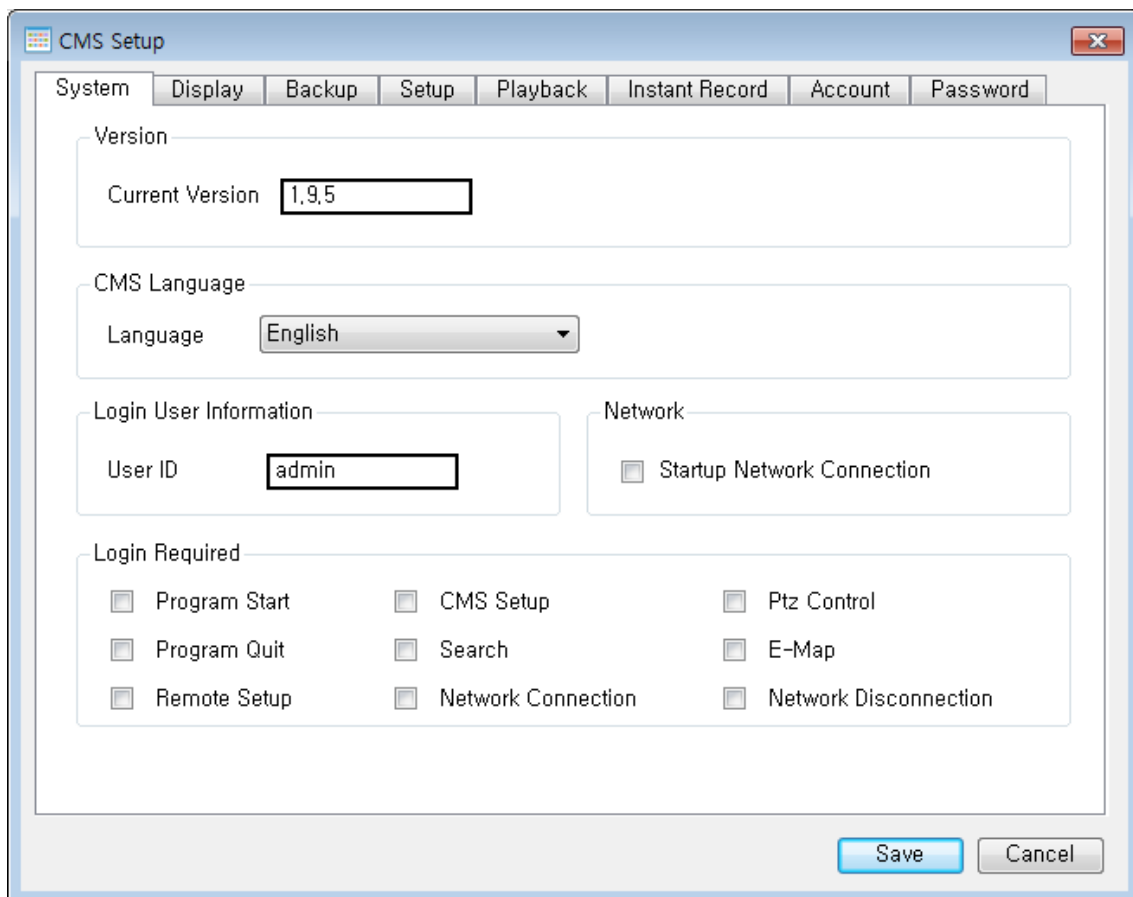

- **General Setting**

- [Current Version]**

- Show current CMS version

- [Language]**

- You can change CMS language setting

- [Login User Information]**

- User logged in currently


- [Network]**

- All DVRs will be connected automatically when CMS starts if Network Connection is checked

- [Login Required]**

- Select authority attributes for verification
- Program Start
 - Requires when CMS starts
- CMS Setup
 - Require login when setting CMS information
- PTZ Control
 - Requires when PTZ Control
- Program Quit
 - Requires when CMS closes
- Search
 - Require when playback
- E-Map
 - Requires when E-Map setting
- Remote Setup
 - Require login when setting server information
- Network Connection
 - Requires when DVR connection
- Network Disconnection
 - Requires when DVR disconnection

7.4.1.2 Display

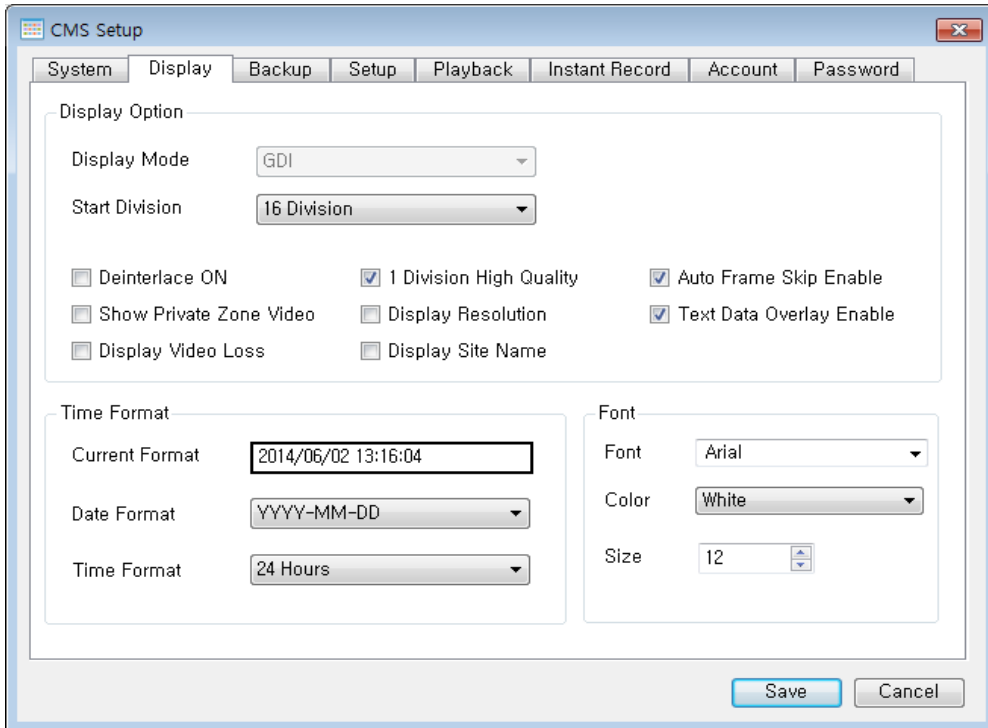

● Setting for Display

[Display Mode]

- Available for Microsoft Windows
- Select GDI or DirectX

[Start Division]

- Set division mode when CMS starts

[Deinterlace ON]

- Enable Deinterlace\

[1 Division High Quality]

- Video quality in 1 division is changed to High quality automatically if this is checked

[Auto Frame Skip Enable]

- Frame skip is enabled automatically

[Show Private Zone Video]

- Shows Private Zone

[Display Resolution]

- Shows video resolution

[Text data Overlay Enable]

- Turn On/Off POS/ATM text data

[Display Video Loss]

- Shows video loss message

[Display Site Name]

- Shows channel name of DVR

[Current Format]

- Shows current time format

[Date Format]

- Select date format
 - YYYY(year) – MM(month) – DD(day)
 - MM(month) – DD(day) – YYYY(year)
 - DD(day) – MM(month) – YYYY(year)

[Time Format]

- Select time format
- 24 hour based or 12 hour based

[Font]

- Select OSG font of screen


[Color]

- Select OSG font color

[Size]

- Select OSG font size

7.4.1.3 Backup

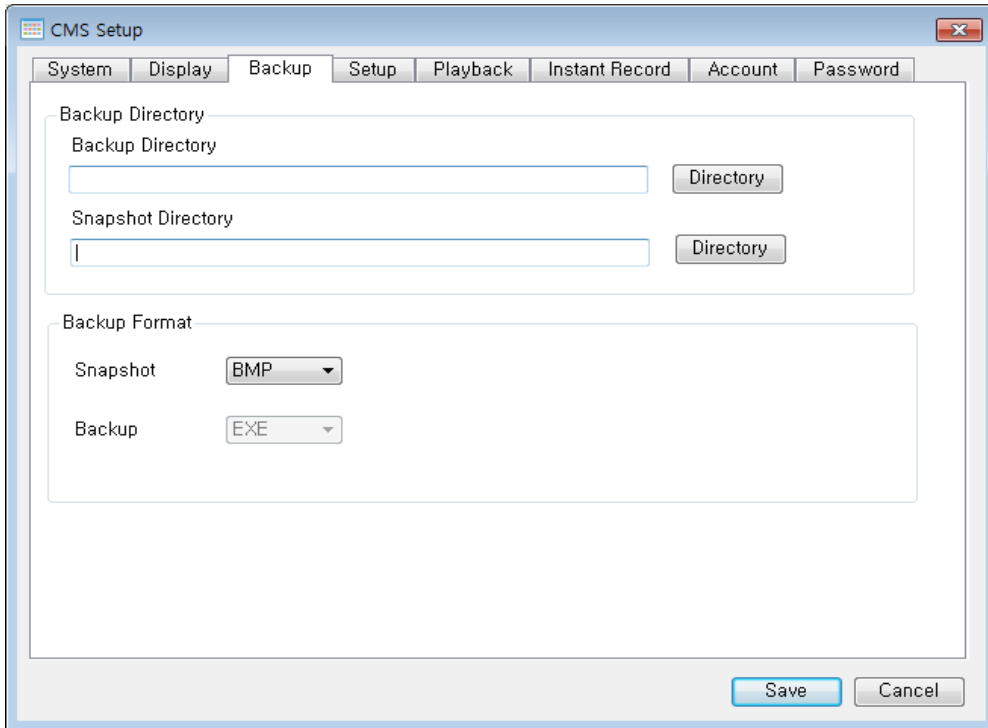

- **Setting for backup**

- [Backup Directory]**

- Set directory for data backup

- [Snapshot Directory]**

- Set directory for Snapshot


- [Snapshot]**

- Set save format of snapshot

- [Backup]**

- Set backup format

7.4.1.4 Setup

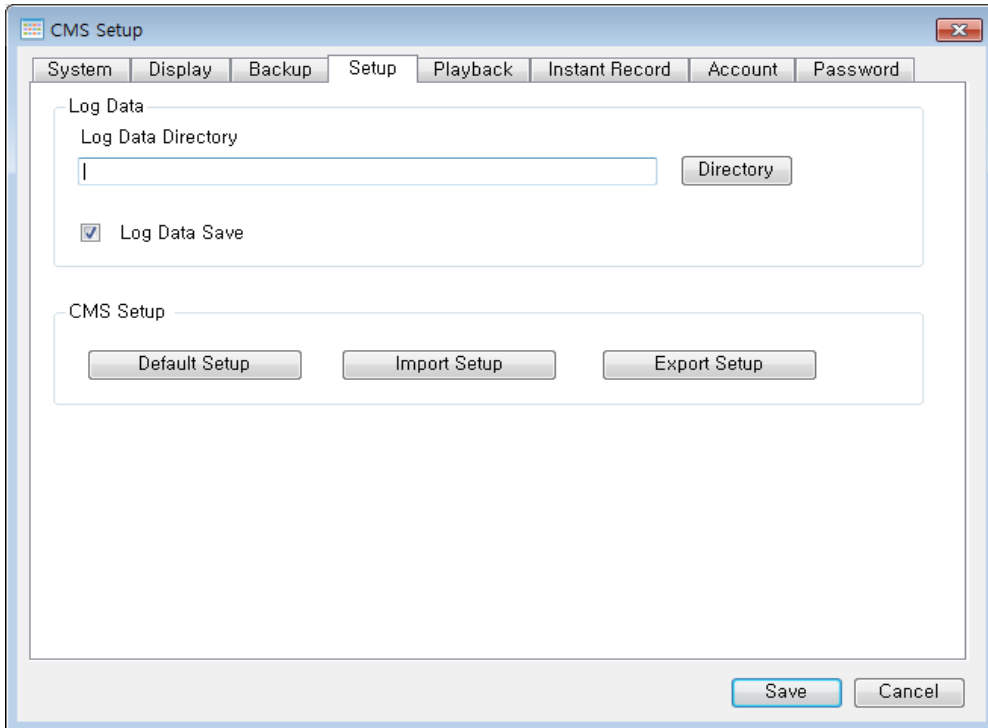

- **Setting for setup**

- [Log Data Directory]**

- Set directory for log


- [Log Data Save]**

- Save log history

- [CMS Setup]**

- Default Setup
 - Changes CMS setting to default
 - Import Setup
 - Import CMS setting from external device
 - Export Setup
 - Export CMS setting to external device

7.4.1.5 Playback

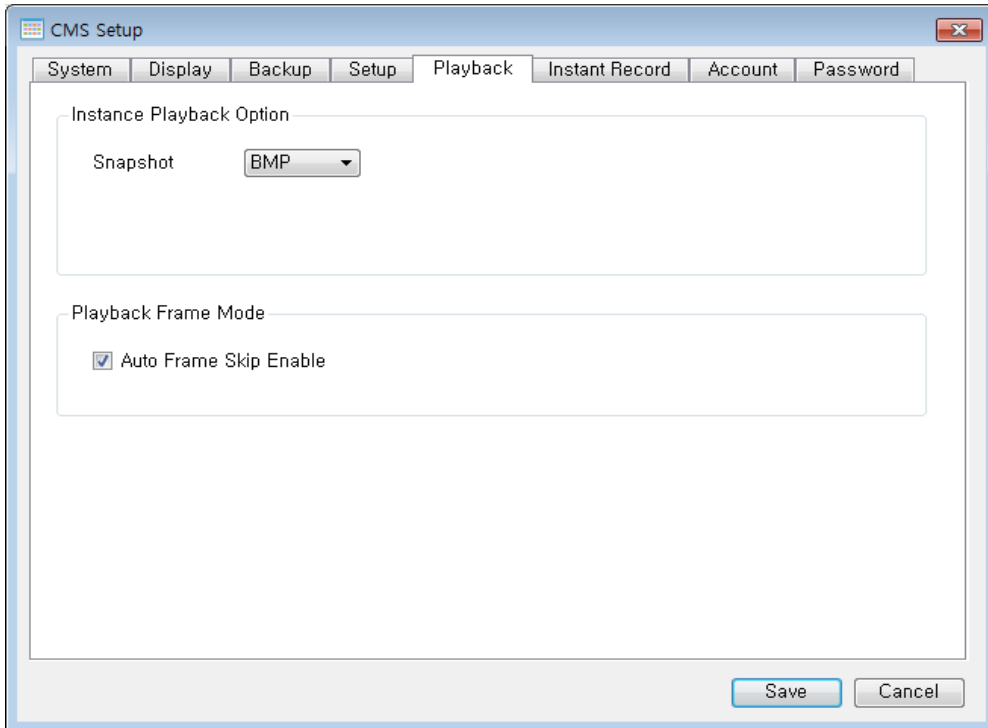

- **Setting for search**


- [Instance Playback Option]**

- Snapshot
 - Set Snapshot save format

- [Playback Frame Mode]**

- Frame Skip Enabled automatically

7.4.1.6 Instant recording

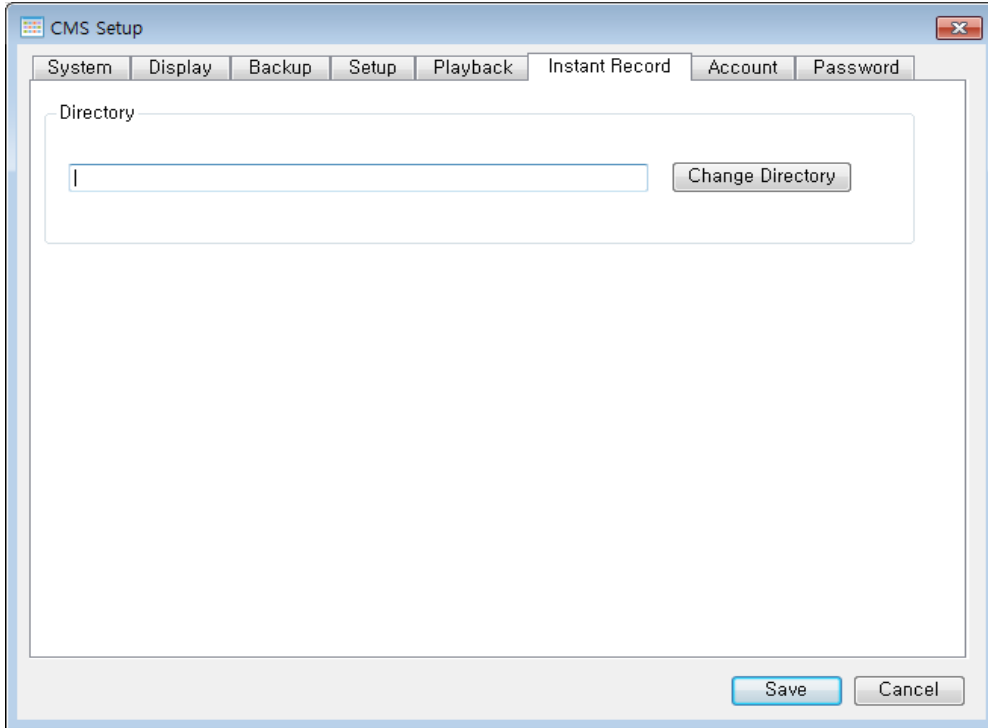


- **Setting for instant recording**

- [Directory]**

- Setting saving directory

7.4.1.7 Account

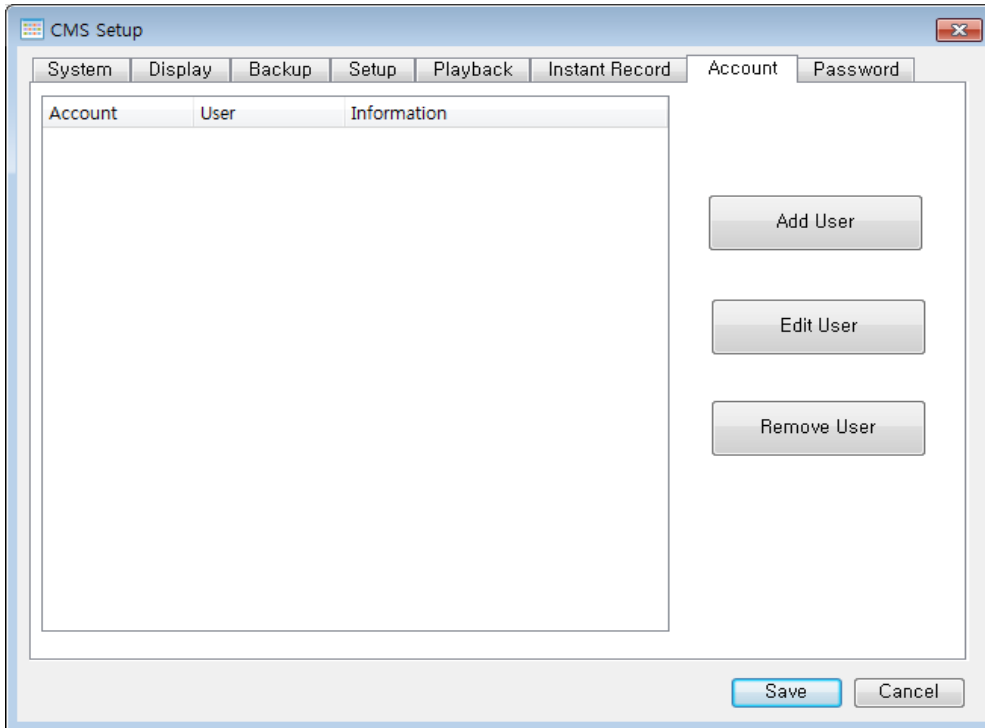

- **Setting for account**

- [Add User]**

- Add new user


- [Edit User]**

- Edit user

- [Remove User]**

- Remove user

7.4.1.8 Password

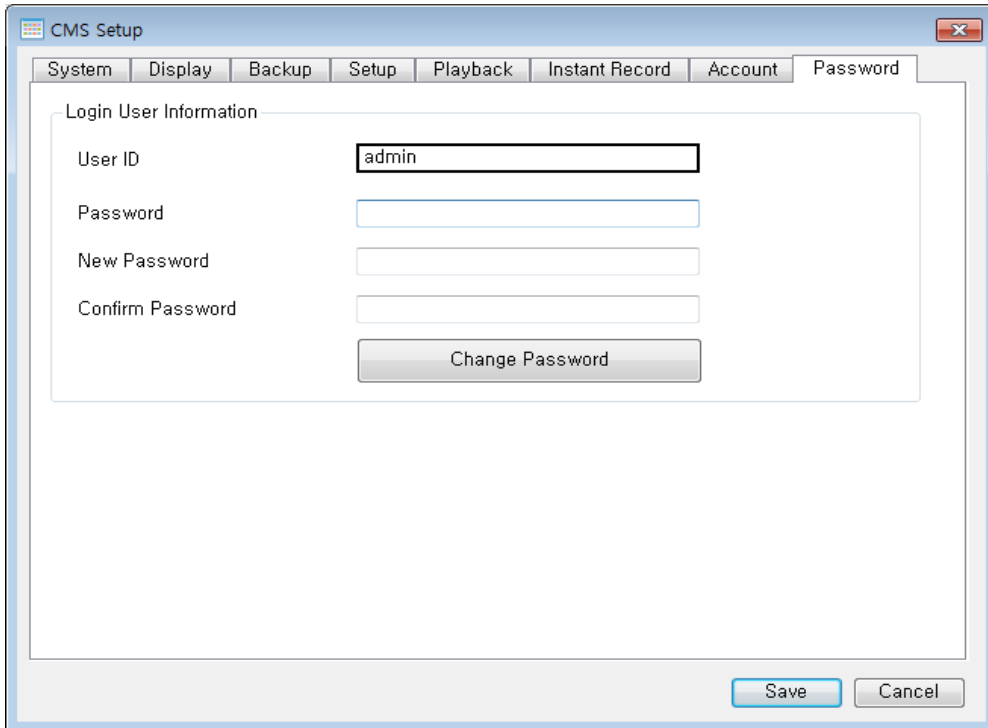

The screenshot shows a window titled "CMS Setup" with a tabbed interface. The "Password" tab is selected. Inside the window, there is a section titled "Login User Information" containing four text input fields: "User ID" (with the text "admin" entered), "Password", "New Password", and "Confirm Password". Below these fields is a "Change Password" button. At the bottom right of the window are "Save" and "Cancel" buttons.

- **Setting password**

- [User ID]**

- Shows current user logged in

- [Password]**

- Type old password


- [New Password]**

- Type new password

- [Confirm Password]**


- type again new password

7.4.2 Server setting

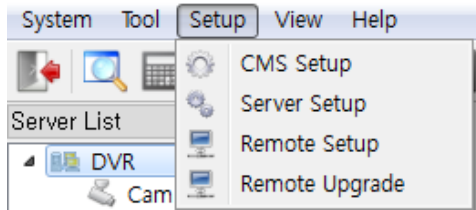

DVR setting menu

Click Setup – Server Setup button

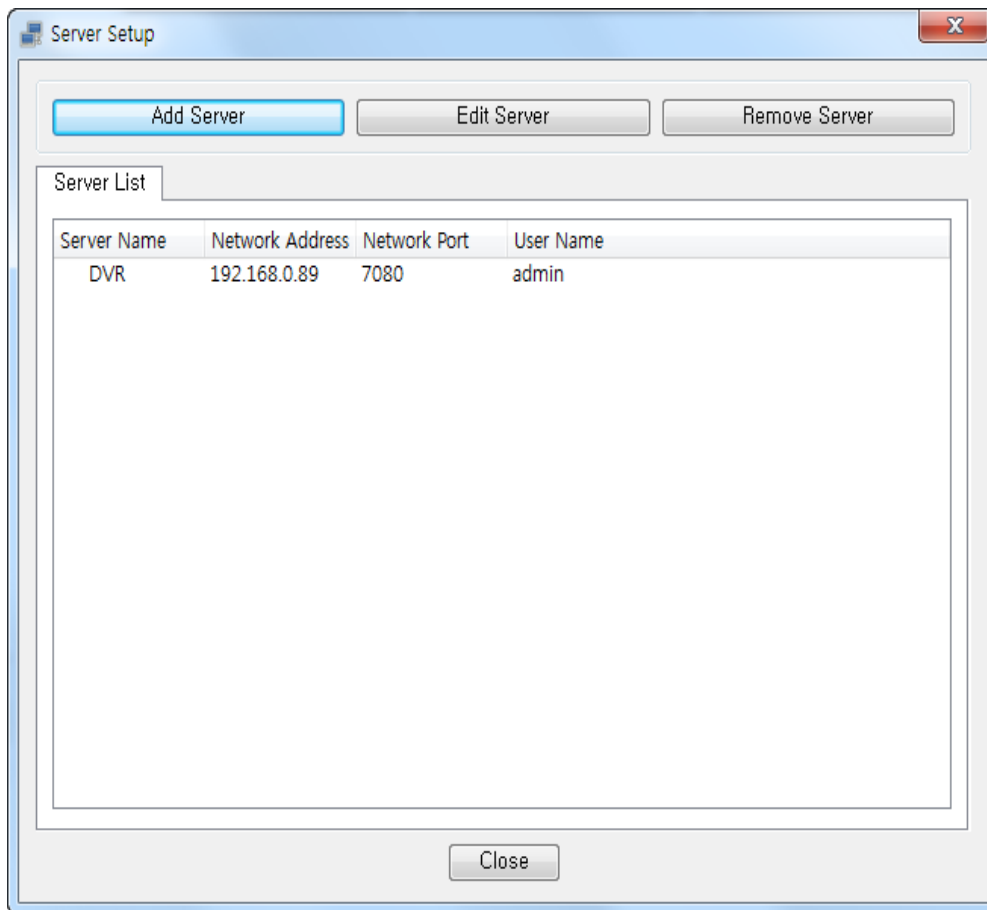

[Add Server]

- Add new DVR

Add Server

Server

Server Name:

Network Address: **Find DVR**

Network Port:

User ID:

User Password:

Camera Name

CH1	<input type="text"/>	CH9	<input type="text"/>
CH2	<input type="text"/>	CH10	<input type="text"/>
CH3	<input type="text"/>	CH11	<input type="text"/>
CH4	<input type="text"/>	CH12	<input type="text"/>
CH5	<input type="text"/>	CH13	<input type="text"/>
CH6	<input type="text"/>	CH14	<input type="text"/>
CH7	<input type="text"/>	CH15	<input type="text"/>
CH8	<input type="text"/>	CH16	<input type="text"/>

Display Option

Server Camera Text ▾

Server List Display

OK Cancel

[Server]

- **Server Name**
 - Type new DVR name

- **Network Address**
 - Enter DVR address
 - Ex)127.0.0.1, dvr.nsddns.org

- **Network Port**
 - Enter DVR port
 - Default is 7080

- **User ID**
 - Enter user ID for DVR

- **User Password**
 - Enter password for DVR

[Find DVR]

- Find all DVRs automatically under all same router

[Camera Name]


- CH1 – CH16
 - Type camera name

[Display Option]

- Select camera name to be displayed
 - Server Camera Text
 - uses camera of DVR setting
 - CMS Camera Text
 - uses camera name of CMS setting

[Server List Display]

- Apply same setting to Server list

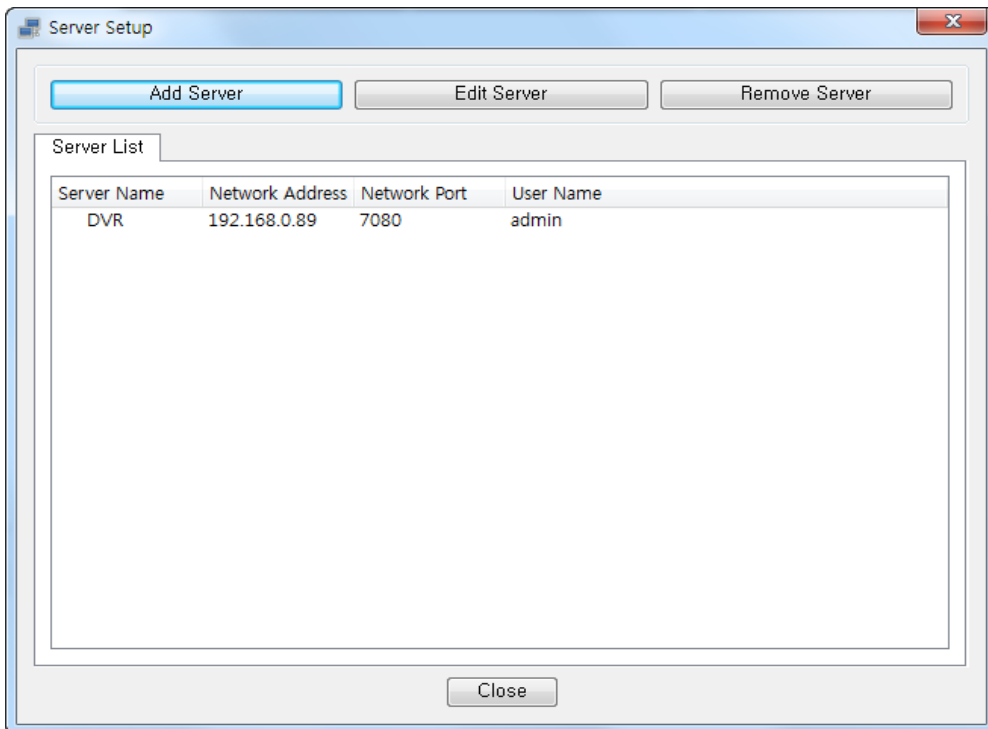


[Edit Server]

- Edit the selected setting of DVR.

[Remove Server]


- Remove the DVR selected on the list.

7.4.3 DVR Remote Setting

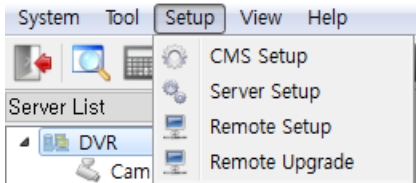


DVR Remote setting menu

Click Setup – Remote Setup button

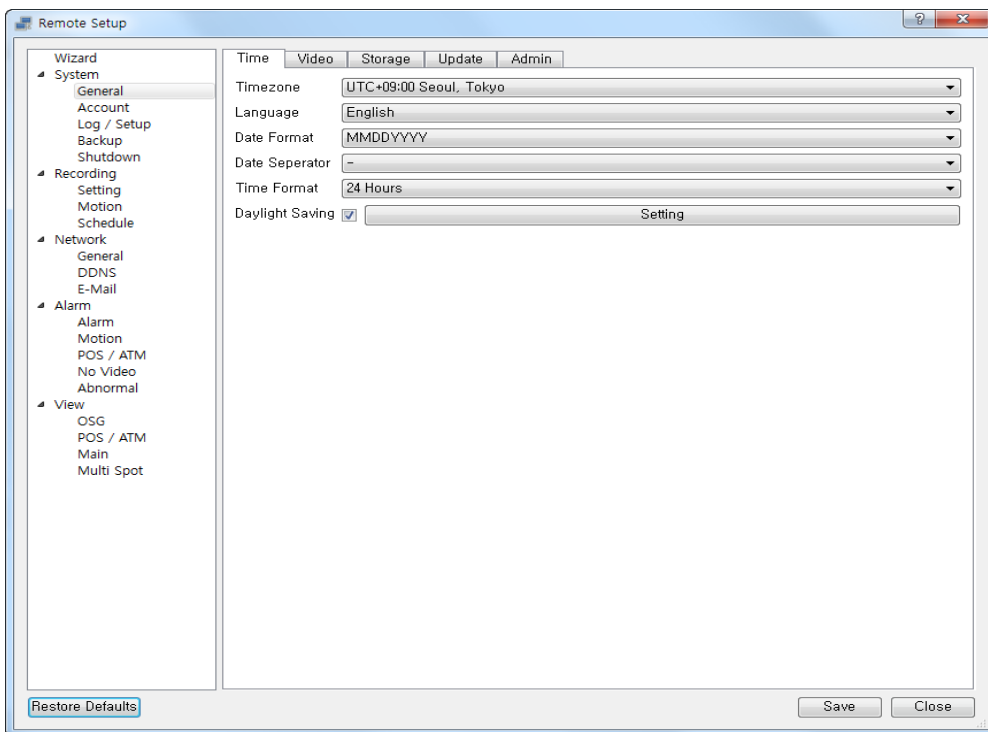


You can change DVR setting on CMS

7.4.4 Remote Upgrade

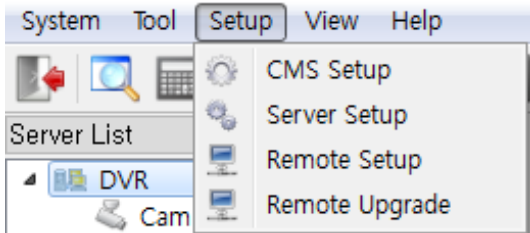


- You can upgrade DVR firmware from CMS

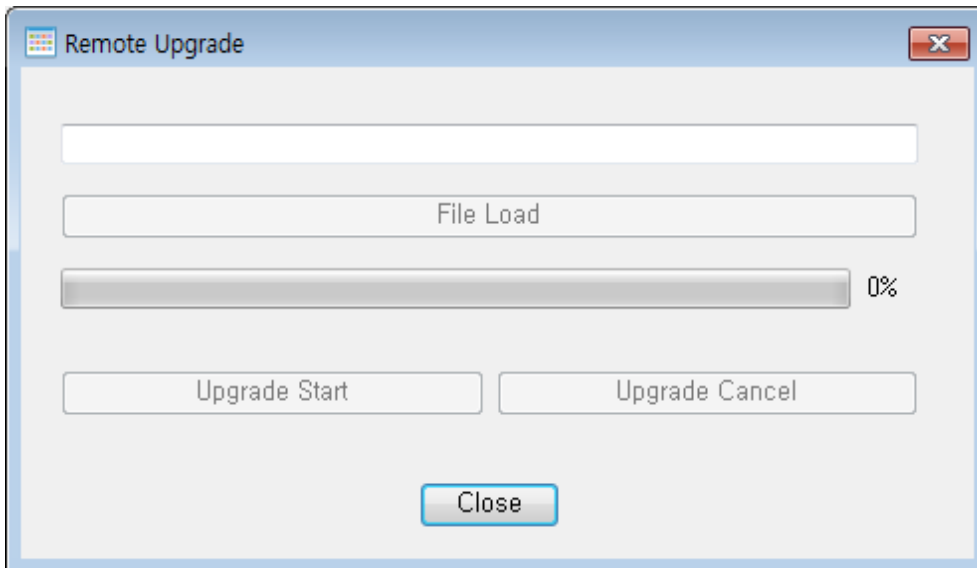

- File Load : You can select upgrade file
- Upgrade Start : Start upgrade
- Be careful network connection is not disconnected while upgrading
- DVR restarts when upgrade is finished

7.5 E-Map

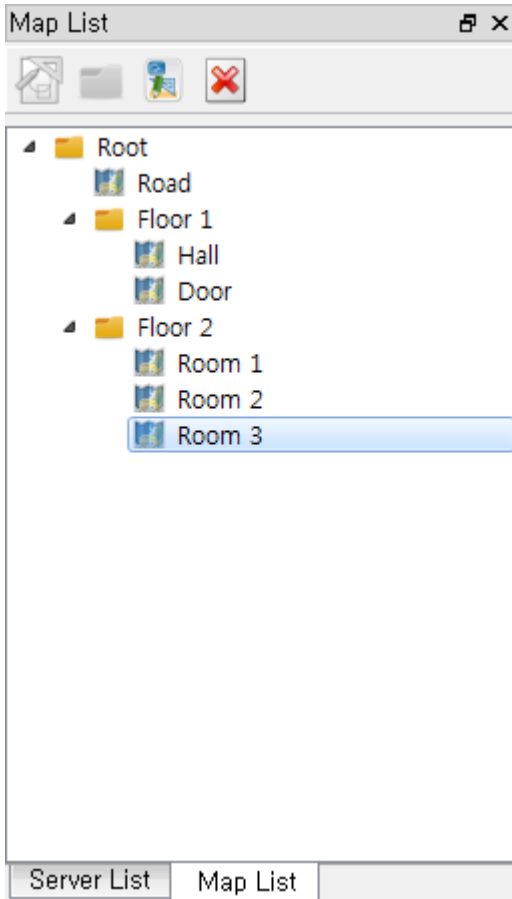

- **Create new map**
 - Create new map



- **New folder**
 - Create new folder for map
 - Each folder can contain 5 maps




- **Change map/folder name** -
Change map/folder name



- **Delete map/folder**
 - Delete map/folder

7.5.1 E-Map Menu

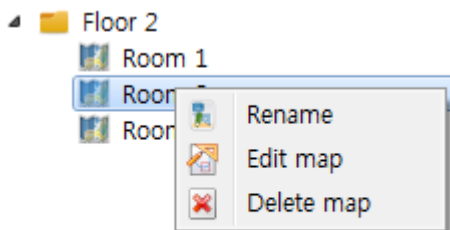

[Rename]

- Change map name


[Edit map]

- Edit map

[Delete map]

- Delete map

7.5.2 E-Map Edit

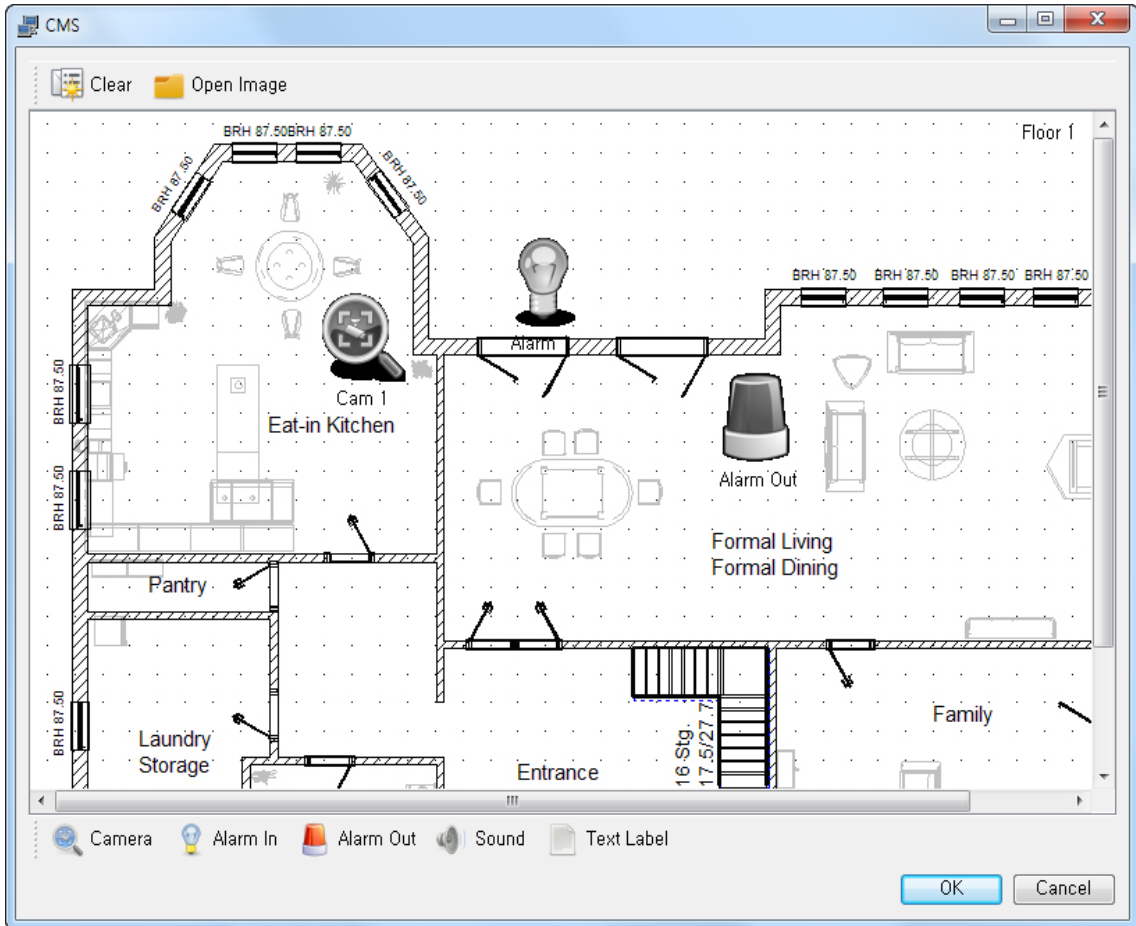

- **Initialize map**
 - Clear all the map and all items



- **Load background image**
 - Load background image



- **Camera**
 - Add camera to a map



- **Alarm In**
 - Add alarm in to a map



- **Alarm Out**
 - Add alarm out to a map




- **Speaker**
- Add speaker to a map



- **Text**
- Add text to a map

7.5.3 E-Map Item Setting

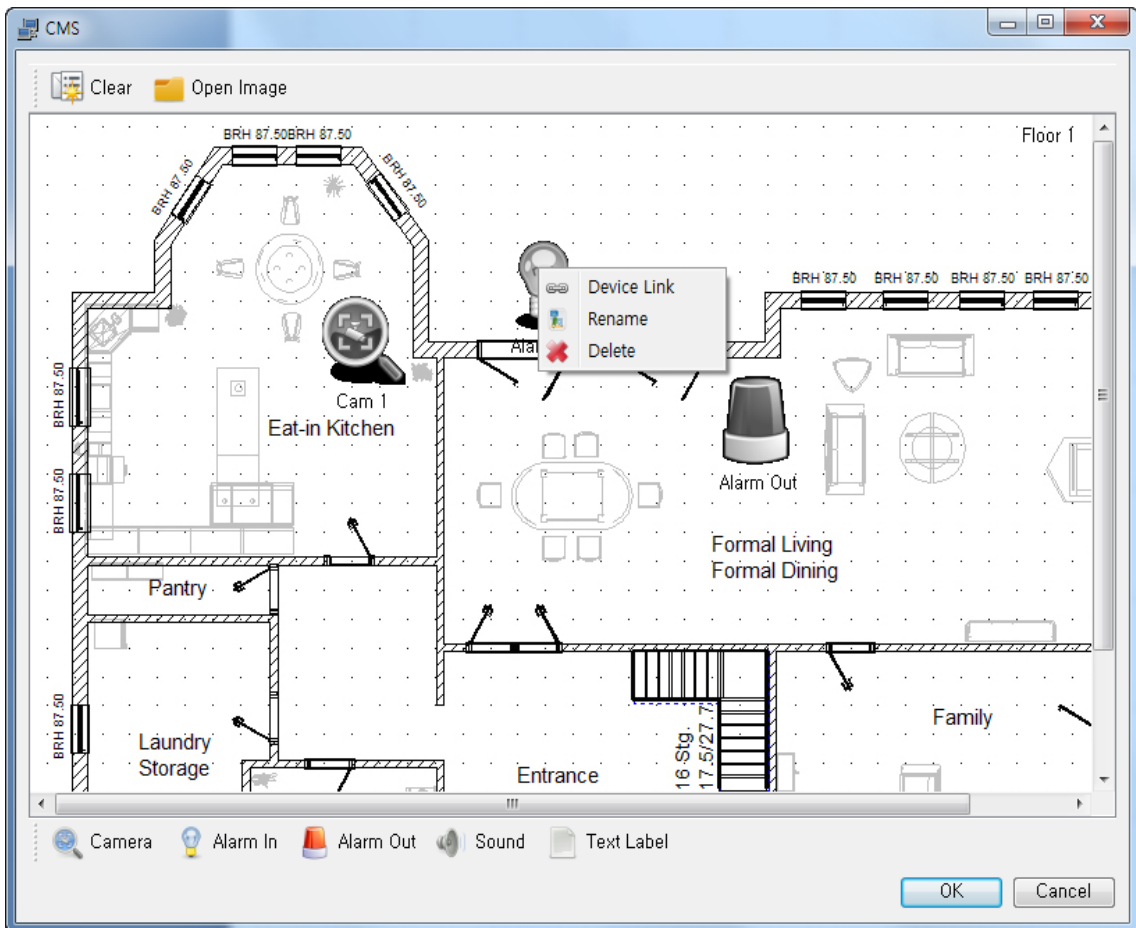

- **Connection**
- Connect DVR devices to icon of map



- **Disconnect**
- Disconnect DVR devices from map




- **Rename**
- Change Icon name



- **Delete**
- Delete Icon

7.5.3.1 E-Map Item Connection

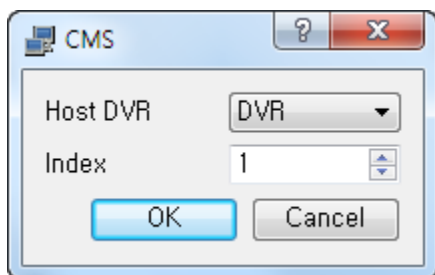

[Host DVR]

- Select DVR for device connection

[Index]

- Select device sequence number of DVR

7.5.4 Using E-Map



 
[Camera]

- Click camera icon when DVR is connected

8. Active X


8.1 Active X Connection

1. Type IP address or dns name of DVR you want to connect in iexplorer address window
2. Type additional port number if you are using a port other than 80 as HTTP port (ex. IP Address 192.168.10.25, Port number is 8010
http://192.168.10.25:8010)




2. Install Active X

 - Screen image may be different from OS version, iexplorer version



8.2 Active X Initial screen

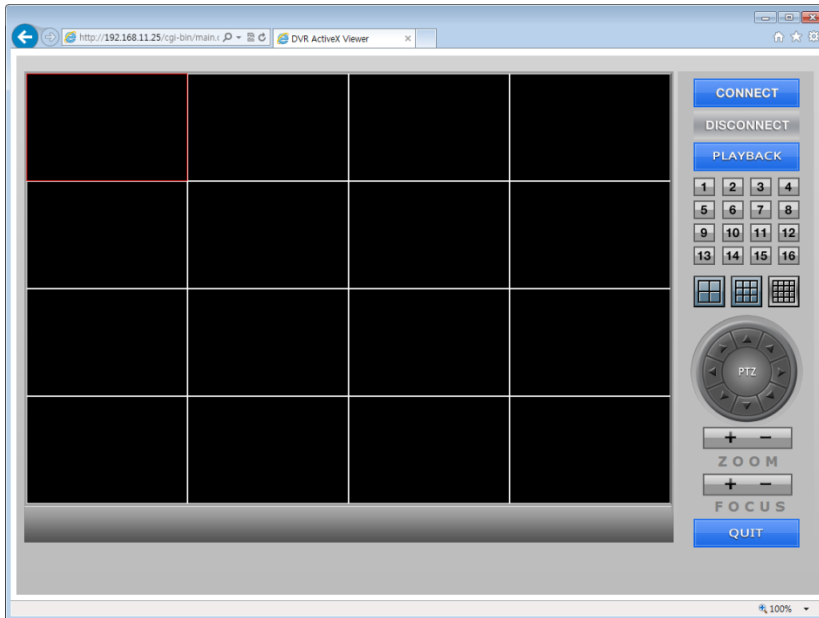

CONNECT

[CONNECT]

- Connect to DVR

DISCONNECT

[DISCONNECT]

- Disconnect DVR

PLAYBACK

[PLAYBACK]

- Change to playback mode



[1 division mode]

- Shows 1 camera selected



 
[Multi division mode]

- Shows cameras in 4 / 9 / 16 division mode




[PTZ Control]

- Control PTZ



[ZOOM]

 - Zoom In(+) / Out(-)



[FOCUS]


- FOCUS Near(+) / Far(-)

QUIT

[QUIT]

- Exit iexplorer after disconnecting

8.3 Connect

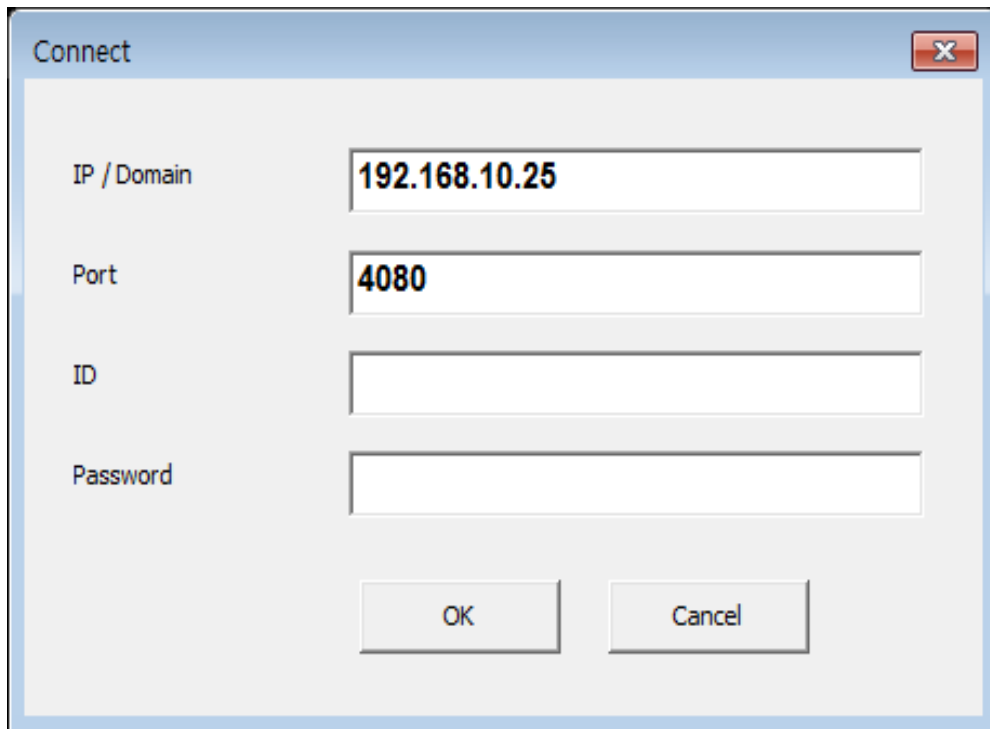

The image shows a 'Connect' dialog box with a blue title bar and a close button (X) in the top right corner. The dialog contains four input fields and two buttons. The 'IP / Domain' field contains the text '192.168.10.25'. The 'Port' field contains the text '4080'. The 'ID' and 'Password' fields are empty. At the bottom, there are two buttons labeled 'OK' and 'Cancel'.

User ID and password are required for network connection

[IP/Domain]

- Type IP address or domain name of DVR

[Port]

- Type TCP port number of DVR



[ID]

- Type id

[Password]


- Type password

8.4 LIVE

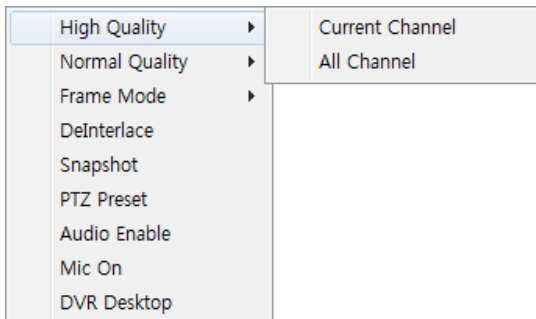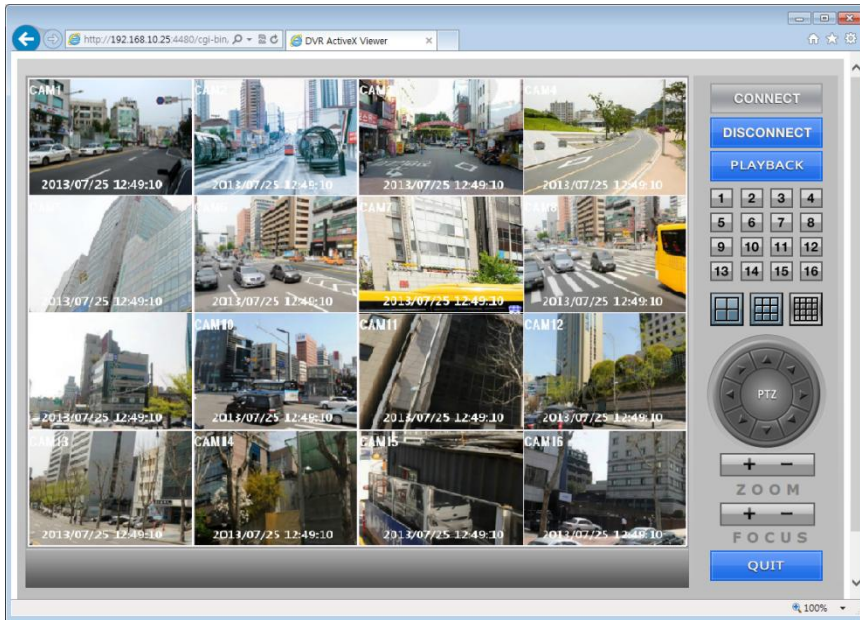


[High Quality]

- Current Channel : Change current video quality to high
- All Channel : Change all video quality to high

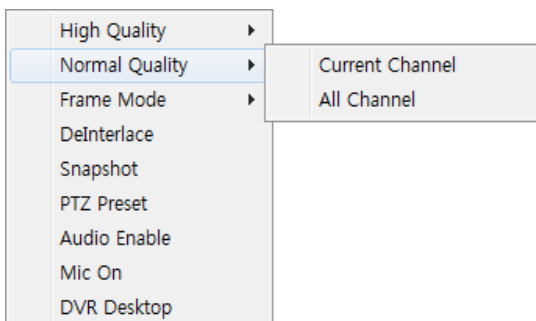


[Normal Quality]

- Current Channel : Change current video quality to normal
- All Channel : Change all video quality to normal

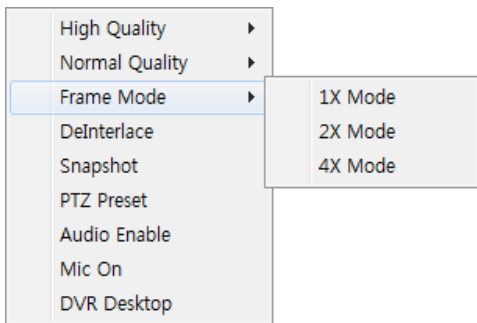

[Frame Mode]

- 1X Mode : Show as a 1X mode
- 2X Mode : Show as a 2X mode
- 4X Mode : Show as a 4X mode

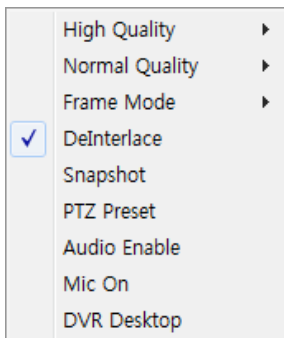

[Deinterlace]


- Deinterlace Enable/Disable

[Snapshot]

- Save screen snapshot

[PTZ Preset]

- Set : Save current position to preset Number
- Go to : Go to preset Number
- Preset No. : Range is 1 ~ 99

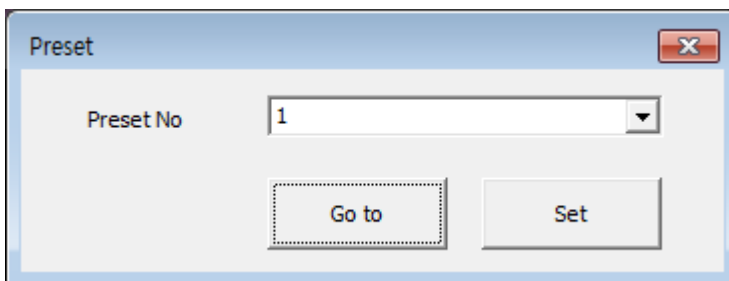

[Audio Enable]

- Audio output Enable/Disable

[Audio Enable]

- Audio output Enable/Disable


[MIC ON, OFF]

- Turn On/Off Two-way audio

[DVR Remote Desktop]

- You can control DVR remotely while you see DVR screen
- Some DVR models do not show camera

8.5 PLAYBACK

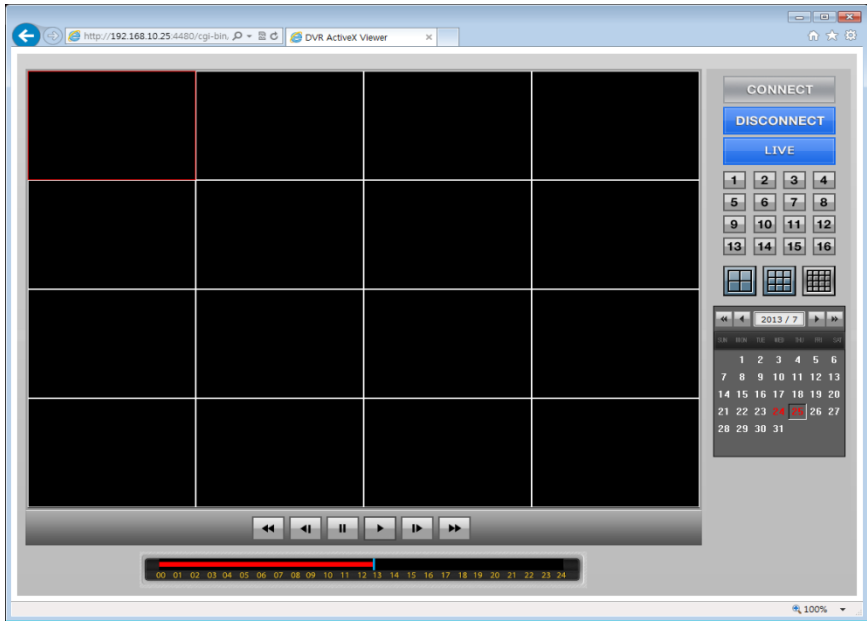

[DISCONNECT]

- Disconnect connection



[LIVE]

- Go to LIVE screen mode




[1 division mode]

- Shows 1 camera selected



[Multi division mode]

- Shows multiple cameras in a 4 / 9 / 16 division screen mode

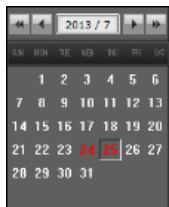

[Calendar]

- Shows the dates video recorded
- The recorded dates is displayed in red



[Month search]

- Month moves forward or backward by a month



[Year search]

- Year moves forward or backward by a year

**[Rewind]**

- Rewind

**[1 Frame backward]**

- 1Frame backward

**[Pause]**

- Pause

**[Play]**

 
- Play

**[1Frame forward]**


- 1 Frame forward

**[Fast forward]**

- Fast Forward

**[Timebar]**

- Shows the time recorded in red

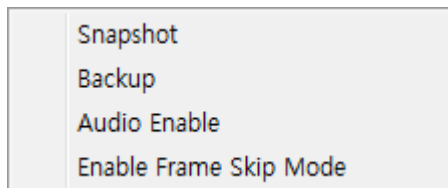**[Snapshot]**

- Save screen snapshot
- BMP / JPG / PNG supported

[Backup]

- Backup video as a AVI format


[Audio Enable]

- Audio output Enable / Disable

[Enable Frame Skip Mode]

- Frame Skip Mode Enable / Disable

8.6 Backup

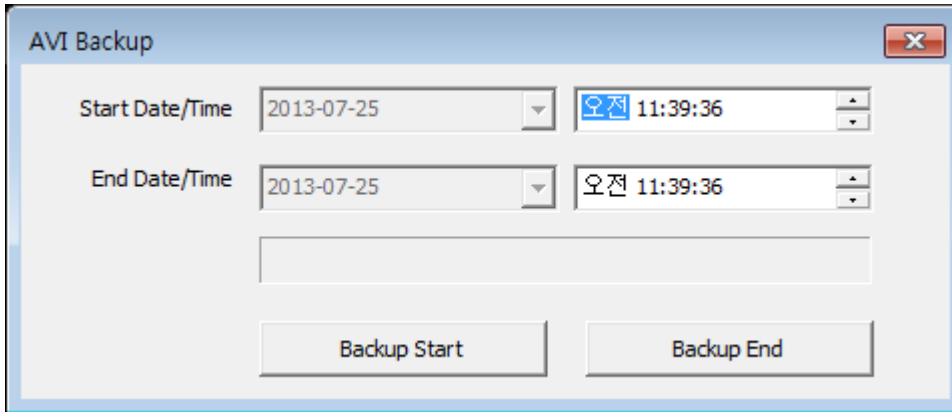

[Backup]

- Start Date/Time : Set start time of backup
- End Date/Time : Set end time of backup
- Backup Start : Starts backup as a AVI format
 - File location and name are displayed when backup begins
- Backup End : Exit backup

9. Mobile Viewer

9.1 Download Mobile Viewer

1. iPhone


- 1-1. Run Apple app store
- 1-2. Search 'T DVR Viewer'
- 1-3. Select 'T DVR Viewer' from list
- 1-4. Install app

2. Android

- 1-1. Run Google Play on users android os smartphone
- 1-2. Search 'T DVR Viewer'
- 1-3. Select 'T DVR Viewer' and install



9.2 Android / iPhone

9.2.1 Beginning

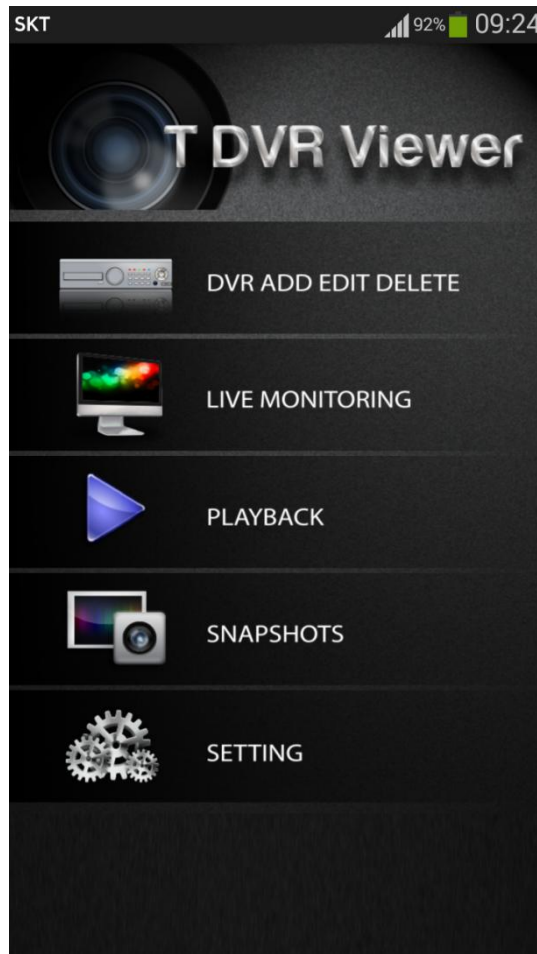

- DVR ADD / EDIT / DELETE
 - You can add / edit / delete DVR list
- LIVE MONITORING
 - Live monitoring of DVR registered
 - PTZ control / Alarm Out control
 - Snapshot
 - Up to 16 split screen mode
- PLAYBACK
 - Playback recorded data
 - Snapshot
 - Up to 16 split screen mode
- SNAPSHOTS
 - View Snapshots
- SETTING
 - Version / Quality Setting / Manual

 9.2.2 DVR Add / Edit / Delete

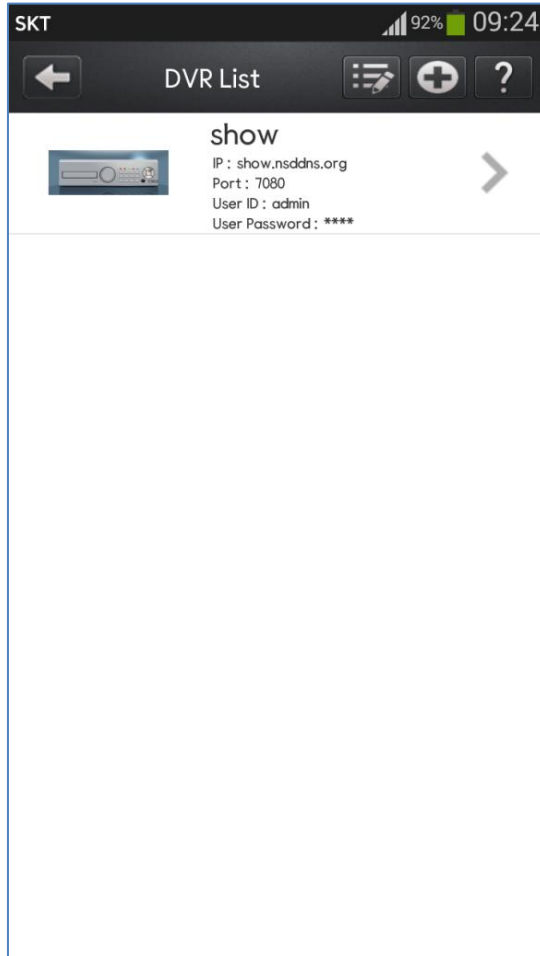

- **DVR Add**
- Add new DVR



- **DVR Edit**
- Edit DVR list



- **DVR Delete**
- Delete DVR list



- **Help**
- View manual

9.2.2.1 DVR Add / Edit

SKT 92% 09:24

← Add New DVR

DVR Name

IP Address Port

7080

User ID

admin

User Password

Save Back

SKT 92% 09:24

← Modify DVR

DVR Name

show

IP Address Port

show.nsddns.org 7080

User ID

admin

User Password



....

Save Back

[Add/Edit mode]

- DVR Name
 - DVR list name
- IP Address
 - IP Address or domain name of DVR
- Port
 - Enter DVR port number(Default is 7080)
 - Enter TCP port of DVR
- User ID
 - Enter one of users of DVR
- User Password
 - Password

9.2.2.2 DVR Delete


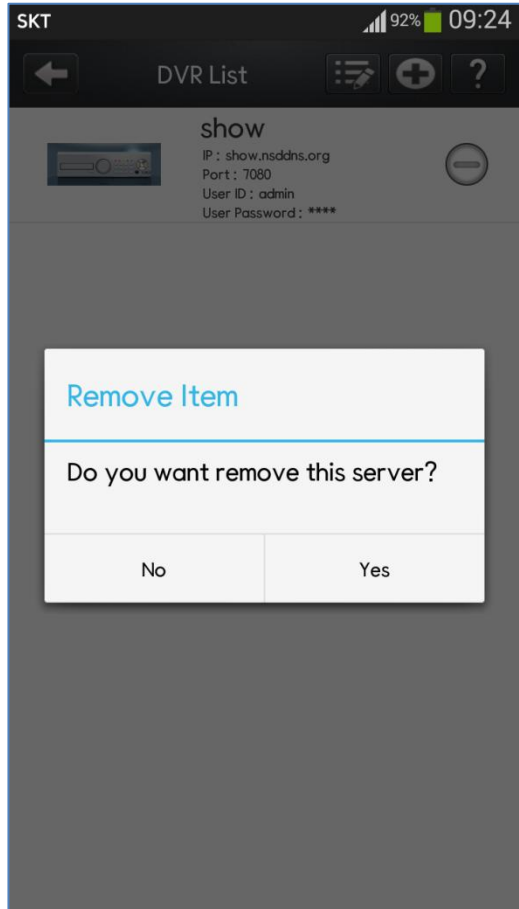
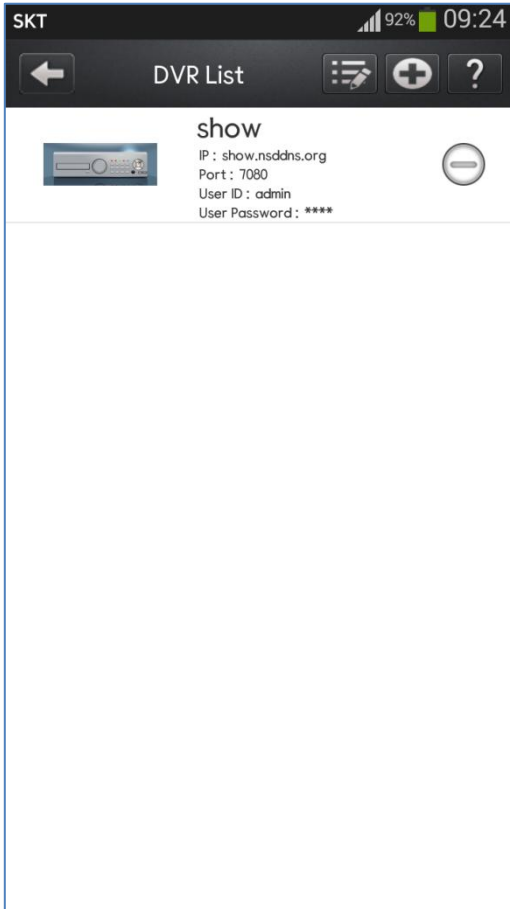


- **Enter into deletion mode**
 - You can delete list or move list up/down



- **DVR Delete**
 - Delete list

 9.2.3 LIVE MONITORING

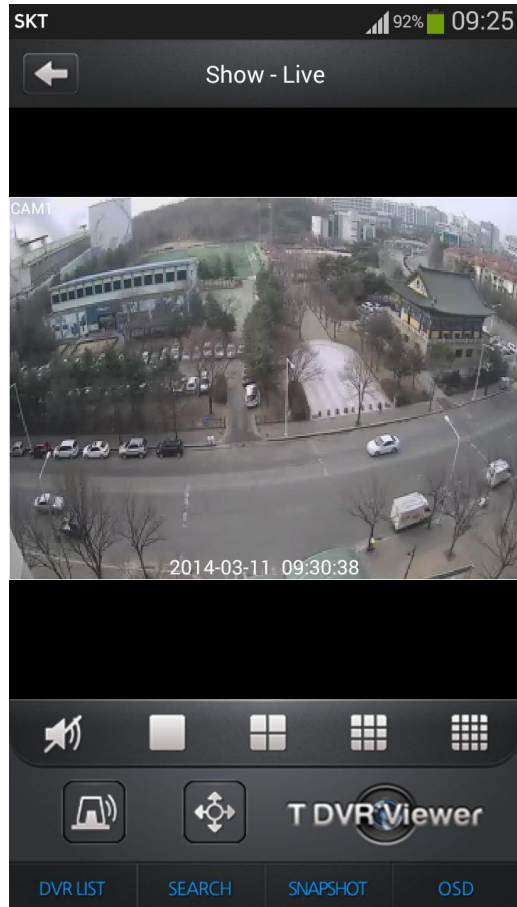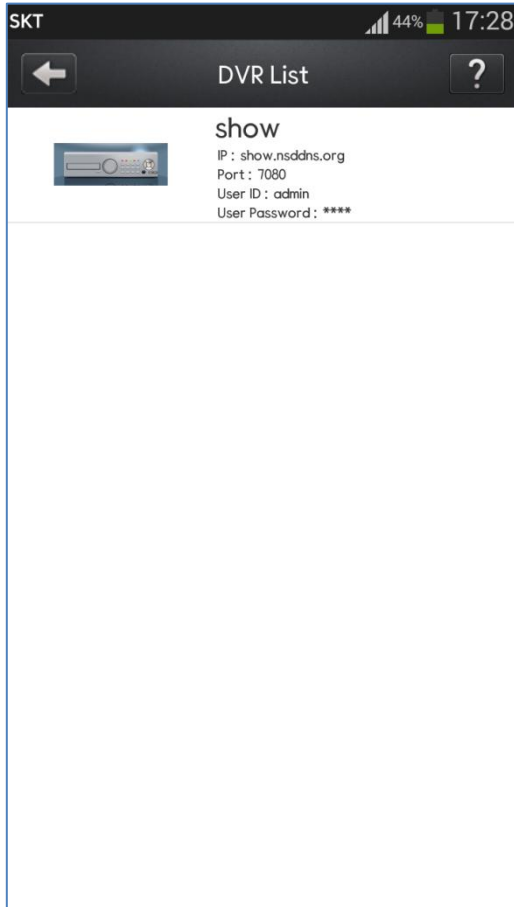

- **Audio**
 - Turn On/Off audio



- **1 division mode**
 - Change the screen into 1 division mode
 - Next camera is selected when you click again




- **4 division mode**
 - Change the screen into 4 division mode
 - Next 4 division is selected when you click again



- **9 division mode**
 - Change the screen into 9 division mode
 - Next 9 division is selected when you click again



- **16 division mode**
 - Change the screen into 16 division mode

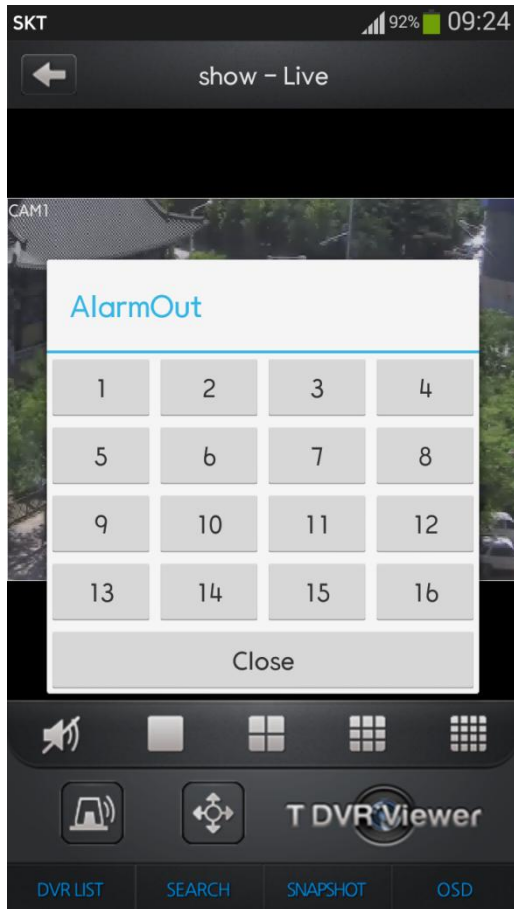

- **Alarm Out**
- Turn On/Off Alarm out



- **PTZ mode**
- Control PTZ
- Up / Down / Left / Right / Zoom In / Zoom Out

DVR LIST

- **DVR LIST**
- Show DVR list

SEARCH

- **SEARCH**
- Enter into Search mode



 
SNAPSHOT

- **SNAPSHOT**
- Take a snapshot

OSD




- **OSD**
- Turn On/Off OSD

9.2.4 PLAYBACK

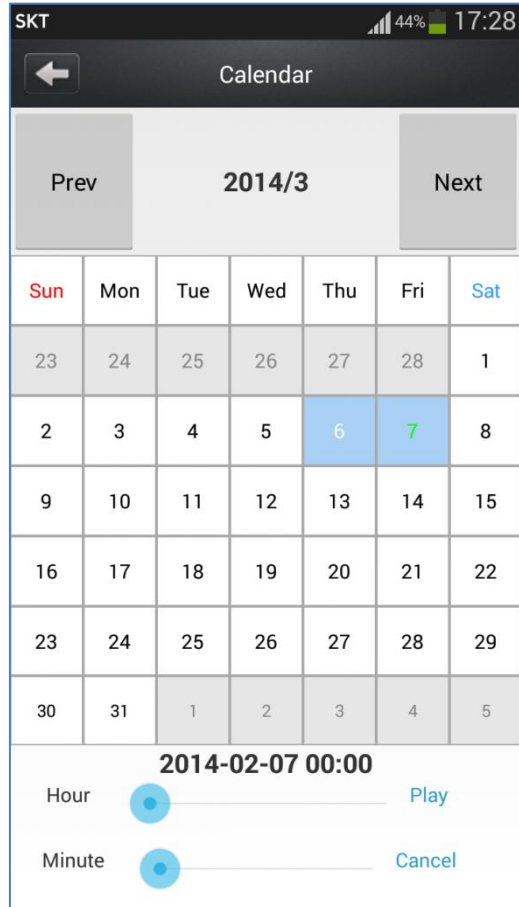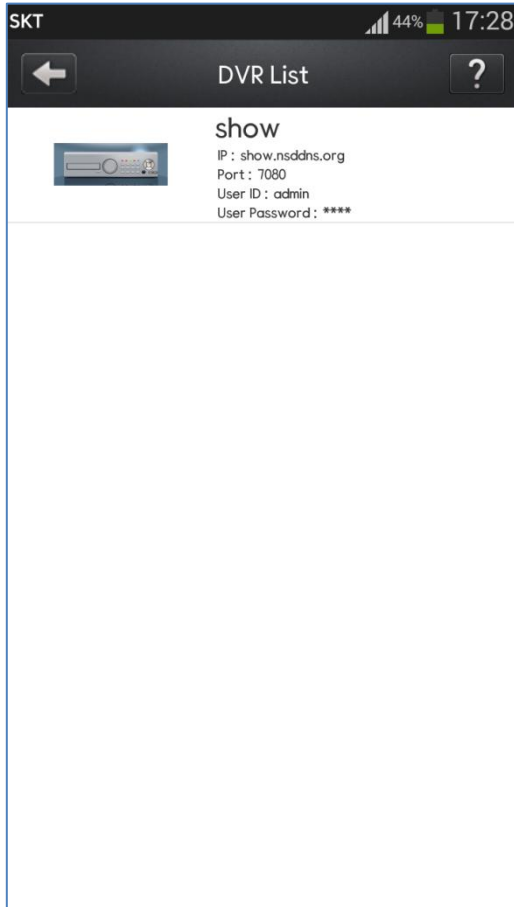



- Playback
 - Click DVR you want to search from DVR List
 - Click Play button after selecting date & time

 9.2.5 SNAPSHOTS

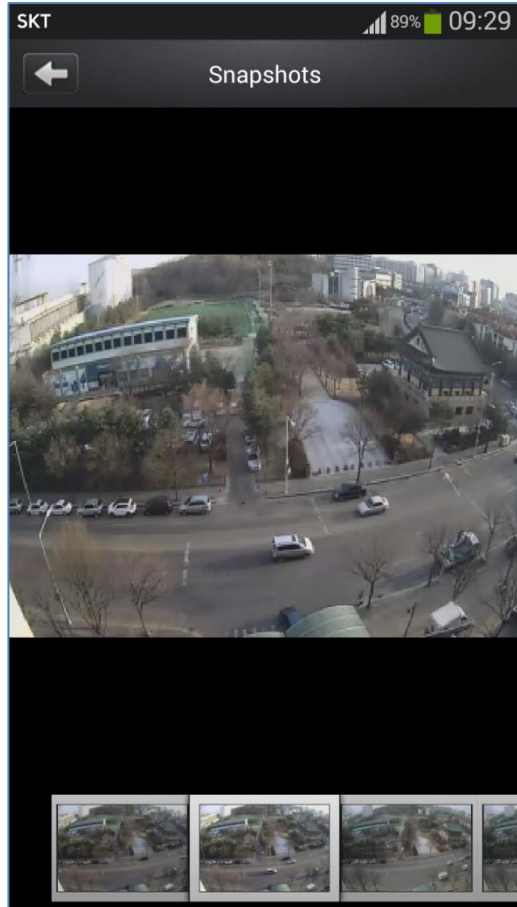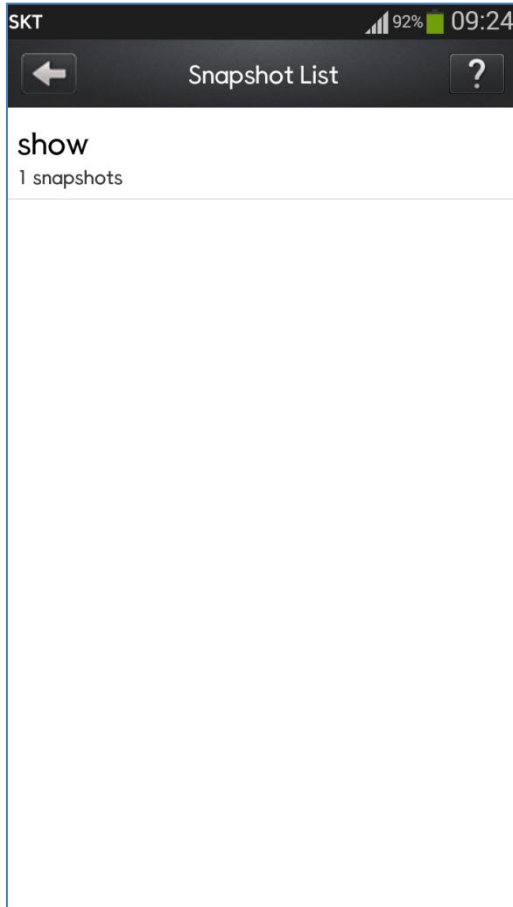

- Snapshot
 - Select snapshot list on the bottom
 - You can zoom in / out by finger

 9.2.6 SETTING

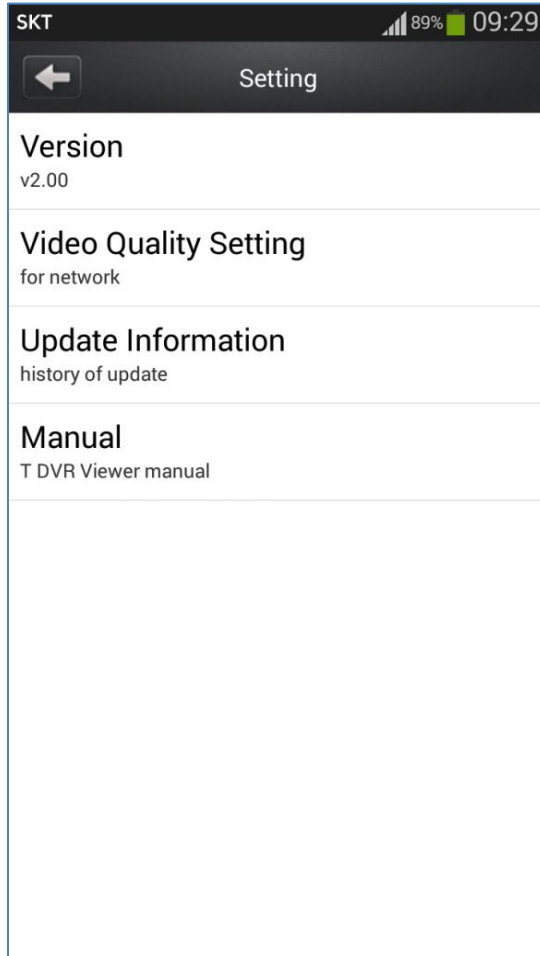

[Version]

- Current version

[Video Quality Setting]

- You can set video quality when connect to the DVR

[Update Information]

- Update information

[Manual]

- T DVR Viewer manual